

PHILIPS

Air purifier

AC0921



English 3
繁體中文 21

Important

Read this user manual carefully before you use the appliance, and save it for future reference.

Danger

- Do not clean the appliance with water, any other liquid, or a (flammable) detergent, nor let them enter the appliance, to avoid electric shock and/or a fire hazard.
- Do not spray any flammable materials such as insecticides or fragrance around the appliance.

Warning

- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect the appliance.
- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the adaptor, the power cord, or the appliance itself is damaged.
- Only to be used together with the adaptor provided with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and maintenance shall not be made by children without supervision.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.
- Make sure that foreign objects do not fall into the appliance through the air outlet.

Caution

- We recommend people who are allergic to dust, pollen, pets or mold, not to replace filters by themselves or to take protective measures, such as mask and gloves. This appliance is not a substitute for proper ventilation, regular vacuum cleaning, or use of an extractor hood or fan while cooking.
- Always place and use the appliance on a dry, stable, level, and horizontal surface.
- Leave at least 20cm free space around the appliance and leave at least 30cm free space above the appliance.
- Do not sit or stand on the appliance. Do not place anything on top of the appliance.

- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Only use the original Philips filters specially intended for this appliance. Do not use any other filters.
- Combustion of the filter may cause irreversible human hazard and/or jeopardize other lives. Do not use the filter as fuel or for similar purpose.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Do not insert your fingers or objects into the air outlet or the air inlet to prevent physical injury or malfunctioning of the appliance.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Always unplug the appliance when you want to move, clean appliance, replace the filter or carry out other maintenance.
- The appliance is only intended for household use under normal operating conditions.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, or in a room with major temperature changes.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used as a safety device in case of accidents with combustion processes and hazardous chemicals.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

 
The filter units are non-washable and non-recyclable, dispose of used filter units in accordance with local regulations.

Your air purifier

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at [**www.philips.com/support**](http://www.philips.com/support).

Product overview

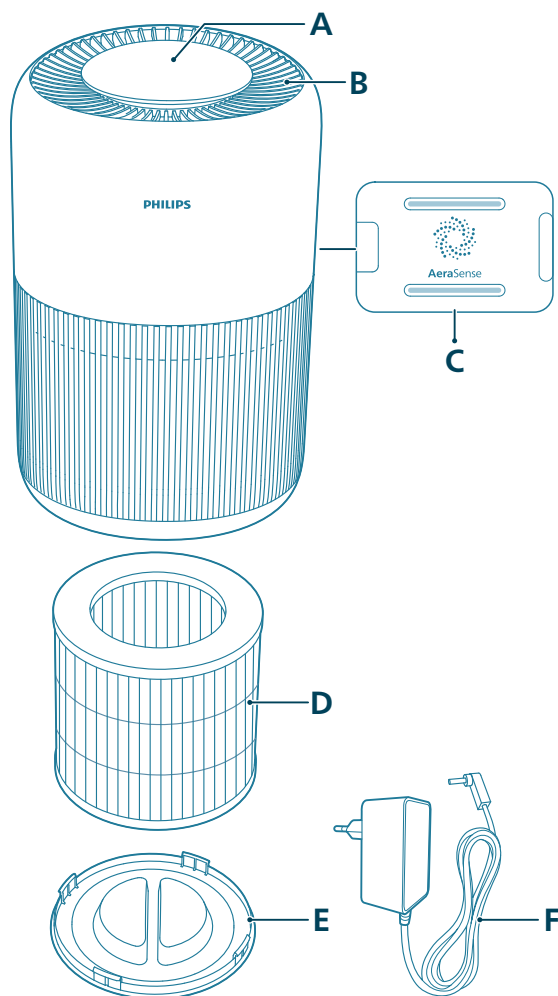

A Control panel

B Air outlet

C Air quality sensor

D Filter (FY0900)

E Base

F Adapter (KA2401A-2401000TW)

Controls overview



Control buttons:

	Power on/off button		Light on/off button
	Mode switch button		

Long press the button(s) for 3 seconds:

	Child lock		Filter reset
---	------------	---	--------------

Display panel:


	Auto mode		Medium mode
	Sleep mode		Turbo mode
	Child lock indicator		Filter cleaning alert
	Filter replacement alert		

Getting started


Installing the filter

Remove all packaging of the filter before use.

 
Note: Make sure the air purifier is unplugged from the electrical outlet before installing the filter.

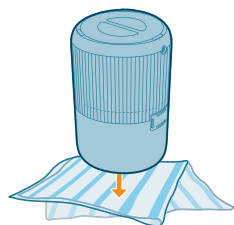

 
- 1 Turn the appliance upside down and place it on a soft cloth.

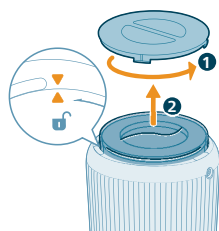

 - 2 Rotate the base anti-clockwise to remove it from the appliance. Pull the filter out from the appliance.

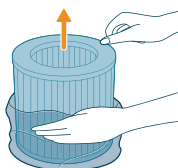

 
- 3 Remove all packaging materials of the air purification filter.

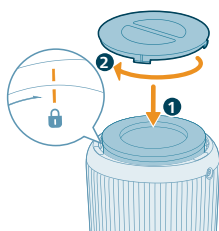

- 4 Put the filter back into the appliance. Reattach the base and rotate it clockwise to fasten the base.

Connecting power

 CAUTION: Risk of electric shock! When you unplug the adaptor, always pull the plug from the socket. Never pull the cord.

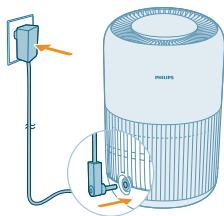

Connect the power adapter to:

- First, the power adapter on the appliance.
- Then, the wall outlet.

Using the air purifier

Understanding the air quality light

The air quality light automatically goes on when the air purifier is switched on, and lights up all colors in sequence. After approximately 30 seconds, the particle sensor selects the color that corresponds to the surrounding air quality of airborne particles.

The color of the air quality light is determined by the PM2.5 reading.

PM2.5

AeraSense sensing technology accurately detects and quickly responds to even the slightest particle change in the air. It provides you with reassurance with real-time PM2.5 feedback.

Most of the indoor air pollutants fall under PM2.5 – which refers to airborne particle pollutants smaller than 2.5 micrometers. Common indoor sources of fine particles are tobacco smoke, cooking, burning candles. Some airborne bacteria and the smallest mold spores, pet allergen and dust mite allergen particles also fall under PM2.5.

PM2.5 level	Air quality color	Air quality level
≤12	Blue	Good
13-35	Blue-purple	Fair
36-55	Purple-red	Poor
>55	Red	Very poor

 
Turning on and off

Note:

For optimum purification performance, close doors and windows.

Keep curtains away from the air inlet or air outlet.

- 1 Put the plug of the air purifier in the power socket.

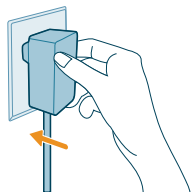

- 2 Press the power button to switch on the air purifier.

- The air purifier beeps.
- The **---** displays on the screen during warming up. Then the air purifier shows the PM2.5 level after measuring the air quality.
- The air purifier operates in the Auto mode with PM2.5 displayed on the screen.

 
- 3 Press the power button again to switch off the air purifier.

Note: If the air purifier stays connected to the electrical outlet after turning OFF, the air purifier will operate under the previous settings when turned ON again.

Changing the mode setting

You can choose the **Auto mode**, the **Medium mode**, the **Turbo mode**, or the **Sleep mode** by pressing the mode switch button.

Auto mode (Ⓐ): The air purifier automatically adjusts the fan speed in accordance with the ambient air quality.

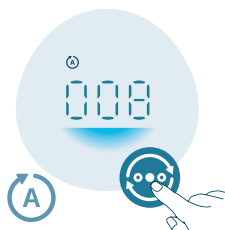


Medium mode (Ⓜ): In the Medium mode, the air purifier operates on a medium speed.





 Turbo mode (🌀): The air purifier operates on the highest speed.

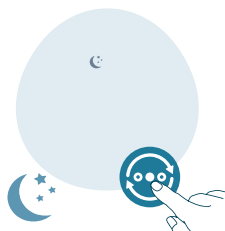


Sleep mode (🌙): The air purifier operates quietly at a low speed. After 3 seconds, the display lights turn off.

Using the light on/off function


You can press the light on/off button to turn on, dim or turn off all lights and the control panel.

 - The control panel is turned on.

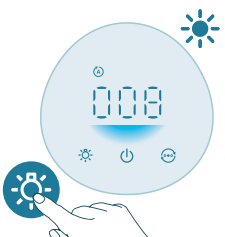

- The control panel is dimmed.



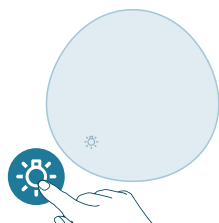 

- The control panel is turned off.

Setting the child lock



- 1 Press the  button for 3 seconds to activate the child lock.
 - The  displays on the screen.



- 2 Press the  button for 3 seconds again to deactivate the child lock.
 - The  disappears from the screen.

Cleaning and maintenance

Note:

Always unplug the appliance before you clean it.

Never immerse the appliance in water or any other liquid.

Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.

Never use any liquids (including water) to clean the filter.

Do not attempt to clean the air quality sensor with a vacuum cleaner.

Cleaning schedule

Frequency	Cleaning method
When necessary	Wipe the plastic part of the appliance with a soft, dry cloth
	Clean the air outlet cover
Every two months	Clean the particle sensor with a dry cotton swab
 displays on the screen	Clean the surface of the filter

Cleaning the body of the air purifier

Regularly clean the inside and outside of the air purifier to prevent dust from collecting.

 
- 1 Use a soft, dry cloth to clean both the interior and exterior of the air purifier.
- 2 The air outlet can also be cleaned with a dry, soft cloth.

Cleaning the particle sensor


Clean the air quality sensor every 2 months for optimal functioning of the appliance.

If the air purifier is used in a dusty environment, it may need to be cleaned more often.


If the humidity level in the room is very high, condensation may develop on the particle sensor and the air quality light may indicate a more poor air quality even though the air quality is actually good. If this occurs, clean the air quality sensor.

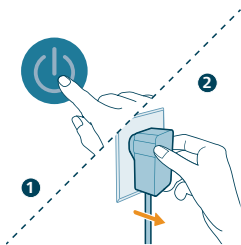

 
- 1 Switch off the air purifier and unplug from the power socket.

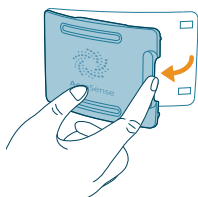

- 2 Open the air quality sensor cover.

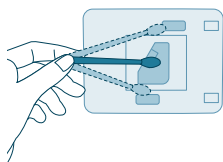 

 - 3 Clean the particle sensor with a damp cotton swab.
- 4 Dry all parts thoroughly with a dry cotton swab.

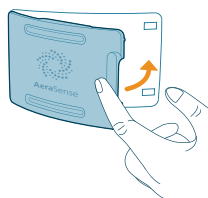


- 5 Close the air quality sensor.


Cleaning the surface of the filter

When the filter cleaning alert  displays on the screen, clean the surface of the filters with a vacuum cleaner.

 
Note: We recommend people who are allergic to dust, pollen, pets or mold, not to replace filters by themselves or to take protective measures, such as wearing a mask and gloves.

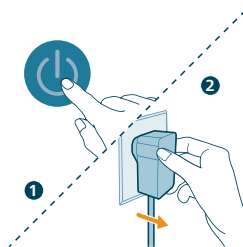

 
- 1 Switch off the air purifier and unplug from the power socket.

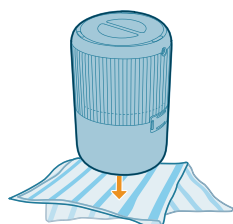

 
- 2 Turn the appliance upside down and place it on a soft cloth.

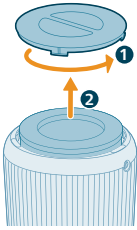

 
- 3** Rotate the base anti-clockwise to remove it from the appliance. Pull the filter out from the appliance.

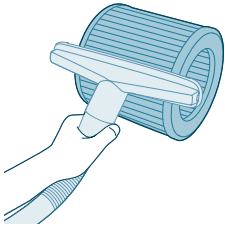

 
- 4** Clean the surface of the filters with a vacuum cleaner.

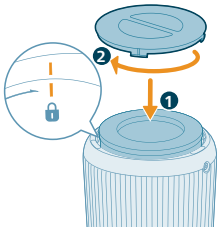

 - 5** Put the filter back into the appliance. Reattach the base and rotate it clockwise to fasten the base.

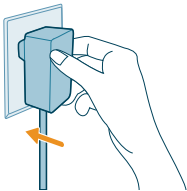

 - 6** Put the adapter of the air purifier in the power socket.

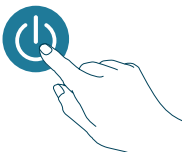

- 7** Press the  button to switch on the appliance.



- 8 Press and hold the ☀ and 😊 button for 3 seconds to reset the filter cleaning time.
- After the reset is successful, the filter cleaning alert disappears from the screen.



- 9 Wash your hands thoroughly after cleaning the filters.

Replacing the filter

Understanding the healthy air protect lock

This air purifier is equipped with a filter replacement indicator to make sure that the air purification filter is in optimal condition when the air purifier is operating. When the filter needs to be replaced, the filter replacement alert 🗑 lights up red. If the filter is not replaced in time, the air purifier will stop operating and automatically lock to protect the air quality in the room. Replace the filter as soon as possible.

Replacing the filter

Note:

 
The filter is not washable or reusable.

Always turn off the air purifier and unplug from the electrical outlet before replacing the filter.

When the filter replacement alert 🗑 displays on the screen, replace the filter (FY0900).

Note: We recommend people who are allergic to dust, pollen, pets or mold, not to replace filters by themselves or to take protective measures, such as wearing a mask and gloves.




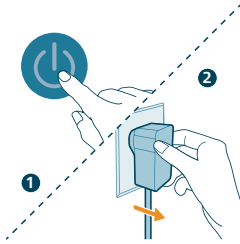


1 Switch off the air purifier and unplug from the power socket.



 
2 Turn the appliance upside down and place it on a soft cloth.

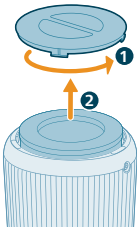

 3 Rotate the base anti-clockwise to remove it from the appliance. Pull the filter out from the appliance. Discard the used filter.

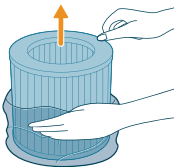


 4 Remove all packaging materials of the new filters.

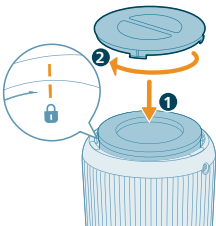


5 Put the new filter back into the appliance. Reattach the base and rotate it clockwise to fasten the base.

 - 6 Put the adapter of the air purifier in the power socket.

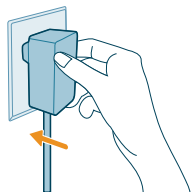

 - 7 Press the  button to switch on the appliance.

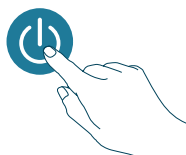

- 8 Press and hold the  and  button for 3 seconds to reset the filter lifetime counter.
- After the reset is successful, the filter replacement alert disappears from the screen.



 
- 9 Wash your hands thoroughly after replacing the filter.



Note: Do not smell the filter as it has collected pollutants from the air.


Filter reset

You can replace the filters even before filter replacement alert () displays on the screen. After replacing filters, you need to reset the filter lifetime counter manually.

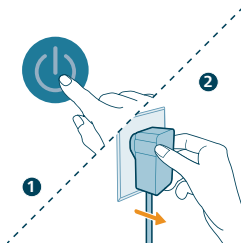

1 Press the  button to turn off the appliance. Unplug the appliance.

 2 Make sure the appliance is completely unplugged, and then put the power adapter in the power socket.

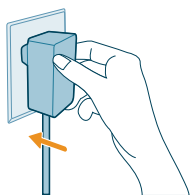

3 Within 15 seconds after power on, press and hold the  and  button for 3 seconds to reset the filter lifetime counter.



Storage

- 1 Turn off the air purifier and unplug from the power socket.
- 2 Clean the air purifier and the surface of the filter (see Chapter "**Cleaning and Maintenance**").
- 3 Let all parts air dry thoroughly before storing.
- 4 Wrap the filter in air tight plastic bags.
- 5 Store the air purifier, filter in a cool, dry location.
- 6 Always thoroughly wash hands after handling filter.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem

Possible solution

The appliance does not work properly.	The filter replacement alert is on but you have not replaced the corresponding filter. As a result, the appliance is now locked. In this case, replace the filter and reset the filter lifetime counter.
The airflow that comes out of the air outlet is significantly weaker than before.	The surface of the filter is dirty. Clean the surface of the filter (see Chapter 'Cleaning and maintenance').
The air quality does not improve, even though the appliance has been operating for a long time.	Check if the packing material is removed from the filter.
	Make sure that the filter (FY0900) is properly installed.
	Room size is large or the outdoor air quality is poor. For optimum purification performance, please close the doors and windows when operating the air purifier.
	There are indoor pollution resources. For instances, smoking, cooking, incense.
	Filters reach the end of life. Replace the filter with a new one.
The appliance produces a strange smell.	The first few times you use the appliance, it may produce a plastic smell. This is normal. However, if the appliance produces a burnt smell even if removing the filter, contact your Philips dealer or an authorized Philips service center. The filter may produce smell after being used for a while because of the absorption of indoor gases. It's recommended that you put the filter in a well-ventilated place for a couple of hours to reduce the smell.
The appliance is extra loud.	It's normal if the appliance runs at the Turbo mode.
	In Auto mode, the appliance will run in higher speed when the air quality is poor. When using the appliance in a bedroom at night, choose the Sleep mode.
	If anything drops into air outlet, it may also cause abnormal loud sounds. Immediate turn off appliance, and get foreign objectives out of appliance.
	If there is abnormal sound, contact the Consumer Care Center in your country.
The appliance still indicates that I need to replace filter, but I already did.	Perhaps you did not reset the filter lifetime counter. Switch on the appliance. Then touch and hold the  and  simultaneously for 3 seconds.
Error code "E1" displays on the screen.	The motor has malfunctions. Contact the Consumer Care Center in your country.

Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website **www.home.id/warranty**.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit **www.philips.com/support**.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country.

重要事項

在使用本產品前，請先仔細閱讀本使用手冊，並保留使用手冊以供日後參考。

危險事項

- 請勿用水、其他液體或是 (易燃) 清潔劑清潔產品，也請勿讓該物質進入產品內，以避免觸電和/或火災。
- 請勿在產品周圍噴灑殺蟲劑或芳香劑等任何易燃物質。

警告

- 插電之前請先確認產品標示的電壓是否與當地使用的電壓相符。
- 如果電源線損壞，您必須將其交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師進行更換，以免發生危險。
- 當變壓器/電源供應器、電源線或產品本身受損時，請勿使用本產品。
- 僅限搭配產品隨附的變壓器/電源供應器一起使用。
- 本產品可供 8 歲以上孩童及身體、知覺或精神能力障礙者或經驗與知識缺乏者使用，但需向他們提供安全使用產品相關的監督或指示說明，且他們必須瞭解可能發生的危險。
- 請勿讓孩童把玩產品。
- 若無人在旁監督，不得讓孩童清潔與維護本產品。
- 請勿在出風口上方或進風口前面放置物品，擋住進出風口。
- 請確認沒有異物透過出風口掉入產品。

注意

- 本產品不可用來作為維持良好通風的設備、替代吸塵器清潔，或烹調時用來當作抽油煙機使用。
- 請一律將本產品放置在乾燥平穩的水平面上使用。
- 產品周圍須至少保留 20 公分的間隔距離，頂部則至少保留 30 公分的間隔距離。
- 請勿坐在或站在產品上。產品頂部請勿放置任何物品。
- 請勿將產品放置在冷氣機正下方，以免冷氣機滴水，造成產品發生水滴凝結的現象。
- 請僅使用產品專用的飛利浦原廠濾網。請勿使用其他濾網。
- 燃燒濾網可能會對人體造成不可逆危險和/或危及其他生命。請勿將濾網當成燃料，或以類似目的使用濾網。
- 切勿使用硬物敲打產品 (特別是進風口及出風口)。
- 請勿將手指或物體插入出風口或進風口，以避免身體受傷或損壞產品。
- 當您使用室內噴霧式驅蟲劑或在充滿油漬、燒香或化學煙霧的地方時，請勿使用本產品。
- 請勿在燃氣設備/用具、暖氣/加熱裝置或壁爐附近使用本產品。
- 當您要移動、清潔產品、更換濾網或進行其他維護時，請務必拔除產品插頭。
- 本產品為家用產品，僅限於正常操作環境下使用。

- 請勿在潮濕環境或在濕度高或周遭溫度高的環境下使用本產品，例如浴室或溫差變化極大的室內。
- 本產品無法清除一氧化碳 (CO) 或氫氣 (Rn)。發生燃燒意外及危險化學物品意外時，本產品無法當作安全裝置使用。

電磁場 (EMF)

本產品符合電磁場暴露的相關適用標準和法規。

回收

產品使用壽命結束時，請勿與一般家庭廢棄物一併丟棄。請將該產品送至政府指定的回收點進行回收。此舉能為環保盡一份心力。

請遵循您所在國家/地區對電氣與電子產品分類收集的規定。正確處理廢棄產品有助於避免對環境和人類健康帶來負面影響。

 
濾網組件不可水洗且不可回收，請依照當地法規棄置用過的濾網組件。

您的空氣清淨機

感謝您購買 Philips 產品，歡迎來到 Philips 世界！

要享受 Philips 為您提供的全面支援，請在 www.philips.com/support 網站註冊您的產品。

產品概覽

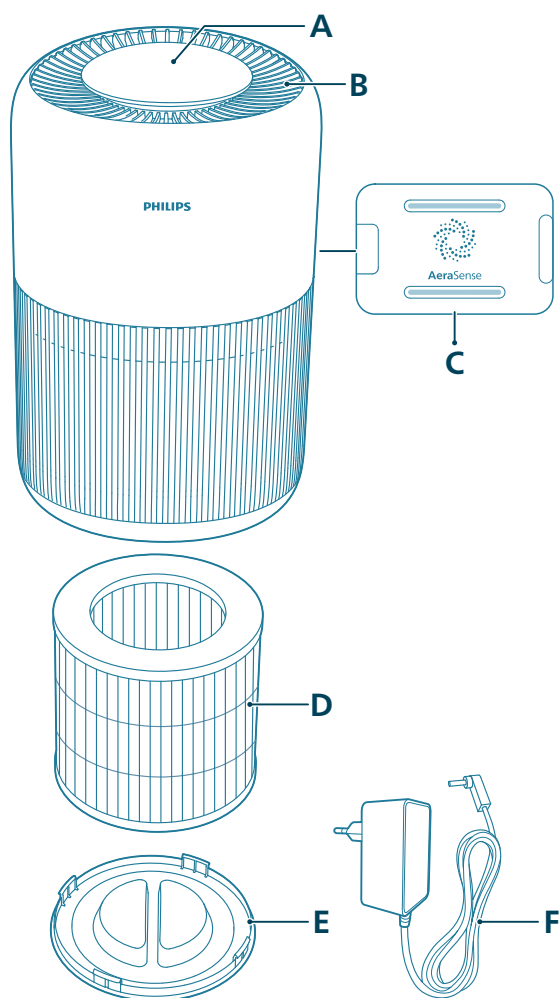**A** 控制面板**B** 出風口**C** 空氣品質感測器**D** 濾網 (FY0900)**E** 底座**F** 轉接器 (KA2401A-2401000TW)

控制項概覽



控制按鈕：

	電源開關按鈕		指示燈開/關按鈕
	模式切換按鈕		

長按按鈕 3 秒鐘：

	保護鎖		濾網重設
---	-----	---	------

顯示面板：


	自動模式		中等模式
	睡眠模式		加速增強模式
	保護鎖指示燈		濾網清潔警示
	濾網更換警示		

使用入門


安裝濾網

使用前，請先拆下濾網所有包裝材料。

 
備註：請先確定空氣清淨機的電源插頭已從電源插座拔除，再安裝濾網。

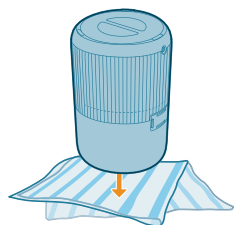


- 1 將產品上下顛倒，放置於軟布上。

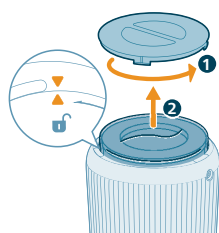 

- 2 逆時針旋轉底座，將其從產品上取下。從產品拉出濾網。

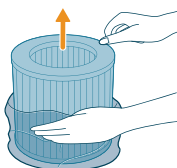 


- 3 拆下空氣淨化濾網的所有包裝材料。

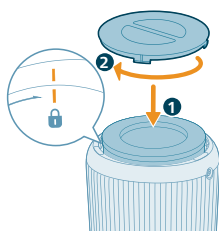 

- 4 將濾網裝回產品。裝回底座，並順時針方向旋轉，以固定底座。

接上電源

 警告：有觸電危險！拔下電源供應器時，務必握住插頭，自插座上拔下。切勿拉扯電源線。

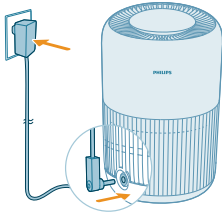

連接電源供應器到：

- 先連接到產品的電源供應器。
- 再連接到電源插座。

使用空氣清淨機

瞭解空氣品質指示燈

空氣清淨機電源開啟後，空氣品質指示燈會自動亮起，並依序閃爍所有燈色。在約 30 秒後，微粒感測器會選擇符合周遭空氣粒子品質的相應顏色。

空氣品質指示燈的顏色取決於 PM2.5 的讀數。

PM2.5

AeraSense 感應技術能夠精確地偵測到空氣中最細小的微粒變化並快速反應。還能提供即時的 PM2.5 回饋資訊，讓您安心無憂。

大部分室內空氣汙染物未達 PM2.5 – 代表空氣微粒汙染物小於 2.5 微米。一般室內細小粒子來源為煙味、烹飪與燃燒的蠟燭。部分空氣中傳播的細菌和最小的黴菌孢子、寵物過敏原及塵蟎過敏原粒子也未達 PM2.5。

PM2.5 等級	空氣品質色彩	空氣品質等級
≤12	藍色	良好
13-35	藍色 - 紫色	普通
36-55	紫色 - 紅色	不良
>55	紅色	非常不良

 
開關機

備註：


為達最佳淨化效能，請關閉門窗。

進風口或出風口需遠離窗簾。

- 1 將空氣清淨機的插頭插入電源插座。

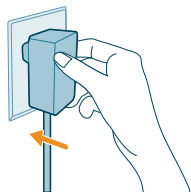

 - 2 按下電源按鈕，開啟空氣清淨機電源。
 - 空氣清淨機會發出嗶聲。
 - 暖機期間螢幕上會顯示 ---。接著空氣清淨機會在測量空氣品質後顯示 PM2.5 等級。
 - 空氣清淨機會以自動模式運作，螢幕上會顯示 PM2.5。
- 3 再次按下電源按鈕以關閉空氣清淨機電源。

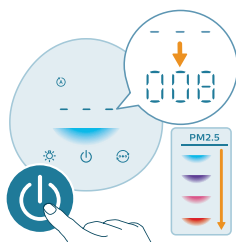


備註：如果空氣清淨機在關閉之後保持連接至電源插座，則當空氣清淨機再次開啟時，會以先前的設定運作。


變更模式設定

您可以按下模式切換按鈕，選擇**自動模式**、**中等模式**、**加速增強模式**或**睡眠模式**。

 自動模式 (A)：空氣清淨機會依照周遭空氣品質自動調整風扇速度。

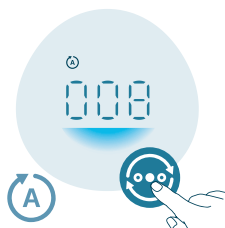


中等模式 (M)：在中等模式下，空氣清淨機會以中等速度運作。

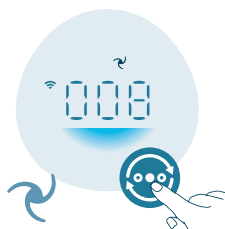 

加速增強模式 (⌚)：空氣清淨機會以最高速度運作。



 
睡眠模式 (☾)：空氣清淨機會以低速安靜地運作。3 秒後，螢幕燈光會熄滅。

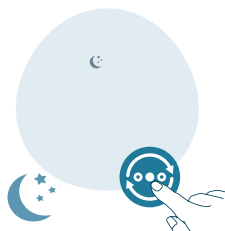


使用指示燈開/關功能


您可以按下開/關燈按鈕來開啟、調暗或關閉所有指示燈和控制面板。

 - 控制面板已開啟。

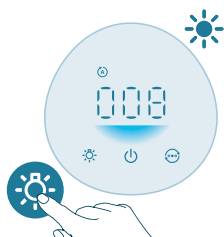

- 控制面板已變暗。

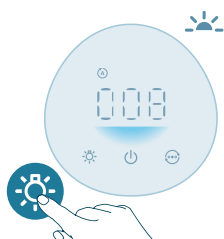 

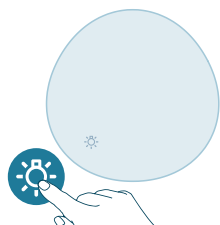 

- 控制面板已關閉。

設定兒童鎖



- 1 按下 按鈕 3 秒鐘以啟動保護鎖。
 - 螢幕上會顯示 。



- 2 再次按下 按鈕 3 秒鐘，以解除保護鎖。
 - 如此， 將從螢幕上消失。

清潔與保養

備註：

進行清潔前，請務必先拔掉電源插頭。

切勿將產品浸入水中或其他液體中。

切勿使用漂白劑或酒精等具磨蝕性、刺激性或易燃性的洗劑清潔產品的任何部分。

請勿使用任何液體 (包括水) 清潔濾網。

請勿試圖以吸塵器清潔空氣品質感測器。

清潔排程

頻率	清潔方法
必要時	用柔軟的乾布擦拭產品的塑膠零件
	清潔空氣出風口護蓋
每兩個月	使用乾棉棒清潔微粒感測器
☰ 會顯示在螢幕上	清潔濾網表面

清潔空氣清淨機機身

請定時清潔本空氣清淨機的內部和外部，以避免積聚塵埃。

 
- 1 使用柔軟的乾布清潔空氣清淨機的內部和外部。
- 2 也可以用柔軟的乾布清潔排氣口。

清潔微粒感測器


每 2 個月清潔空氣品質感測器，可確保產品發揮最佳效果。

若在佈滿灰塵的環境中使用空氣清淨機，可能需要更常清潔。


若房間濕度過高，微粒感測器可能會有水滴凝結，在這種情況下，縱使空氣品質良好，空氣品質指示燈也可能指示空氣品質不佳。若發生此情況，請清潔空氣品質感測器。

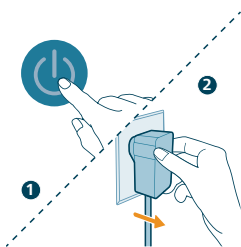


- 1 關閉空氣清淨機的電源，從電源插座拔掉插頭。

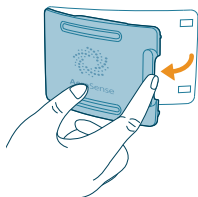 

- 2 打開空氣品質感測器的護蓋。

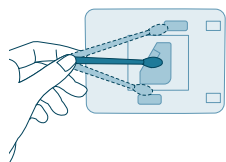 

- 3 使用濕棉棒清潔微粒感測器。
- 4 使用乾棉棒擦乾所有零件。

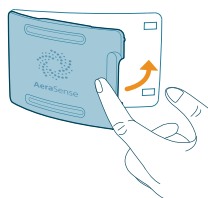 


- 5 關閉空氣品質感測器。

清潔濾網表面

螢幕顯示濾網清潔警示  時，請使用吸塵器清潔濾網表面。

 
備註：我們建議對灰塵、花粉、寵物或黴菌過敏的人不要自行更換濾網，或是請採取防護措施，例如戴上口罩和手套。

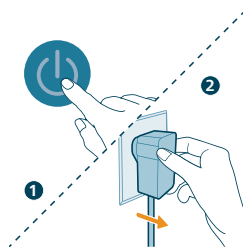


- 1 關閉空氣清淨機的電源，從電源插座拔掉插頭。



 
- 2 將產品上下顛倒，放置於軟布上。

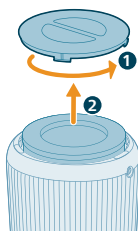


- 3 逆時針旋轉底座，將其從產品上取下。從產品拉出濾網。

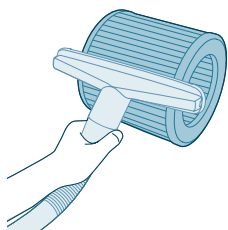 

- 4 使用吸塵器清潔濾網表面。

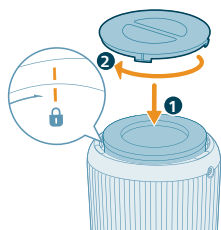 

- 5 將濾網裝回產品。裝回底座，並順時針方向旋轉，以固定底座。

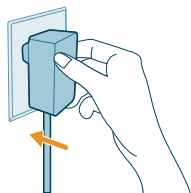 

- 6 將空氣清淨機的轉接器插入電源插座。



- 7 按下  按鈕以開啟產品電源。



- 8 同時按住  與  按鈕 3 秒鐘，可重設濾網清潔時間。
- 重設成功後，濾網清潔警示會從螢幕上消失。



- 9 清潔濾網後請徹底清洗雙手。

更換濾網

瞭解健康空氣保護鎖

本空氣清淨機配備了濾網更換指示燈，用以確認空氣清淨機運作時空氣淨化濾網處於最佳狀態。需要更換濾網時，濾網更換警示  會亮起紅燈。

若未及時更換濾網，空氣清淨機會停止運作並自動鎖定，以保護房內的空氣品質。請盡快更換濾網。

更換濾網

備註：

 
濾網不可水洗或重複使用。

更換濾網前，請務必關閉空氣清淨機電源，再從電源插座拔掉插頭。


螢幕顯示濾網更換警示  時，請更換濾網 (FY0900)。

備註：我們建議對灰塵、花粉、寵物或黴菌過敏的人不要自行更換濾網，或是請採取防護措施，例如戴上口罩和手套。




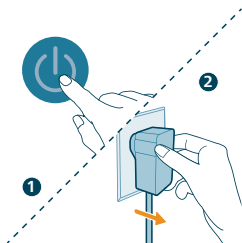


1 關閉空氣清淨機的電源，從電源插座拔掉插頭。

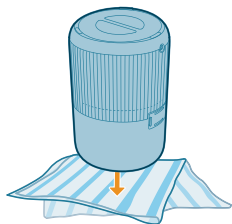 


2 將產品上下顛倒，放置於軟布上。

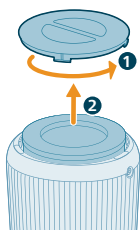 

3 逆時針旋轉底座，將其從產品上取下。從產品拉出濾網。丟棄用過的濾網。

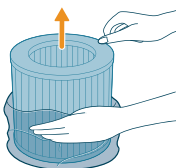 


4 拆下新濾網的所有包裝材料。

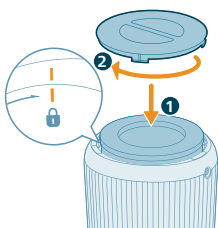 


5 將新濾網裝回產品。裝回底座，並順時針方向旋轉，以固定底座。

 - 6 將空氣清淨機的轉接器插入電源插座。

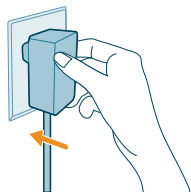


- 7 按下  按鈕以開啟產品電源。

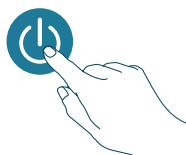 

- 8 按住  與  按鈕 3 秒鐘，可重設濾網使用壽命計時器。
- 重設成功後，濾網更換警示會從螢幕上消失。



 
- 9 更換濾網後請徹底清洗雙手。

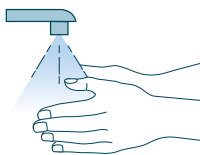


備註：請勿嗅聞濾網，因為它收集了空氣中的污染物。

濾網重設

 您甚至可以在螢幕上出現濾網更換警示 () 之前更換濾網。更換濾網後，您需要手動重設濾網使用壽命計時器。

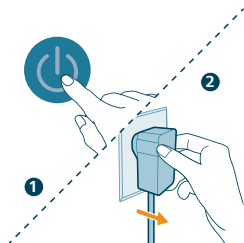

1 按下  按鈕，關閉產品電源。將產品插頭拔除。

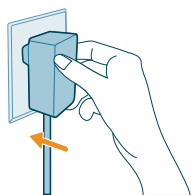 

2 請確認產品的插頭已經完全拔除，然後將電源變壓器插入電源插座。



3 電源開啟後 15 秒內，按住  和  按鈕 3 秒，可重設濾網使用壽命計時器。

存放

- 1 關閉空氣清淨機的電源，然後從電源插座拔掉插頭。
- 2 清潔空氣清淨機和濾網表面 (請參閱「[清潔與維護](#)」章節)。
- 3 收納之前，請確保所有零件徹底風乾。
- 4 將濾網包在氣密塑膠袋中。
- 5 將空氣清淨機和濾網存放在涼爽乾燥處。
- 6 接觸過濾網後，請務必徹底清洗雙手。

疑難排解

本單元概述您使用本產品時可能遇到的最常見問題。如果您無法利用以下資訊解決您遇到的問題，請聯絡您所在國家/地區的客戶服務中心。

問題

產品無法正常運作。

可能的解決方法

濾網更換警示亮起，但未更換相應濾網。因而導致產品鎖定。
在此情況下，請更換濾網並重設濾網使用壽命計數器。

出風口流出的風速比之前慢很多。	濾網表面髒汙。清潔濾網表面 (請參閱「清潔與維護」單元)。
即使產品已經長時間運作，空氣品質仍未獲得改善。	請檢查是否已拆下濾網的包裝材料。
	請確認濾網 (FY0900) 已正確安裝。
	房間很大，或戶外空氣品質不佳。 為獲得最佳淨化效能，請在操作空氣清淨機時關閉門窗。
	有室內汙染源。例如吸菸、烹飪、薰香。
	濾網使用壽命已盡。更換新的濾網。
產品發出異味。	最初幾次使用本產品時，可能會產生塑膠味。此為正常現象。然而，如果取下濾網後產品依然發出焦味，請聯絡您的飛利浦經銷商或授權的飛利浦服務中心。使用一段時間之後，濾網可能會因為吸收室內氣體而產生異味。建議將濾網放在通風良好的地方幾個小時，以減少異味。
產品噪音太大。	產品以加速增強模式運作時，這是正常現象。
	如為自動模式，產品會在空氣品質不佳時以較高的速度運轉。夜間於臥室使用產品時，請選擇睡眠模式。
	如果有任何東西掉入出風口，亦有可能產生異常響亮的聲音。立即關閉產品電源，從產品中取出異物。
	如果出現異常聲音，請聯絡所在國家/地區的客戶服務中心。
產品不斷指示需更換濾網，但濾網已經更換了。	您或許未重設濾網使用壽命計數器。開啟產品。然後同時按住 ☼ 與 😊 3 秒鐘。
螢幕顯示「E1」錯誤代碼。	馬達故障。請聯絡您所在國家/地區的客戶服務中心。

保固與支援

Versuni 為本產品提供售後兩年保固。若因使用不當或保養不周而導致瑕疵，此保固隨即失效。我們的保固不會影響您作為消費者的法律權利。如需更多資訊或欲使用保固，請造訪我們的網站 www.home.id/warranty。

訂購零件或配件

如果您必須更換零件或想購買其他零件，請聯絡您的飛利浦經銷商，或造訪 www.philips.com/support。

如果您在取得零件方面遇到問題，請聯絡所在國家/地區的飛利浦客戶服務中心。

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2025 © Versuni Holding B.V.



100% 
www.home.id