
PHILIPS

HR2040



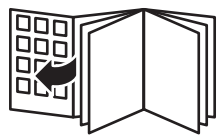


简体中文 6

产品简介

欢迎购买并使用飞利浦产品!
为了您能充分享受飞利浦提供的支持，请在
www.philips.com/welcome 上注册您的产品。

一般说明

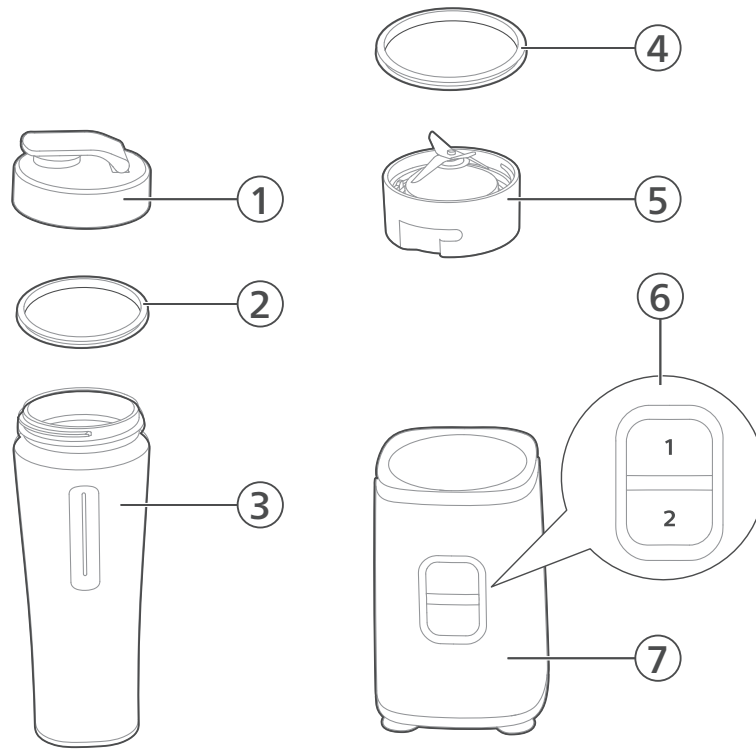


1 随行杯盖
2 随行杯盖密封圈
3 随行杯搅拌杯
4 刀片组件密封圈
5 刀片组件
6 速度按钮
7 马达底座

首次使用之前

首次使用前，请用温肥皂水清洗本产品和配件。彻底冲洗并完全晾干后，再进行组装。
将搅拌机放在稳固平面上。
避免将其放置在热源、水或易燃材料附近。

使用本产品

使用随行杯



1 逆时针旋转杯盖，将其从随行杯上取下。




2 将食材加入随行杯中。

请勿超过随行杯上所标注的最高刻度。


将食材切成小块，确保能顺利放入杯中。



3 顺时针旋转刀片组件，将其锁紧在随行杯上。

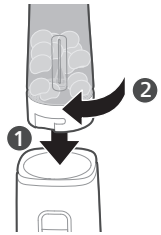


4 顺时针旋转组装好的随行杯，将其锁紧在电机底座上。

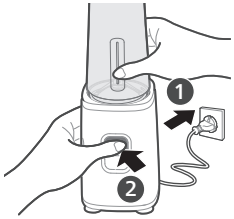

5 插入产品电源插头。
6 按住所需速度按钮开始搅拌。
7 松开速度按钮即可停止。

切勿连续搅拌超过 1 分钟。

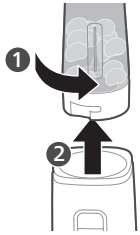

8 搅拌后拔下产品电源插头。
9 逆时针旋转组装好的随行杯，将其从电机底座上取下。



10 逆时针旋转刀片组件，将其从随行杯中取出。





11 顺时针旋转随行杯盖，将其锁紧在随行杯上。



12 随身携带随行杯。

加工量与加工时间



请勿超过下表所示的最大加工量与加工时间。

		(MAX)	(MAX)
		200 g +  × 3	30 sec
		200 ml	30 sec
		200 g / 250 ml 	30 sec



清洁和保养

1 清洁前，务必断开本产品的电源。
2 拆卸本产品时，请小心取出刀片及其他可拆卸部件。
3 仅用湿布擦拭电机主体。
4 请使用温水和清洁剂清洁配件。
5 用干净毛巾擦干搅拌机各部件。

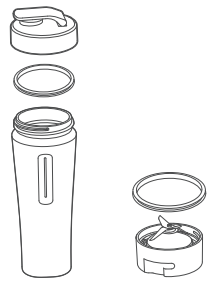	✓	✓	✓
	✗	✗	✓

2026 © Versuni Holding B.V.
PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.
This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.



100%
www.home.id