


PHILIPS

HR2670, HR2671
HR2672



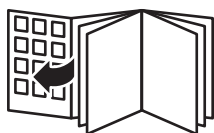


English 6
한국어 14

Introduction

Congratulations on your purchase and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description

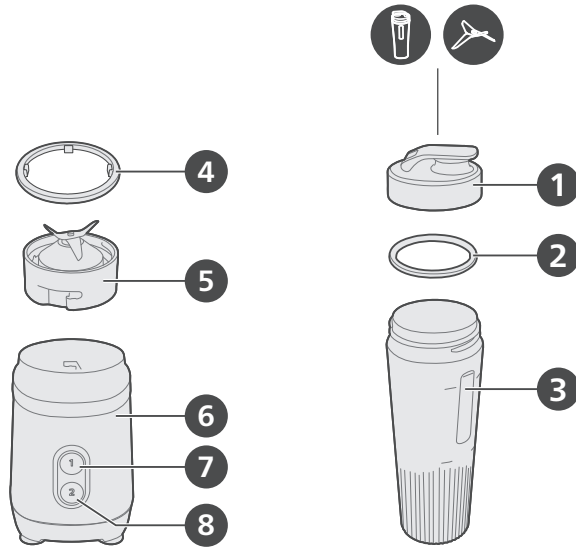

- Tumbler
- 1 Tumbler lid
- 2 Sealing ring
- 3 Tumbler jar
- Main unit
- 4 Sealing ring (with 4 pins)
- 5 Blade unit
- 6 Motor base
- 7 Speed 1 button: for normal speed blending
- 8 Speed 2 button: for full speed blending

Important

Danger

- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Use only a moist cloth to clean the motor unit.

Warning

- Thoroughly clean the parts that come into contact with food before you use the appliance for the first time.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the mains cord or other parts are damaged.
- Never use the blender jar or accessories to switch the appliance on and off.
- Never let the appliance run unattended.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.
- Do not pour hot liquid into the blender as it can be ejected out of the appliance due to a sudden steaming.
- The appliance is intended to be used in household only.
- Always operate the blender with the lid or the guard in position as indicated in the instructions.
- Never put a hand in the jar when it is placed on the base unit.
- If food needs to be pushed down, use a suitable tool e.g. spatula.
- Be careful when handling the sharp cutting blades, emptying the container and during cleaning.

Caution

- Switch off the appliance and always disconnect from supply if it is left unattended and before assembling, disassembling, approaching parts that move in use or cleaning.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.
- Do not exceed the maximum indication on the blender jar and the mill.

- Do not exceed the maximum quantities and processing times indicated in the relevant table.
- The appliance can only be switched on if the blender jar or the mill is assembled on the motor unit correctly.

Tumbler

Warning

- Never reach into the blender jar with your fingers or an object while the appliance is running.
- Make sure the blade unit is securely fastened to the blender jar before you assemble the blender jar onto the motor unit.
- Do not touch the cutting edges of the blender blade unit when you handle or clean it. They are very sharp and you could easily cut your fingers on them.
- If the blade unit gets stuck, unplug the appliance before you remove the ingredients that block the blades.
- When the container is expanded, the user should not open the container immediately to avoid sudden burst of liquid and stop to use.
- Always add liquid together with solid ingredients in the container for better blending results. Never blend only solid ingredients.
- Do not blend with hot or carbonated liquid.

Caution

- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Do not misuse the appliance to avoid potential injury.
- Never fill the blender jar and accessories with ingredients hotter than 60°C.
- Do not use the blender jar and accessories right after taking it out from dishwasher or refrigerator. Let it stay at room temperature for at least 5 minutes before use.
- To prevent spillage, do not exceed the maximum volume indication on the blender jar, especially when you process at a high speed. Reduce amount of the ingredient that tends to foam in the jar/accessory.
- If food sticks to the wall of the blender jar, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Always make sure the lid is properly closed/assembled on the jar and the measuring cup if any is inserted properly in the lid before you switch on the appliance.
- Do not let appliance run for more than 2 minutes at time.
- Always let the appliance cool down to room temperature after each batch you process.
- Noise level: Lc = 86dB(A)

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling



- This symbol means that electrical products shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical products.

Warranty and support

Versuni Netherlands B.V., registered at Claude Debussylaan 88, Amsterdam, NL, offers a two-year warranty on this product after the date of purchase (or the date of delivery, if later). This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information, for spare parts, or for invoking the warranty, please visit our website home.id/support.

Before first use

Before the first use, wash the appliance and accessories with warm soapy water. Rinse them thoroughly and dry them completely before assembling.

Place the blender on a stable and flat surface.

Avoid placing it near heat sources, water, or flammable materials.

Using the appliance

- 1 Turn the lid anti-clockwise to remove it from the tumbler jar.






2 Add ingredients into the tumbler jar.

Do not exceed the max level on the tumbler jar.


Cut the ingredients into smaller pieces to ensure they fit properly in the jar.



3 Attach the blade unit to the tumbler jar by turning it clockwise.

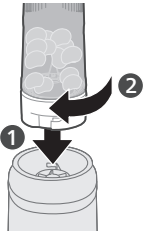

4 Insert the assembled tumbler jar clockwise to lock it to the motor base.

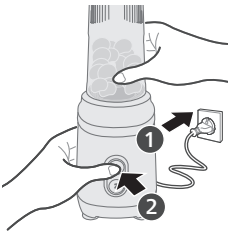

5 Plug in the appliance.

6 Press and hold with your desired speed button to start blending.

Simply release the speed button to stop operation.

7 Unplug the appliance after use.

8 Turn the assembled tumbler jar anti-clockwise to unlock it from the motor base.



9 Turn the blade unit anti-clockwise to remove it from the tumbler jar.













10 Attach the tumbler lid and close it by turning it clockwise.



11 Take the tumbler on-the-go.

Processing quantities and processing time


Do not exceed the maximum quantities and processing times indicated.

		 Kg (MAX)	 (MAX)
		200 g +  × 3	30 sec
		200 ml	30 sec
		200 g  250 ml 	30 sec
			



Cleaning and maintenance

- 1 Always disconnect the appliance from the power source before cleaning.
- 2 Disassemble the appliance and carefully remove the blades and any other detachable parts.
- 3 Wipe the motor unit with a damp cloth only.
- 4 Clean the accessories with warm water and detergent.
- 5 Dry all the blender parts with a clean towel.

Remove the seal ring from the blade unit

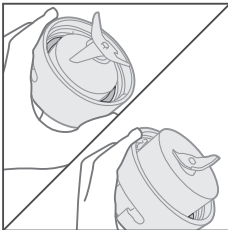


- 1 Hold the blade unit firmly.

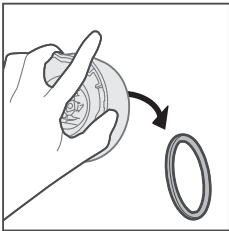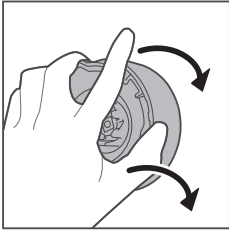


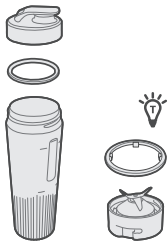



2 Shake the blade unit gently until the seal ring detaches from the blade unit.

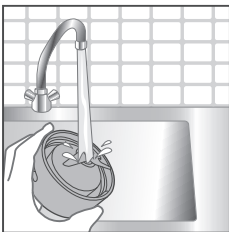Do not use your hands to remove the seal ring while it is inside the unit.




3 Rinse the seal ring under running water.

			
	✓	✓	✓
	✗	✗	✓

소개

필립스 제품을 구입해 주셔서 감사합니다!
 필립스가 드리는 모든 지원 혜택을 받으실 수 있도록
www.philips.com/welcome에서 제품을 등록하십시오.

제품정보

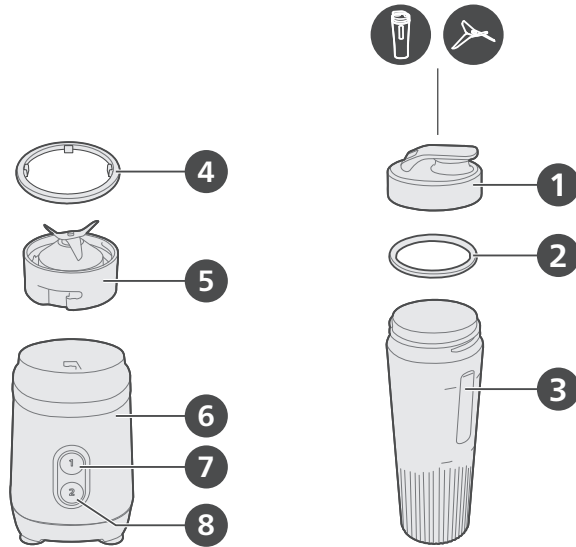

- 텀블러
- 1 텀블러 뚜껑
- 2 밀봉링
- 3 텀블러 용기
- 본체
- 4 밀봉링(4개 핀 포함)
- 5 칼날부
- 6 모터 본체
- 7 속도 1 버튼: 일반 속도 블렌딩
- 8 속도 2 버튼: 최고 속도 블렌딩

Important

위험

- 절대 본체를 물 또는 다른 액체에 담그거나 행구지 마십시오. 본체는 젖은 천으로만 닦으십시오.

Warning

- 음식과 닿는 부품은 제품을 처음 사용하기 전에 깨끗이 청소하십시오.
- 제품에 전원을 연결하기 전에, 제품에 표시된 전압과 사용 지역의 전압이 일치하는지 확인하십시오.
- 전원 코드가 손상된 경우, 안전을 위해 필립스 서비스 센터 또는 필립스 서비스 지정점에 의뢰하여 교체하십시오.
- 플러그, 전원 코드 또는 기타 부품이 손상된 경우에는 제품을 사용하지 마십시오.
- 블렌더 용기나 액세서리를 이용하여 제품의 전원을 켜거나 끄지 마십시오.
- 사람이 없는 상태에서 블렌더를 작동시켜 놓지 마십시오.
- 어린이가 사용하지 못하도록 주의하여 주십시오. 제품과 전원 코드는 어린이의 손이 닿지 않는 곳에 보관하십시오.
- 신체적, 감각적 또는 정신적인 능력이 부족하거나 경험과 지식이 풍부하지 않은 사람이 이 제품을 사용하려면 제품 사용과 관련하여 안전하게 사용할 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받아야 합니다.
- 어린이가 제품을 가지고 놀지 않도록 하십시오.
- 칼날을 만지지 마십시오. 특히 제품이 전원에 연결되어 있을 때는 더욱 그렇습니다. 칼날이 매우 날카롭습니다.
- 뜨거운 액체를 블렌더에 넣을 경우 갑작스러운 열기로 인해 제품 밖으로 튈 수 있으니 뜨거운 액체를 넣지 마십시오.
- 본 제품은 가정용입니다.
- 블렌더는 항상 뚜껑이나 가드를 지침에 표시된 위치에 두고 작동하십시오.
- 베이스 유닛에 올려놓았을 때는 절대로 용기에 손을 넣지 마십시오.
- 음식을 눌러야 하는 경우, 주걱과 같은 적절한 도구를 사용하십시오.
- 날카로운 칼날을 다룰 때, 용기를 비울 때, 세척할 때 주의하십시오.

Caution

- 제품을 사용하지 않을 때, 제품을 조립, 분해 또는 세척하거나 작동 중인 부품을 만지기 전에는 전원을 끄고 전원 코드를 뽑으십시오.
- 다른 제조업체에서 만들었거나 필립스에서 권장하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오. 이러한 액세서리나 부품을 사용했을 경우에는 보증이 무효화됩니다.
- 블렌더 용기 및 분쇄기의 최대 표시선을 초과하여 재료를 넣지 마십시오.
- 해당 표에 표시된 최대량 및 작동 시간을 초과하지 마십시오.
- 블렌더 용기 또는 분쇄기가 본체에 올바르게 장착된 경우에만 제품이 작동합니다.

텀블러

Warning

- 제품이 작동 중일 때는 블렌더 용기 내부에 손가락이나 다른 물건을 절대 넣지 마십시오.
- 블렌더 용기를 본체에 조립하기 전에 칼날이 블렌더 용기에 단단히 고정되어 있는지 확인하십시오.
- 블렌더 칼날을 다루거나 세척할 경우, 날카로운 부분을 만지지 않도록 주의하십시오. 매우 날카롭기 때문에 손을 다칠 위험이 있습니다.
- 칼날부에 음식물이 끼어 움직이지 않으면 먼저 전원 코드를 뽑은 다음, 칼날의 움직임을 방해하는 음식물을 꺼내십시오.
- 용기가 팽창한 경우, 액체가 갑작스럽게 쏟아져 나오는 것을 방지하기 위해 용기를 바로 열지 말고 사용을 중단해야 합니다.
- 더 나은 블렌딩 결과를 얻으려면 항상 용기에 액체 재료를 고체 재료와 함께 넣으십시오. 고체 재료만 블렌딩하지 마십시오.
- 뜨거운 액체 또는 탄산 음료와 함께 블렌딩하지 마십시오.

Caution

- 열 차단 장치가 의도치 않게 재설정되어 위험한 상황이 발생하는 것을 막기 위해, 타이머와 같은 외부 전원 장치를 통해 제품에 전력을 공급하거나 설비 시설에 의해 정기적으로 전원이 꺼졌다 켜지는 회로에 제품을 연결하지 마십시오.
- 잠재적인 부상의 위험이 있으므로 제품을 본래 용도 이외의 목적으로 사용하지 마십시오.
- 블렌더 용기 및 액세서리에 60°C 이상 되는 재료를 절대 넣지 마십시오.
- 식기세척기나 냉장고에서 꺼낸 직후에 블렌더 용기와 액세서리를 사용하지 마십시오. 사용하기 전, 상온에서 최소 5분 정도 식히십시오.
- 특히 고속으로 작동할 경우, 내용물이 흘러 나오지 않도록 블렌더 용기의 최대 용량 표시선을 초과하지 마십시오. 용기 또는 액세서리 사용 시 거품이 잘 나는 재료의 양을 줄이십시오.
- 음식이 블렌더 용기의 벽면에 붙으면 제품의 전원을 끄고 전원 코드를 뽑으십시오. 그 후 주걱을 사용하여 벽면에 붙은 음식을 떼어내십시오.
- 제품의 전원을 켜기 전에 뚜껑을 제대로 닫고 계량컵이 있다면 올바르게 설치했는지 확인하십시오.
- 한 번에 2분 이상 제품을 작동하지 마십시오.
- 여러 번 작동할 경우 매 사용 후에는 제품을 실내 온도와 비슷해질 때까지 식히십시오.
- 소음 레벨: Lc = 86dB(A)

EMF(전자기장)

이 제품은 EMF(전자기장) 노출과 관련된 해당 표준 및 규정을 준수합니다.

재활용



- 이 기호는 이 전자 제품을 일반 가정용 쓰레기와 함께 버리면 안 된다는 것을 의미합니다.
- 해당 국가의 전자 제품 분리 수거 규칙에 따라 버리십시오.

품질 보증 및 지원

Claude Debussylaan 88, Amsterdam, NL 소재 Versuni Netherlands B.V.는 구매일(또는 더 나중인 경우 배송일) 기준 2년간 보증을 제공합니다. 제품을 잘못된 방법으로 사용하거나 부실한 유지관리로 인해 결함이 발생한 경우 이 보증은 유효하지 않습니다. 당사의 보증은 법에서 정하는 소비자로서 귀하의 권리에 영향을 미치지 않습니다. 예비 부품 또는 보증 적용에 대한 자세한 정보는 당사 웹사이트 home.id/support를 참조하십시오.

처음 사용 전

처음 사용하기 전에 제품과 액세서리를 세제를 푼 따뜻한 물로 세척하십시오. 완전히 헹구고 말린 다음 조립하십시오.

블렌더를 안정적이고 평평한 표면에 두십시오.

열을 내는 장치, 물, 가연성 물질 근처에 두지 마십시오.

제품 사용하기



- 1 뚜껑을 시계 반대 방향으로 돌려 텀블러 용기에서 분리하십시오.




2 텀블러 용기에 재료를 넣으십시오.

텀블러 용기에 표시된 최대 수위를 초과하지 마십시오.


재료들이 용기에 잘 들어갈 수 있도록 더 작은 조각으로 잘라주십시오.



3 칼날 유닛을 시계 방향으로 돌려 텀블러 용기에 장착하십시오.

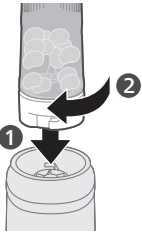

4 조립된 텀블러 용기를 시계 방향으로 돌려 모터 본체에 고정하십시오.

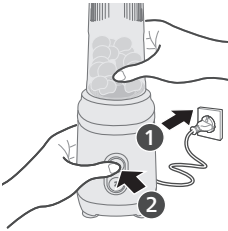

5 제품의 전원 코드를 연결하십시오.

6 원하는 속도 버튼을 길게 눌러 블렌딩을 시작하십시오.

속도 조절 버튼에서 손을 떼면 작동이 멈춥니다.

7 사용 후에는 제품의 전원 플러그를 뽑으십시오.

8 조립된 텀블러 용기를 시계 반대 방향으로 돌려 모터 본체에서 분리하십시오.



9 칼날 유닛을 시계 반대 방향으로 돌려 텀블러 용기에서 분리하십시오.













10 텀블러 뚜껑을 닫고 시계 방향으로 돌려 닫으십시오.



11 텀블러를 휴대하고 다니십시오.

작동 용량 및 작동 시간


표시된 최대 용량 및 작동 시간을 초과하지 마십시오.

		 (MAX)	 (MAX)
		200 g +  × 3	30 sec
		200 ml	30 sec
		200 g  250 ml 	30 sec
			




청소 및 유지관리

- 1 항상 세척하기 전에 제품을 전원 소스에서 분리하십시오.
- 2 제품을 분리하고 칼날과 다른 분리 가능 부품을 조심스럽게 제거하십시오.
- 3 젖은 천만을 사용하여 본체를 닦으십시오.
- 4 따뜻한 물과 세제로 액세서리를 세척하십시오.
- 5 블렌더의 모든 부품을 깨끗한 수건으로 닦아 말리십시오.

칼날 유닛에서 밀봉 링을 분리하십시오.

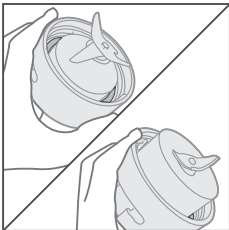

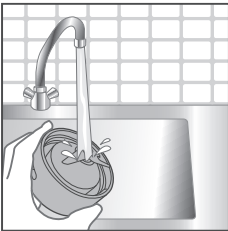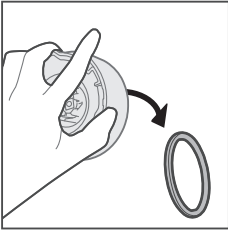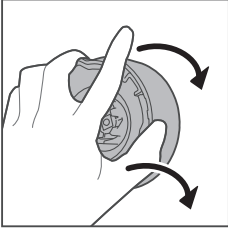




- 1 칼날 유닛을 단단히 잡으십시오.



2 밀봉 링이 칼날 유닛에서 분리될 때까지 칼날 유닛을 부드럽게 흔드십시오.

밀봉 링이 본체 안에 있는 동안 손으로 분리하지 마십시오.

3 밀봉 링을 흐르는 물에 헹구십시오.

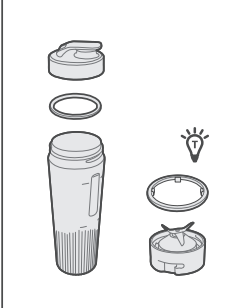			
	✓	✓	✓
	✗	✗	✓

2026 © Versuni Holding B.V.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

xxxx.yyy.zzzz.a (05/2026)



100% 
www.home.id