

# PHILIPS

✦  
Cordless Vacuum  
**7000 Series**  
XC7153  
XC7155  
XC7157



Welcome,  
**Get started!**



[www.home.id](http://www.home.id)



Register and  
Unlock benefits







Quick start



Digital manual



Personal  
Support

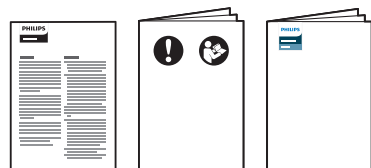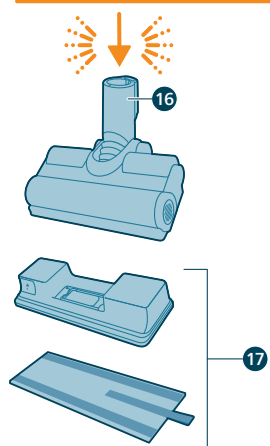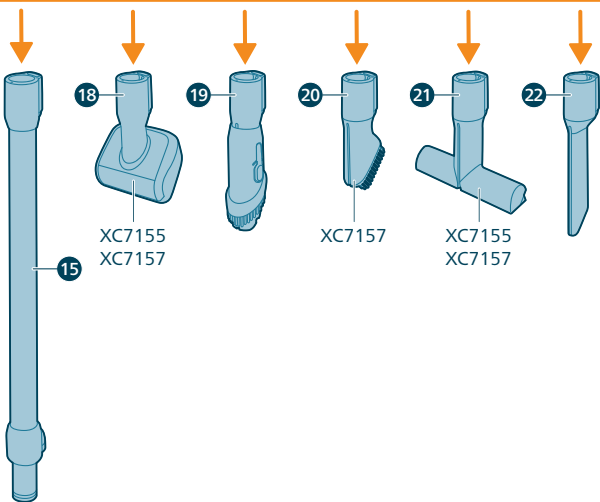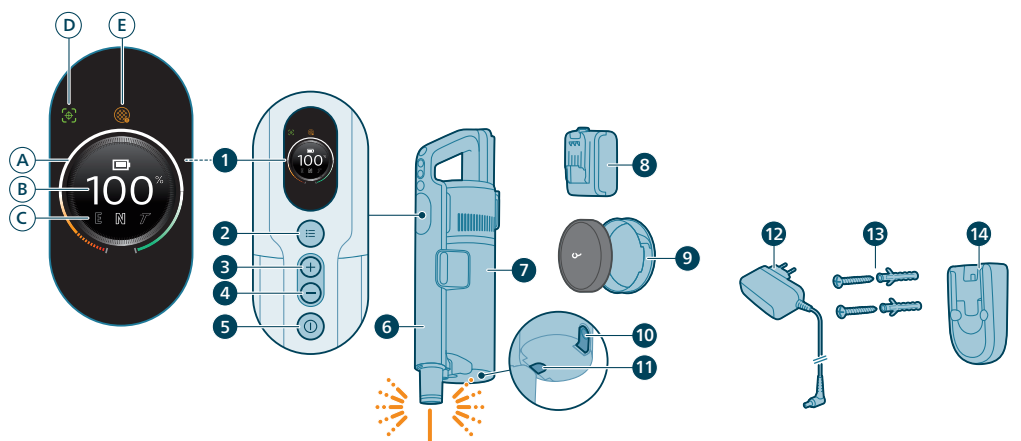

English 4  
Türkçe 36

# Contents

|                                                 |    |
|-------------------------------------------------|----|
| <b>Introduction</b>                             | 4  |
| <b>General description</b>                      | 4  |
| <b>Before first use</b>                         | 5  |
| Installing the wall mount                       | 5  |
| <b>Preparing for use</b>                        | 6  |
| <b>Using the appliance</b>                      | 7  |
| Assembling the appliance                        | 7  |
| Vacuuming soft and hard floors                  | 8  |
| Vacuuming while mopping hard floors             | 9  |
| Versatile usage and accessories                 | 11 |
| Customizations and additional information       | 14 |
| <b>After use – Maintenance</b>                  | 17 |
| Frequent maintenance after each cleaning cycle  | 17 |
| Periodic maintenance intermittently             | 19 |
| <b>Replacement</b>                              | 27 |
| <b>User interface signals and their meaning</b> | 28 |
| <b>Troubleshooting</b>                          | 30 |
| Dry cleaning                                    | 30 |
| Wet cleaning                                    | 34 |

# Introduction

Thank you for buying this product! To fully benefit from the support that we offer, register your product at [www.philips.com/mycordlessvacuum-7000s](http://www.philips.com/mycordlessvacuum-7000s).


# General description

- 1 Digital display
  - a Ring indicator of battery level
  - b Percentage of battery level
  - c Selected power level
  - d 'Floor Type Recognition feature activated' icon
  - e Filter cleaning reminder icon
- 2 Menu/Confirm button
- 3 + Button
- 4 – Button
- 5 On/off button
- 6 Handheld
- 7 Dust bucket
- 8 Battery
- 9 Replacement filter
- 10 Easy empty button
- 11 Dust bucket release button
- 12 Adapter


- 13 Screws
- 14 Wallmount
- 15 Tube
- 16 TriActive Smart LED nozzle
- 17 Aqua tank & Microfiber mopping pad
- 18 PetPro Nozzle (XC7155, XC7157 only)
- 19 Combination tool
- 20 Soft brush (XC7157 only)
- 21 Upholstery nozzle (XC7155, XC7157 only)
- 22 Crevice tool

## Before first use


### Installing the wall mount

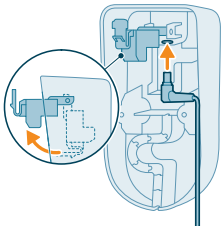


- 1 Invert the wall mount and unlatch the gray lever. Insert the charging port, ensuring the metal part is visible and pointing upright on the front side of the wall mount.

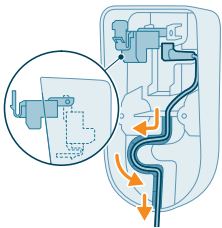

- 2 Neatly arrange the cable by tucking it into the designated groove.

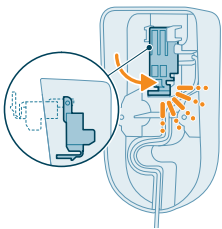


- 3 Close the gray lever. Make sure the gray lever is locked in place with a "CLICK" sound.

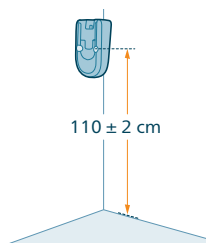

- 4 Securely affix the wall mount to your preferred position on the wall, ensuring that the mounting screw holes are approximately 110 cm from the floor.

**⚠ Caution: Be careful when you drill holes in the wall to fasten the wall mount, to avoid the risk of electric shock.**

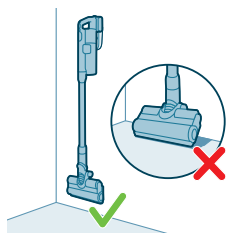

**i** Note: Verify that the placement of the wall mount allows the entire appliance to hang on the wall without the nozzle coming into contact with the floor.


- 5 Once you have determined the optimal position and height for storing and charging your appliance, firmly tighten the screws to secure the wall mount in place.




## Preparing for use

The appliance is equipped with a Li-Ion battery. Charging from empty to full takes about 6 hours.


- 1 Attach the battery pack to the main body of the appliance, ensuring a secure connection that's confirmed with a "CLICK" sound.

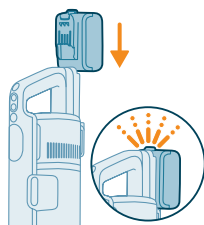

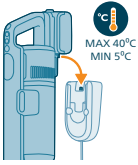

- 2 Charge your appliance by placing it onto the assembled wall mount.

**⚠ Warning: Store and charge the appliance at a temperature above 5 °C and below 40 °C.**

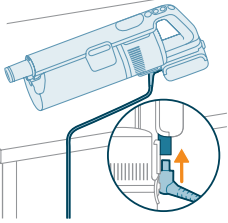


**i Note:** You can also place the handheld on a level and stable surface, and directly connect the charging cable to the appliance.




- 3 The appliance is designed to reach a complete charge within 6 hours. You can monitor the charging progress on the screen. When the appliance is fully charged, the value 100% lights up on the screen. After a few minutes, the display will switch off.

## Using the appliance

### Assembling the appliance

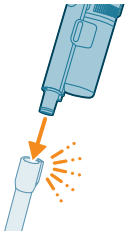


- 1 Attach the handheld to the tube. Confirm the attachment with a "CLICK" sound.

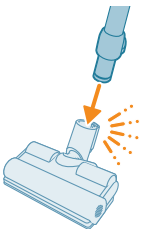


- 2 Attach the tube to the nozzle. Confirm the attachment with a "CLICK" sound.

## Vacuuming soft and hard floors

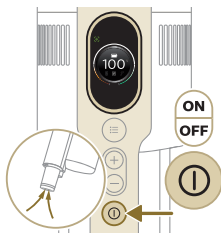

- 1 Press the on/off button to switch on the appliance.

**i** Note: To switch off the appliance, press the on/off button again.

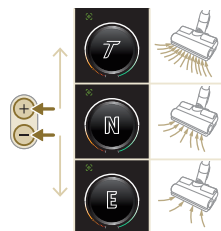

- 2 Use the + and – buttons to toggle through three different power settings.

**T** - turbo mode


**N** - normal mode

**E** - eco mode

- 3 You can clean on hard or soft floors with the vacuum cleaner.




**i** With Floor Type Recognition enabled, the appliance recognizes the floor type and automatically optimizes its performance within the power settings you have selected. To disable this feature, check how to customize settings below.

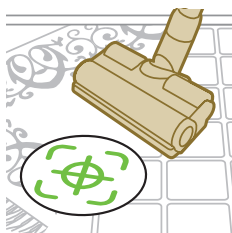

**⚠ Warning: Do not vacuum up water or other liquids.**



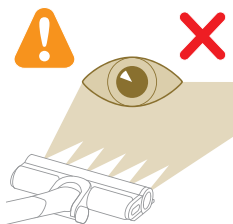


**⚠ Caution:** Do not look directly into the illuminated LEDs or point the LEDs at someone's eyes. The LED light is very bright.

## Vacuuming while mopping hard floors


**⚠ Caution:** Only use the aqua tank on hard floors with a water-resistant top coat (such as linoleum, enameled tiles and varnished parquet) and stone floors (such as marble). If your floor has not been treated to make it water-resistant, check with the manufacturer if you can use water to clean it. Do not use the aqua tank on hard floors of which the water-resistant top coat is damaged.

**i Note:** Do not use the aqua tank to clean carpets.


**i Note:** Do not move the appliance with aqua tank assembled sideways, as this leaves water traces. Only move forwards and backwards.

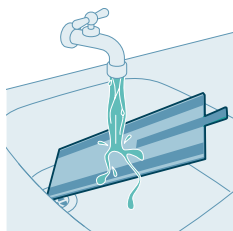


**1** Pre-wet the microfiber mopping pad with water before use.

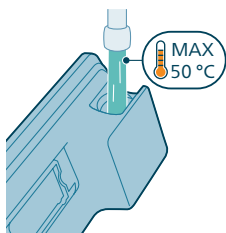


**2** Fill the tank with water, ensuring the water temperature does not exceed 50 °C.

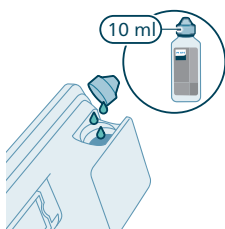

- 3** (Optional) If you wish to add a liquid floor cleaner into the aqua tank, opt for a low-foaming or non-foaming variety that can be diluted. We recommend the XV1792 Philips Floor Cleaner. Add only a few drops of the liquid cleaner to the water.

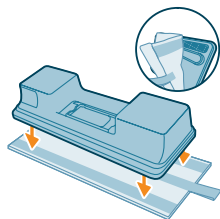

- 4** Secure the microfiber mopping pad underneath the aqua tank. Align the velcro straps under the aqua tank and behind the cloth.

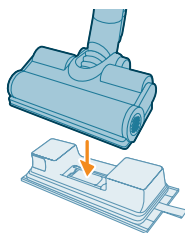

- 5** Attach the prepared aqua tank to the aqua nozzle and you're set to begin.



- 6** Press the on/off button to switch on the appliance. You can effectively clean hard floors with the attached aqua module on the nozzle.



**i** Note: The aqua module is not suitable for soft floors like carpet.



**⚠ Caution: The aqua module should not be used to pick up water puddles.**

### Tips and other important information

- It is not necessary to vacuum the floor before mopping, as the Vacuum & Mop set-up actively wet-cleans your hard floor to capture all kinds of dirt, including liquids and stains. On carpets and rugs, use the Vacuum only set-up.
- The appliance can leave a small puddle of water on the floor if you do not move the appliance while switching it off. You can reduce the size of the puddle by moving the appliance while switching it off. If needed, you can remove the last drops with a cloth.

### Usage restrictions

- The Vacuum & Mop set-up is suitable for vacuuming and mopping all types of hard floors, except uncoated wooden floors.
- The Vacuum & Mop set-up is intended for regular cleaning of hard floors. Always follow the cleaning instructions for your hard floor when you use this appliance.
- If you want to add a liquid floor cleaner other than XV1792 Philips Floor Cleaner to the water in the clean aqua tank, make sure that you use a low-foaming or non-foaming liquid floor cleaner that can be diluted in water like XV1792 Philips Floor Cleaner.
- As the clean aqua tank has a capacity of 250 ml, you only have to add a few drops (max 10ml) of liquid floor cleaner to the water.
- If you use the Vacuum & Mop set-up on linoleum floors, only do so on linoleum floors that are properly affixed to prevent linoleum from being drawn into the nozzle.
- If you move/lift the appliance over a carpet or rug when it is switched off, wastewater droplets may end up on your carpet or rug.
- Do not push the appliance over the floor grilles of convector heaters. As the appliance cannot pick up water that comes out of the nozzle when you move it over the grille, water ends up at the bottom of the convector pit.
- While cleaning, do not lift the nozzle from the floor or move the nozzle sideways, and do not make strong turns, as this leaves water traces. Only move forwards and backwards.

**i** Note: The operating time depends on the power level used during cleaning.

## Versatile usage and accessories

**⚠ Warning: When using any accessory, do not vacuum up water or other liquids.**

**⚠ Caution: Do not look directly into the illuminated LEDs or point the LEDs at someone's eyes. The LED light is very bright.**

## Using the handheld

You can use the handheld directly without any cleaning tool to vacuum up dusts.



## Using the nozzle

1 Attach the nozzle directly to the handheld.




2 This combination is for cleaning dynamic surface height, such as stair case.




## Using the PetPro Nozzle

The PetPro Nozzle effectively removes pet hair and small messes like crumbs, and is ideal for soft surfaces such as beds and couches.

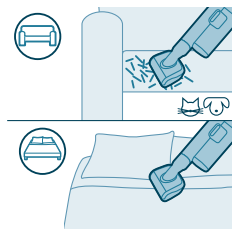




To attach the PetPro Nozzle, insert the tube of the handheld into the PetPro Nozzle. Adjust the power setting to match your cleaning needs.

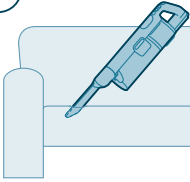


### Using the crevice tool

Crevice tool can be used for cleaning tight, narrow spaces like between couch cushions, along baseboards, or in car interiors.

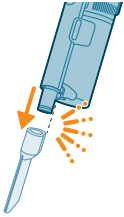


To attach the crevice tool, insert the tube or handheld into the crevice tool.

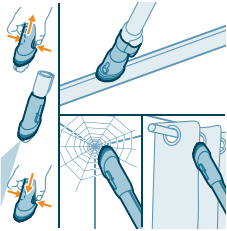

### Using the combination tool


The combination tool has a soft brush to clean spiderwebs or delicate surfaces like curtains and a narrow nozzle for tight or hard-to-reach spots like window frames.

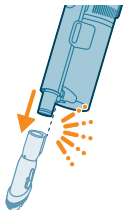

To attach the combination tool, insert the tube or handheld into the combination tool.

## Using the soft brush


Soft brush gently cleans fragile or delicate surfaces like lampshades, blinds, and screens. It's included in models XC7065, XC7067 and XC7167.



To attach the soft brush, insert the tube or handheld into the soft brush.

## Using the upholstery tool

Upholstery tool cleans soft fabric furniture like sofas, cushions, and chairs. It's included in models XC7065, XC7067 and XC7167.

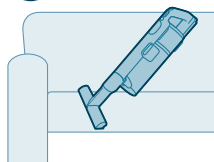


To attach the upholstery tool, insert the tube or handheld into the upholstery tool.

## Customizations and additional information

The appliance is equipped with various options to customize and monitor in the menu.

- 1 To access the menu settings, press the menu button.
- 2 Toggle through the options using the + and - buttons. These options include adjusting illumination, enabling or disabling Floor Type Recognition, accessing additional information about your appliance, and returning to the previous screen.
- 3 Once your desired option is highlighted, confirm your choice by pressing the menu button again.

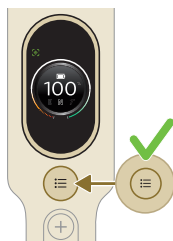




## Modify the illumination brightness

Press the menu button and toggle to the illumination feature. Confirm by pressing the menu button again.


To modify the illumination brightness, toggle through the available levels and confirm by pressing the menu button.

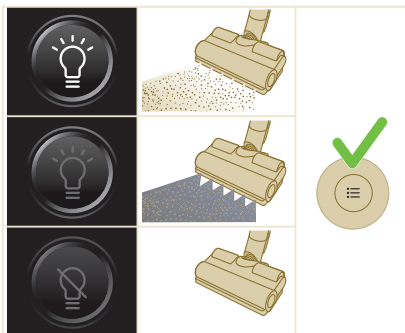

## Floor Type Recognition

Press the menu button and toggle to the Floor Type Recognition feature. Confirm by pressing the menu button again.

In the Floor Type Recognition screen, toggle this function and confirm your decision by pressing the menu button. When successfully enabled, a green icon will appear at the upper left corner of the display after you go back to the main screen.

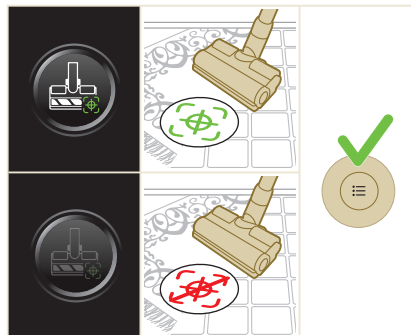

**i** Note: Floor Type Recognition can only be enabled or disabled when the motorized nozzle is attached to the handheld. As a result, when no motorized nozzle in combination with the main brush is attached to the main appliance, there will be one item less in your menu. Attach the motorized nozzle to see this Floor Type Recognition item in your menu.

**i** Note: When you first receive your appliance, Floor Type Recognition is enabled.


**i** Note: The Floor Type Recognition function becomes active when the nozzle identifies different cleaning surfaces while in motion.

**i** Floor Type Recognition does not work in combination with the Delicate Floor Brush (included in model XC7067).

### Additional information


Press the menu button and toggle to the "additional information" option. Confirm by pressing the menu button again.

In the "additional information" screen, you can check the filter health, battery health, total usage time, model of your appliance, and access of a QR code for additional online information.

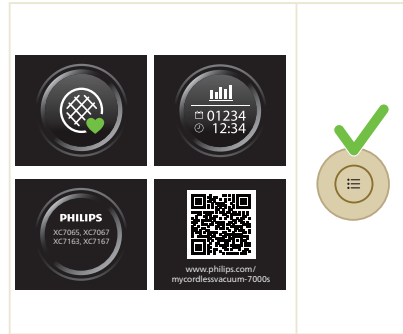

### Return

To exit the menu and return to the previous screen, select the "Return" option.


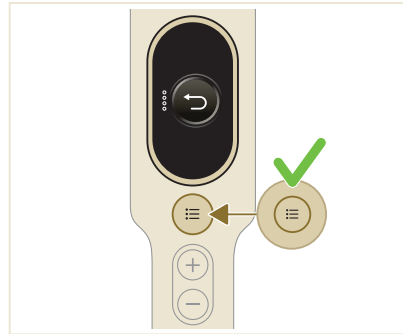


# After use – Maintenance

## Frequent maintenance after each cleaning cycle

### Dust management system maintenance


Empty the dust bucket after each use or when the dust is reaching the MAX level indicator.

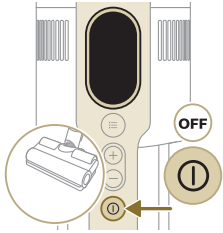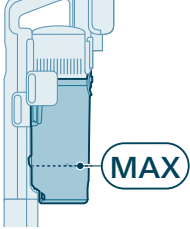

- 1 Switch off the appliance.




- 2 Remove the handheld include the dust bucket from the tube.

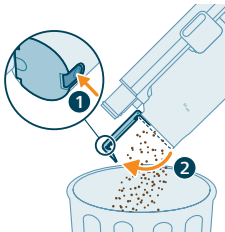


- 3 Hold the dust bucket above a trash bin and press the Easy Empty Button (1) to empty the bucket (2).

### Aqua tank maintenance


Clean the aqua tank after each use.

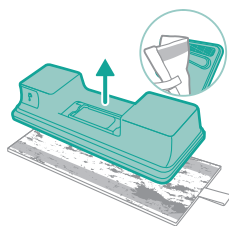


- 1** Remove the microfiber mopping pad.

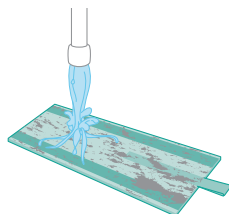


- 2** Rinse the mopping pad under the tap and wash it by hand or in a washing machine.

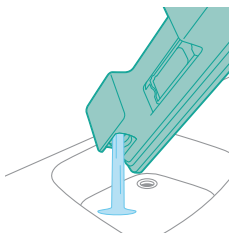


- 3** Pour out any remaining water in the aqua tank.

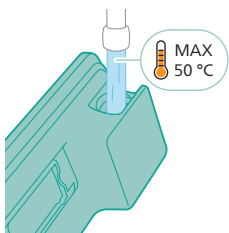


- 4** Fill the aqua tank with water.

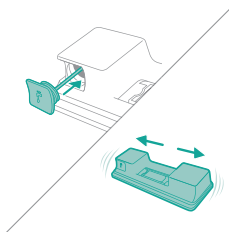

- 5** Close the aqua tank properly and shake the aqua tank to remove detergent residuals.

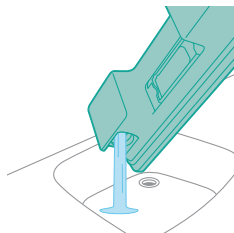

**6** Empty the aqua tank and leave it open to dry.

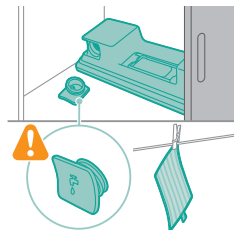

**7** Make sure to not lose the tank cap during storage. Hang the microfiber mopping pad dry.


## Periodic maintenance intermittently


### Cleaning the filter

Clean the filter at least once every month or when you see the notification for filter cleaning (i8).




**1** Turn off appliance .

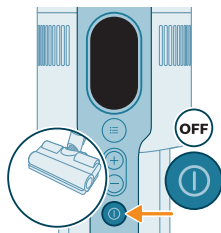


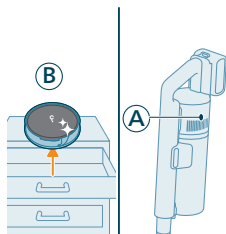


- 2 While the dirty filter (A) is still in the appliance, make sure to have your replacement filter (B) ready on the side.

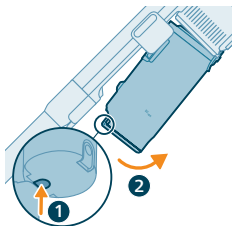


- 3 Remove the bucket by pressing the bucket release button.

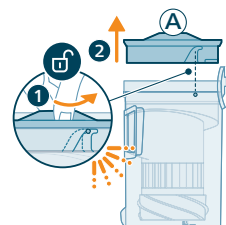

- 4 Rotate the filter (A) counter-clockwise to remove it from the dust bucket.

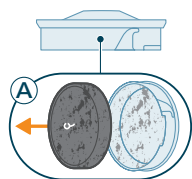


- 5 Remove the foam filter (A) from the plastic filter case.

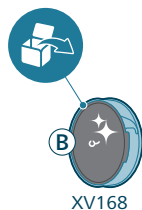


- 6 Unpack the replacement filter (B).


XV168

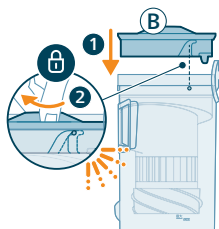


- 7** Install the clean filter (B) in the dust bucket. Rotate the filter clock-wise to fix it in place.

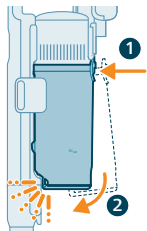


- 8** Place the dust bucket back onto the handheld. First align the filter side of the bucket before hinging it in place.

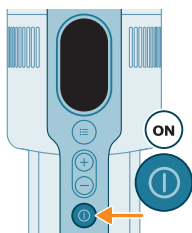


- 9** Turn on the appliance.

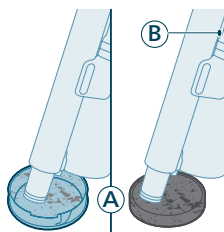

- 10** Vacuum the polluted filter case and foam filter (A).

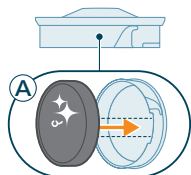


- 11** Reassemble the clean foam filter (A) in the clean filter case.

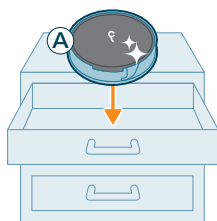


**i** Note: The filter (A) is now cleaned thoroughly and can be stored for future use when the current filter (B) needs to be cleaned.

## Cleaning the bucket and cyclone


**1** Turn off appliance.

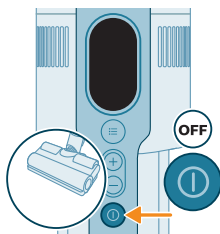

**2** Remove the bucket by pressing the bucket release button.

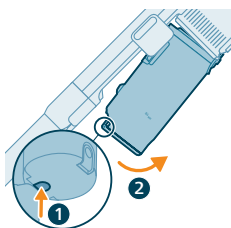


**3** Hold onto the black grip. Remove the cyclone from the dust bucket by lifting it out from the bucket.




**4** Tap the cyclone against a bin to remove remaining dust & dirt.



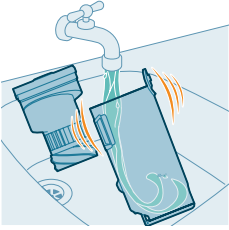

- 5 For thorough maintenance, clean the dust bucket and cyclone under a running tap or in warm soapy water.

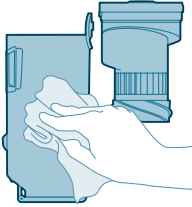


- 6 Wipe the cleaned dust bucket and cyclone dry.

**Caution: Make sure all parts are completely dry before you reassemble them.**

Note: all parts cannot be cleaned in the dishwasher.




- 7 Reassemble the cyclone in the dust bucket.

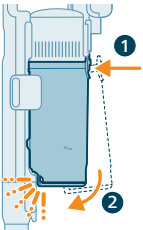


- 8 Place back the assembled bucket. First align the filter side of the bucket before hinging it in place.

Note: After maintenance, always make sure the filter is assembled in the appliance before using it.

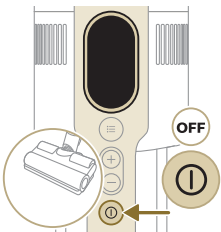


## PrecisionPower Smart Nozzle maintenance


- 1 Always switch off the appliance before cleaning the nozzle brush roll.

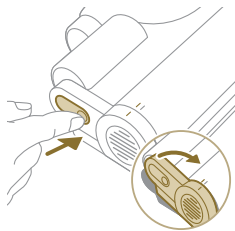


- 2** To access the brush roll, locate the button on the side of the nozzle. Press it and rotate to open.

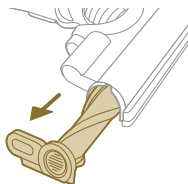


- 3** Gently remove the brush roll and the side cap of the nozzle.

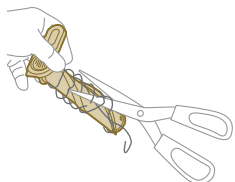

- 4** Carefully detach any tangled hair from the brush roll. Support the removal of pollution with a pair of scissors.

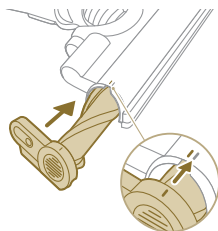


- 5** When reassembling, ensure proper alignment of the brush roll.

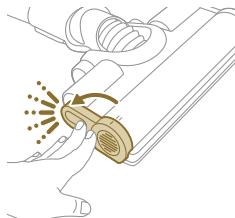


- 6** Lock the nozzle brush roll by securing it until you hear a "CLICK" sound.

## PetPro Nozzle maintenance


- 1 Turn the brush over to access the cleaning area.

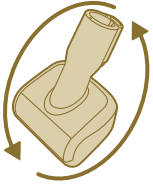


- 2 Slide the side button to release the brush from its position.

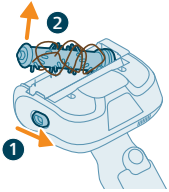

- 3 Use your hands or a pair of scissors to remove any pollution from the brush.

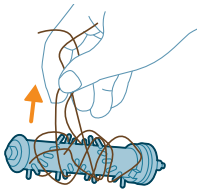

- 4 When reassembling the brush, start by placing one side in position before attaching the other side. When the brush is properly assembled, you will hear a "CLICK" sound.

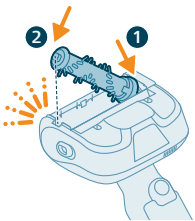


## Aqua tank maintenance

Descale the aqua tank once every month to avoid limescale build-up.

- 1 Add some descaling liquid to a measuring cup.




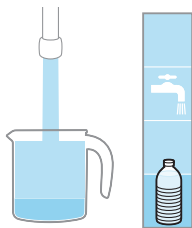


- 2 Add the correct amount of water in the measuring cup.




- 3 Add the mixed liquid in the aqua tank.

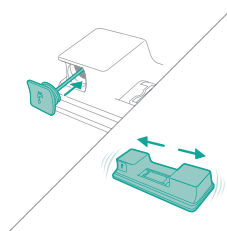

- 4 Close the Aqua tank properly before shaking the tank for the descaling liquid to spread evenly.

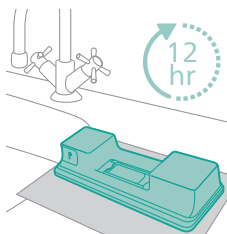


- 5 Leave the aqua tank (without the microfiber mopping pad) upright over 12 hours. Water is expected to slowly come out from the bottom of the aqua tank. We recommend to place the aqua tank inside the sink or over a cloth.

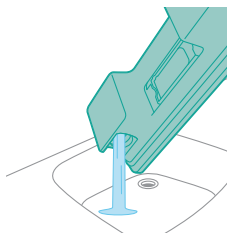


- 6 Rinse and remove any remaining liquid inside the aqua tank.

## Water strip maintenance


- 1 Remove the water strip from the bottom of the aqua tank for a thorough cleaning.

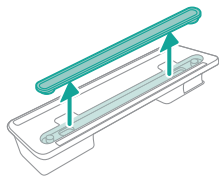

- 2 Rinse the water strip under the tap.

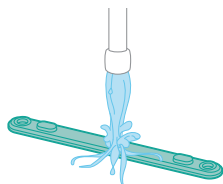

- 3 Attach the water strip back to the aqua tank after cleaning.

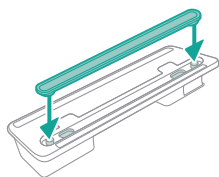


## Replacement

To buy accessories or spare parts, visit [www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories) or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country.


Replacement parts and type numbers:

Replacement filter XV1681/01

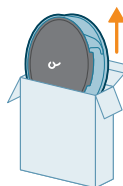


XV1681/01


Brush roll CP0667/01

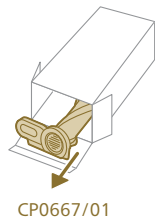

Microfiber mopping pad XV1670/02

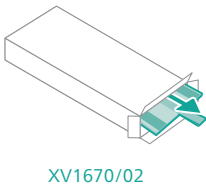

Water strip CP0381/01

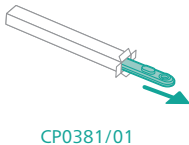

**i** Note: Replace the filter and the microfiber mopping pad every 6 months to ensure maximum performance.

# User interface signals and their meaning

| Signal | Meaning of signal                                                                                                                                                                                                                                                                                                                 |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E1     | <div></div> <div>Malfunction of the appliance.<br/>Remove the battery, wait 10 seconds, and then put the battery back. If this does not work, please take the appliance to a Philips service center or contact the Consumer Care Center.</div> |
| E2     | <div></div> <div>The appliance is operated below the functioning temperature.<br/>Move the appliance to a warmer room. Do not store, charge or use the appliance at a temperature below 5 °C or above 40 °C.</div>                             |

| Signal | Meaning of signal                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E3     |  <p>The appliance is operated above the functioning temperature.<br/>Move the appliance to a cooler room. Do not store, charge or use the appliance at a temperature below 5 °C or above 40 °C.</p>                                                                                                                                                                                                 |
| E5     |  <p>The battery is damaged.<br/>Take the appliance to a Philips service center or contact the Consumer Care Center.</p>                                                                                                                                                                                                                                                                             |
| E9     |  <p>The nozzle is operated above the functioning temperature.<br/>Switch off the appliance and wait 15 minutes. Touch the upper housing of the nozzle to feel if it is still warm. If the nozzle is still warm, wait longer for the nozzle to cool down. Once the nozzle has cooled down, try switching the appliance back on.</p>                                                                  |
| i4     |  <p>The nozzle is clogged.<br/>Make sure the appliance is switched off. Clean the nozzle according to the user manual and check the tube by removing the tube from the main appliance. Remove the object in the nozzle or tube and restart the appliance.</p>                                                                                                                                       |
| i5     |  <p>Foreign object is stuck in the airflow passage.<br/>Make sure the appliance is switched off. Clean the nozzle according to the user manual and check the tube by removing the tube from the main appliance. Remove the object in the nozzle, tube, or handheld and restart the appliance.</p>                                                                                                   |
| i6     |  <p>The adapter is not removed.<br/>Remove the adapter before operating the appliance.</p>                                                                                                                                                                                                                                                                                                        |
| i7     |  <p>A wrong adapter is used.<br/>Only use the original adapter to charge the appliance.</p>                                                                                                                                                                                                                                                                                                       |
| i8     |  <p>The filter is polluted.<br/>Clean the filter. Follow the instructions on the screen or in the users manual. You can buy new filters in the online Philips shop at <b><a href="http://www.philips.com/support">www.philips.com/support</a></b> or at your Philips dealer.<br/>If you keep getting an i8 information code after cleaning the filter, check the troubleshooting table below.</p> |

| Signal                                                                                | Meaning of signal                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| i10  | The battery is not properly inserted.<br>Remove the battery, and then put the battery back. If this does not work, please take the appliance to a Philips service center or contact the Consumer Care Center. |
|      | The battery level is low and needs to be charged. Charge the appliance or the battery via the suggested charging method.                                                                                      |

# Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit [www.philips.com/support](http://www.philips.com/support) for a list of frequently asked questions or contact the Consumer Care Center in your country.

## Dry cleaning

| Problem                                                          | Possible cause                                                                                                 | Solution                                                                                                                                                                                               |
|------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The appliance does not respond when the on/off button is pushed. | The display shows the battery empty icon.                                                                      | To charge the battery, connect the appliance to the charging station or attach the handheld vacuum cleaner directly to the power plug of the adapter.                                                  |
| The charging station is not stable on the wall.                  | The screws holding the charging station are loose.                                                             | Tighten the screws.                                                                                                                                                                                    |
|                                                                  | The screws are not the right size.                                                                             | Mount the charging station with the supplied screws.                                                                                                                                                   |
| The appliance suddenly stops working.                            | The charging station is not attached to a stable wall.                                                         | Check that the wall on which the charging station will be mounted is stable.                                                                                                                           |
|                                                                  | When the appliance has an internal malfunction, the buttons will not respond and the screen will remain blank. | Connect the appliance to the charging station or attach the handheld vacuum cleaner directly to the adapter. Check the display. If an error code appears, you can find its meaning in the user manual. |
|                                                                  | (code: E2, E3) The appliance is not working at a suitable temperature.                                         | Make sure the appliance is used at a temperature of 5-40 °C.                                                                                                                                           |

| Problem                                                                       | Possible cause                                                                                       | Solution                                                                                                                                                                                                                                                     |
|-------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                               | (code: i4, i5) The brush roll is stuck or objects are stuck in the air flow channel.                 | Make sure the appliance is switched off. Clean the nozzle according to the user manual and check the tube by removing the tube from the main appliance. Remove the object in the nozzle or tube and restart the appliance.                                   |
|                                                                               | (code: E9) The motorized nozzle is overheated.                                                       | Switch off the appliance and wait 15 minutes. Touch the upper housing of the nozzle to feel if it is still warm. If the nozzle is still warm, wait longer for the nozzle to cool down. Once the nozzle has cooled down, try switching the appliance back on. |
| The appliance has a lower suction power than usual.                           | The filter and the cyclone are dirty.                                                                | Empty the dust bucket. Clean the filter and the cyclone. Make sure the filter is washed at least once a month, when using the appliance regularly. Make sure hair and dirt stuck in the cyclone are removed.                                                 |
|                                                                               | The dust container is not attached properly to the appliance.                                        | Make sure the dust container is attached properly.                                                                                                                                                                                                           |
| Dust escapes from the appliance.                                              | The filter is dirty.                                                                                 | Clean the filter. See also the user manual.                                                                                                                                                                                                                  |
|                                                                               | The filter is not present in the appliance.                                                          | Make sure that the filter is in the appliance and assembled correctly.                                                                                                                                                                                       |
|                                                                               | Something is blocking the cyclone.                                                                   | Check the cyclone for stuck objects and remove any object blocking the cyclone. Also ensure all hair and dirt stuck in the cyclone are removed.                                                                                                              |
|                                                                               | The dust container is not properly attached to the appliance.                                        | Empty the dust container and attach the dust container correctly to the appliance.                                                                                                                                                                           |
|                                                                               | The appliance is rotated or flipped when the power is off.                                           | Keep the appliance upright when the power is off.                                                                                                                                                                                                            |
| The appliance does not move smoothly across the floor when cleaning a carpet. | The floor type recognition function is not on.                                                       | Switch on the floor type recognition function in the digital menu.                                                                                                                                                                                           |
|                                                                               | The selected suction power has been too high.                                                        | Decrease the suction power. See also the user manual.                                                                                                                                                                                                        |
| The brush does not turn anymore.                                              | The brush is clogged with hair or dirt.                                                              | Clean the brush by hand or with a pair of scissors.                                                                                                                                                                                                          |
|                                                                               | (code i4) The brush may stop turning when it encounters too much resistance from a high-pile carpet. | Switch off the appliance and then switch it back on again.                                                                                                                                                                                                   |

| Problem                                                                    | Possible cause                                                                                                          | Solution                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                            | The roller brush has not been assembled properly into the nozzle after cleaning.                                        | Follow the instructions in the cleaning chapter of the user manual to slide the roller brush into the nozzle properly. Secure the roller brush inside the nozzle by snapping the locking lever in place.                                                     |
|                                                                            | (code: E9) The motorized nozzle is overheated.                                                                          | Switch off the appliance and wait 15 minutes. Touch the upper housing of the nozzle to feel if it is still warm. If the nozzle is still warm, wait longer for the nozzle to cool down. Once the nozzle has cooled down, try switching the appliance back on. |
| The LEDs in the nozzle do not come on.                                     | The nozzle has not been attached to the tube or appliance properly.                                                     | Attach the nozzle to the appliance or handheld properly.                                                                                                                                                                                                     |
|                                                                            | The lighting feature is disabled.                                                                                       | Enable this feature in the menu. Adjust the brightness of nozzle LEDs in the menu.                                                                                                                                                                           |
| The LEDs in the handheld do not come on.                                   | The lighting feature is disabled.                                                                                       | Enable this feature in the menu. Adjust the brightness of handheld LEDs in the menu.                                                                                                                                                                         |
| The light in the accessory does not come on.                               | The accessory is attached to the tube.                                                                                  | Remove the tube and attach the accessory directly to the handheld.                                                                                                                                                                                           |
|                                                                            | The accessory is not attached to the appliance properly.                                                                | Attach the accessory to the appliance properly.                                                                                                                                                                                                              |
| The lighting in my nozzle, handheld, and accessories is not bright enough. | The brightness is dimmed.                                                                                               | Adjust the brightness of lighting in the menu.                                                                                                                                                                                                               |
| The appliance is not charging.                                             | The power plug is not connected properly to the appliance or the adapter is not inserted into the wall socket properly. | Make sure that the power plug is connected properly to the appliance and that the adapter is inserted into the wall socket properly.                                                                                                                         |
|                                                                            | The power plug is not placed properly in the charging station.                                                          | Make sure the plug is fixed properly in the charging station. Check if the plug is angled and the charging station is holding the plug in place.                                                                                                             |
|                                                                            | (code i7) An adapter other than the supplied adapter is being used.                                                     | Make sure that you use the adapter supplied.                                                                                                                                                                                                                 |
|                                                                            | (code i10) The battery is not properly installed.                                                                       | Make sure that the battery is pushed all the way in the slot and properly installed.                                                                                                                                                                         |
|                                                                            | (code E5) The battery malfunctions.                                                                                     | The battery has failed. Replace the battery.                                                                                                                                                                                                                 |

| Problem                                                                       | Possible cause                                                     | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------|--------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                               |                                                                    | If you have checked the above and the appliance still does not charge, take it to a Philips service center or contact the Consumer Care Center.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| The appliance is charging very slow.                                          | An external adapter or an adapter from other appliances is used.   | Charge the appliance with the supplied adapter.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| The battery is charged and attached, but the appliance cannot be switched on. | The appliance is still connected to the adapter.                   | Remove the appliance from the adapter before restarting it.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                                                                               | (code: E1) Something is wrong with the appliance.                  | Remove the battery, wait 10 seconds, and then put the battery back. If this does not work, please take the appliance to a Philips service center or contact the Consumer Care Center.                                                                                                                                                                                                                                                                                                                                                                                                                           |
| The display shows the filter icon (code: i8).                                 | The filter is dirty.                                               | Clean the filter. Follow the instructions on the screen or in the users manual.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                                                               |                                                                    | <p>If you keep getting an i8 information code after cleaning the filter, you can consider the following solutions:</p> <ul style="list-style-type: none"> <li>- If you have a spare clean filter, you can replace the old filter with the new one. Then, use the handheld to carefully clean the old foam filter and the filter case.</li> <li>- Alternatively, if you have access to another vacuum cleaner or a mini vacuum, you can use it to easily clean both the foam filter and the filter case.</li> </ul> <p>Note: Always ensure that a filter is present in the appliance before switching it on.</p> |
|                                                                               | The filter is old.                                                 | You can buy new filters in the online Philips shop at <a href="http://www.philips.com/support">www.philips.com/support</a> or at your Philips dealer.                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                                                               |                                                                    | If you have checked the above and the appliance still shows the error, take it to a Philips service center or contact the Consumer Care Center.                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| The mini Turbo brush does not function properly.                              | The roller brush is blocked.                                       | Remove hairs from the brush with a pair of scissors. Follow the instructions in the user manual.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|                                                                               | The roller brush is blocked by fabric or surfaces during cleaning. | Keep the mini Turbo brush aligned with the surface and do not push the Turbo brush into soft surfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

| Problem                                               | Possible cause                                                                                                                                                                           | Solution                                                                                                                                                                                      |
|-------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                       | The roller brush is not properly inserted into the mini Turbo brush.                                                                                                                     | Make sure that roller brush and the mini Turbo brush are properly connected and that there is no gap between the parts. Follow the instructions in the manual.                                |
| The suction power does not feel stable.               | Nothing is wrong. This is the feature of "Floor Type Recognition" being triggered. Your appliance is detecting the floor type and cleaning with an optimized performance for that floor. | No action needed. If you prefer to clean with a consistent power of your choice, disable this smart feature in the menu of your appliance.                                                    |
| The Floor Type Recognition is not reacting logically. | The brush is clogged with hair or dirt.                                                                                                                                                  | Clean the brush with a pair of scissors or by hand. See the instructions in the user manual.                                                                                                  |
| The appliance delivers static shocks.                 | The appliance builds up static electricity. The lower the air humidity, the more static electricity is build up.                                                                         | Discharge the appliance by frequently holding the tube against other metal objects in the room (for example the legs of a table or chair, etc.). Or raise the air humidity level in the room. |
|                                                       | The dust and dirt that is vacuumed up is static.                                                                                                                                         | Empty the dust container and clean the filter according to the instructions in the user manual.                                                                                               |

## Wet cleaning

| Problem                                                         | Possible cause                                                                               | Solution                                                                                                                                                                                                                 |
|-----------------------------------------------------------------|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The water flow from the water tank is reduced.                  | The wetting strip is blocked by dirt.                                                        | Remove the wetting strip and clean it. Place the clean wetting strip back.                                                                                                                                               |
|                                                                 | The microfiber mopping pad is not placed correctly and blocks the wetting strip as a result. | Make sure that you place the mopping pad correctly. Check the user manual for proper placement.                                                                                                                          |
|                                                                 | The water tank is empty or nearly empty.                                                     | Refill the water tank.                                                                                                                                                                                                   |
|                                                                 | A microfiber mopping pad is used that is not supplied by Philips.                            | Only use an original Philips microfiber mopping pad. The mopping pads can be bought in the online Philips shop at <b><a href="http://www.philips.com/support">www.philips.com/support</a></b> or at your Philips dealer. |
|                                                                 | Lime scale has build up in the wetting strip.                                                | Buy a new wetting strip in the online Philips shop at <b><a href="http://www.philips.com/support">www.philips.com/support</a></b> or at your Philips dealer.                                                             |
| Too much water flows out of the water tank at a too high speed. | The water tank cap is not attached properly.                                                 | Check the cap and make sure it is fully and properly closed.                                                                                                                                                             |

| Problem                       | Possible cause                                                    | Solution                                                                                                                                                                                                                                   |
|-------------------------------|-------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                               | The strip is not placed properly in the bottom of the water tank. | Check the strip and make sure that it is fitted properly in the bottom plate of the water tank.                                                                                                                                            |
| The floor dries with stripes. | Too much liquid cleaner has been added to the water.              | Use only a few drops of liquid cleaner or use a cleaner that foams less.                                                                                                                                                                   |
|                               | The microfiber mopping pad is not placed correctly.               | Make sure that the mopping pad is placed correctly. Check the user manual for proper placement.                                                                                                                                            |
|                               | An incorrect mopping pad is used.                                 | Only use Philips XV1670/02 microfiber mopping pad for the 7000 series. The mopping pads can be bought in the online Philips shop at <b><a href="http://www.philips.com/support">www.philips.com/support</a></b> or at your Philips dealer. |

# İçerik

|                                                  |    |
|--------------------------------------------------|----|
| <b>Giriş</b>                                     | 36 |
| <b>Genel açıklamalar</b>                         | 36 |
| <b>İlk kullanımdan önce</b>                      | 37 |
| Installing the wall mount                        | 37 |
| <b>Cihazın kullanıma hazırlanması</b>            | 38 |
| <b>Cihazın kullanımı</b>                         | 39 |
| Cihazın birleştirilmesi                          | 39 |
| Yumuşak ve sert yüzeyleri vakumlu süpürme        | 40 |
| Sert yüzeyleri paspaslarken süpürme              | 41 |
| Çok yönlü kullanım ve aksesuarlar                | 43 |
| Özelleştirmeler ve ek bilgiler                   | 46 |
| <b>Kullanım sonrası – Bakım</b>                  | 48 |
| Her temizlik döngüsünden sonra sık bakım         | 48 |
| Aralıklı düzenli bakım                           | 51 |
| <b>Değişim</b>                                   | 59 |
| <b>Kullanıcı arayüzü sinyalleri ve anlamları</b> | 60 |
| <b>Sorun giderme</b>                             | 62 |
| Kuru temizlik                                    | 62 |
| Islak temizlik                                   | 66 |

## Giriş

Bu ürünü satın aldığınız için teşekkürler! Sunduğumuz destekten tam olarak yararlanmak için ürününüzü [www.philips.com/mycordlessvacuum-7000s](http://www.philips.com/mycordlessvacuum-7000s) adresinden kaydedin.


## Genel açıklamalar

- 1 Dijital ekran
  - a Pil seviyesi halka göstergesi
  - b Pil seviyesi yüzdesi
  - c Seçilen güç seviyesi
  - d 'Zemin Türü Tanıma özelliği etkinleştirme' simgesi
  - e Filtre temizleme hatırlatıcısı simgesi
- 2 Menü/Onayla düğmesi
- 3 + Düğmesi
- 4 – Düğmesi
- 5 Açma/kapama düğmesi
- 6 El aparatı
- 7 Toz kovası
- 8 Pil
- 9 Yedek filtre
- 10 Kolay boşaltma düğmesi
- 11 Toz kovası açma düğmesi


- 12 Adaptör
- 13 Vidalar
- 14 Duvara montaj aparatı
- 15 Boru
- 16 TriActive Akıllı LED Işıklı başlık
- 17 Su haznesi ve Mikrofiber paspaslama bezi
- 18 PetPro Başlık (sadece XC7155, ,XC7157)
- 19 Kombine araç
- 20 Yumuşak fırça (sadece XC7157)
- 21 Döşeme başlığı (sadece XC7155, ,XC7157)
- 22 Aralık temizleme başlığı

## İlk kullanımdan önce


### Installing the wall mount

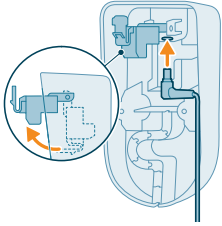


- 1 Duvara montaj aparatını ters çevirin ve gri kolun mandalını açın. Şarj bağlantı noktasını takarken metal parçanın görünür olduğundan ve duvar montaj aparatının ön tarafında dik konumda olduğundan emin olun.

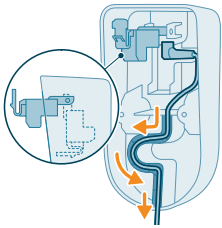

- 2 Kabloyu belirlenen oluğun içinden geçirerek düzgün bir şekilde düzenleyin.

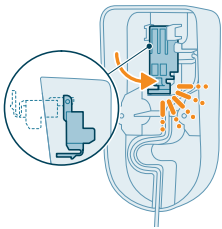


- 3 Gri kolu kapatın. Gri kolun yerine tam olarak sabitlendiğinden ve "KLİK" sesi duyduğunuzdan emin olun.

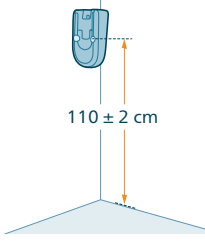


- 4 Duvar montaj aparatını duvarda istediğiniz konuma güvenli bir şekilde takarken montaj vidası deliklerinin zeminden yaklaşık 110 cm yüksekte olmasını sağlayın.

**⚠ Dikkat: Elektrik çarpması riskini önlemek için duvara montaj aparatının sabitleneceği delikleri açarken dikkatli olun.**

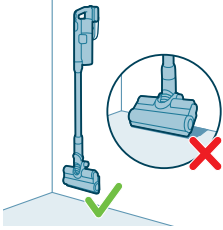

**i** Not: Duvar montaj aparatını yerleştirme şeklinin, başlık zemine temas etmeden cihazın tamamının duvarda asılı kalmasını sağladığını doğrulayın.





- 5 Cihazınızı saklamak ve şarj etmek için en ideal konumu ve yüksekliği belirledikten sonra duvar montaj aparatını yerine sabitlemek için vidaları iyice sıkın.

## Cihazın kullanıma hazırlanması

Cihazda Li-lyon pil bulunur. Cihaz tamamen boş olduğunda şarj olması yaklaşık 6 saat sürer.


- 1 Pil paketini cihazın ana gövdesine takarken güvenli bir bağlantı kurulduğunu belirten "KLİK" sesini duyduğunuzdan emin olun.

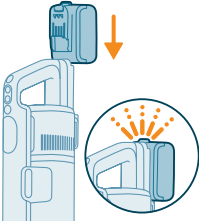

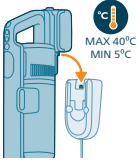

2 Cihazı takılı duvar montaj aparatına yerleştirerek şarj edin.

**⚠ Uyarı: Cihazı 5 °C ile 40 °C arasında bir sıcaklıkta saklayın ve şarj edin.**

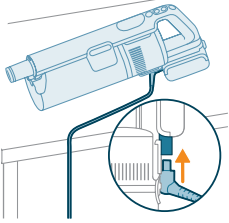


**i Not:** İsterseniz el aparatını düz ve sabit bir yüzeye yerleştirebilir ve şarj kablosunu doğrudan cihaza bağlayabilirsiniz.




3 Cihaz, 6 saat içinde tamamen şarj olacak şekilde tasarlanmıştır. Şarj olma sürecini ekrandan izleyebilirsiniz. Cihaz tamamen şarj olduğunda ekranda %100 değeri gösterilir. Birkaç dakika sonra ekran kapanır.

## Cihazın kullanımı

### Cihazın birleştirilmesi

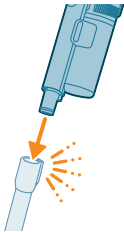


1 El aparatını boruya takın. "KLİK" sesi duyduktan sonra takma işlemini onaylayın.

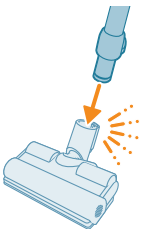


2 Boruyu başlığa takın. "KLİK" sesi duyduktan sonra takma işlemini onaylayın.

## Yumuşak ve sert yüzeyleri vakumlu süpürme

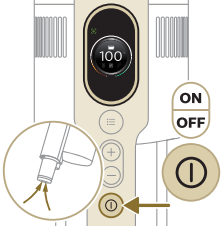

1 Cihazı çalıştırmak için açma/kapama düğmesine basın.

**i** Not: Cihazı kapatmak için açma/kapama düğmesine tekrar basın.

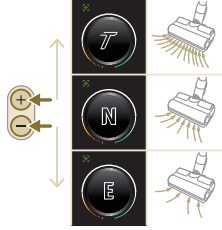

2 + ve - düğmelerini kullanarak üç farklı güç ayarı arasında geçiş yapın.


**T** - turbo mod

**N** - normal mod

**E** - ekonomik mod




3 Vakumlu süpürgeyle sert veya yumuşak zeminlerde temizlik yapabilirsiniz.

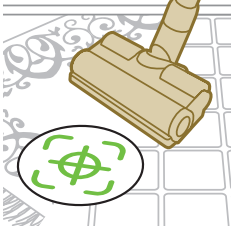

**i** Zemin Türü Tanıma özelliği etkinleştirildiğinde cihaz, zemin türünü tanır ve seçtiğiniz güç ayarları dâhilinde performansını otomatik olarak en ideal duruma getirir. Bu özelliği devre dışı bırakmak için aşağıdaki ayarların nasıl özelleştirildiğine göz atın.



**A** Uyarı: Su veya diğer sıvıları vakumlu süpürgeyle temizlemeyin.

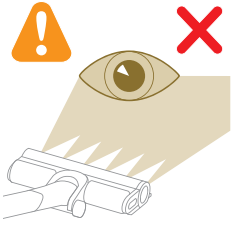

**⚠ Dikkat:** Işıklı LED'lere doğrudan bakmayın veya LED ışıkları başkasının gözlerine tutmayın. LED ışığı çok parlaktır.


## Sert yüzeyleri paspaslarken süpürme

**⚠ Dikkat:** Su haznesini sadece su geçirmez kaplamalı (muşamba, emaye, seramik ve vernikli parke gibi) sert zeminlerde ve taş zeminlerde (mermer gibi) kullanın. Zemininiz su geçirmezlik için işlem görmediyse temizlik için su kullanıp kullanamayacağınızı üreticiye danışın. Su geçirmez kaplaması hasar görmüş sert zeminlerde su haznesini kullanmayın.


**i Not:** Su haznesini halıları temizlemek için kullanmayın.


**i Not:** Su izi bırakabileceği için su haznesi cihaza takılıyken cihazı yana doğru hareket ettirmeyin. Yalnızca ileri geri hareket ettirin.

**1** Kullanmadan önce mikrofiber paspaslama bezini önceden suyla ıslatın.

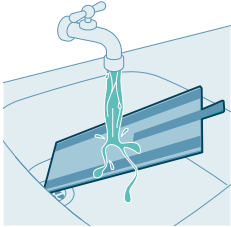


**2** Hazneyi suyla doldururken su sıcaklığının 50 °C'yi aşmadığından emin olun.

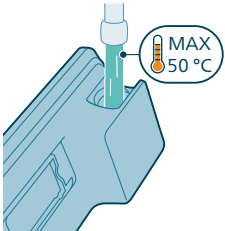


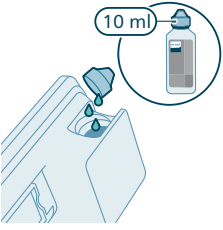

- 3 (İsteğe bağlı) Su haznesine sıvı zemin temizleyici eklemek istiyorsanız çözülebilen, az köpüren veya köpürmeyen türden bir temizleyici kullanın. XV1792 Philips Zemin Temizleyici'yi öneririz. Suya sadece birkaç damla sıvı temizleyici ekleyin.

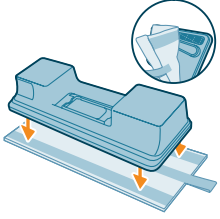

- 4 Mikrofiber paspaslama bezini su haznesinin altında sabitleyin. Cırt cırtlı şeritleri su haznesinin altına ve kumaşın arkasına hizalayın.

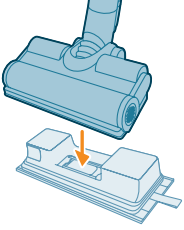

- 5 Hazırlanan su haznesini su başlığına taktıktan sonra başlamaya hazır olursunuz.



- 6 Cihazı çalıştırmak için açma/kapama düğmesine basın. Başlık takılmış olan su modülü ile sert zeminleri etkili bir şekilde temizleyebilirsiniz.



**i** Not: Su modülü, halı gibi yumuşak zeminler için uygun değildir.



**⚠ Dikkat: Su modülü, su birikintilerini toplamak için kullanılmamalıdır.**

### İpuçları ve diğer önemli bilgiler

- Vakumlu Süpürge ve Paspas düzeneği sert zemininizdeki sıvılar ve lekeler dâhil her türlü kiri temizlediği için paspaslama yapmadan önce zemini vakumla süpürmeniz gerekmez. Halılar ve kilimler üzerinde sadece Vakumlu Süpürge düzeneğini kullanın.
- Cihazı kapatırken hareket ettirmezseniz cihaz yerde küçük bir su birikintisi bırakabilir. Cihazı kapatırken hareket ettirerek su birikintisinin boyutunu küçültebilirsiniz. Gerekirse son damlaları bir bezle alabilirsiniz.

### Kullanım kısıtlamaları

- Vakumlu Süpürge ve Paspas düzeneği, kaplamasız ahşap zeminler dışında her türlü sert zeminde vakumlu süpürme ve paspaslama yapmak için kullanılabilir.
- Vakumlu Süpürge ve Paspas düzeneği, sert zeminlerin normal temizliğinde kullanım için tasarlanmıştır. Bu cihazı kullanırken sert zemininizin temizlik talimatlarına daima uyun.
- Temiz su haznesindeki suya XV1792 Philips Zemin Temizleyici dışında bir sıvı zemin temizleyici eklemek istiyorsanız XV1792 Philips Zemin Temizleyici gibi suda çözülebilen, az köpüren veya köpürmeyen bir sıvı zemin temizleyici kullanın.
- Temiz su haznesinin kapasitesi 250 ml olduğundan suya yalnızca birkaç damla (maks. 10 ml) sıvı zemin temizleyici eklemeniz yeterlidir.
- Vakumlu Süpürge ve Paspas düzeneğini muşamba zeminlerde kullanırken muşambanın başlığa çekilmesini önlemek için zeminin düzgün bir şekilde sabitlenmiş olduğundan emin olun.
- Cihazı kapalıyken halının veya kilimin üzerinde gezdirirseniz ya da üzerinden kaldırırsanız atık su damlaları halınıza veya kiliminize akabilir.
- Cihazı konvektör zeminlerindeki ızgaralar üzerine bastırmayın. Cihaz ızgara üzerinde hareket ettirildiğinde başlıktan gelen suyu alamayacağından su, konvektör oyuğunda birikir.
- Su izi bırakabileceği için temizlik sırasında başlığı yerden kaldırmayın, başlığı yanlara doğru hareket ettirmeyin ve cihazı sert şekilde döndürmeyin. Yalnızca ileri geri hareket ettirin.

**i** Not: Çalışma süresi temizlik sırasında kullanılan güç seviyesine bağlıdır.

## Çok yönlü kullanım ve aksesuarlar

**⚠ Uyarı: Aksesuar kullanırken su veya diğer sıvıları vakumlu süpürgeyle temizlemeyin.**

**⚠ Dikkat: Işıklı LED'lere doğrudan bakmayın veya LED ışıkları başkasının gözlerine tutmayın. LED ışığı çok parlaktır.**


## El aparatını kullanma

Tozları vakumla süpürmek için el aparatını herhangi bir temizleme aracına ihtiyaç duymadan doğrudan kullanabilirsiniz.




## Başlığı kullanma

1 Başlığı doğrudan el aparatına takın.

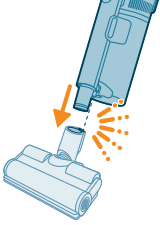


2 Bu kombinasyon, merdiven gibi dinamik yüzey yüksekliklerini temizlemek içindir.

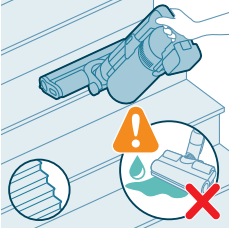


## PetPro Başlığı kullanma

PetPro Başlık, evcil hayvan tüylerini ve kırıntılar gibi küçük kalıntıları etkili bir şekilde temizler. Yataklar ve kanepeler gibi yumuşak yüzeyler için idealdir.

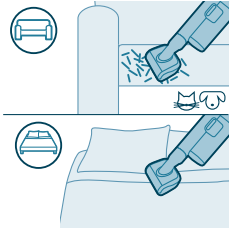



PetPro Başlığı takmak için el aparatının borusunu PetPro Başlığa yerleştirin. Güç ayarını temizlik ihtiyacınıza göre ayarlayın.

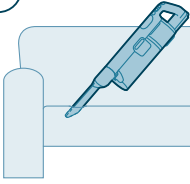


### Aralık temizleme aracını kullanma

Aralık temizleme başlığı, koltuk minderlerinin arası, süpürgelikler veya araba içleri gibi dar ve sıkışık alanları temizlemek için kullanılabilir.




Aralık temizleme aracını takmak için boruyu veya el aparatını aralık temizleme araca yerleştirin.

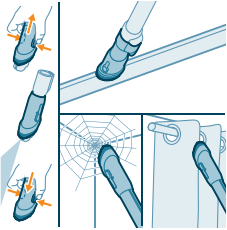

### Kombine aracı kullanma

Kombine aracın örümcek ağları veya perdeler gibi hassas yüzeyleri temizlemek için yumuşak bir fırçası ve pencere çerçeveleri gibi dar ya da ulaşılması zor noktalar için dar bir başlığı bulunur.

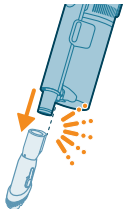

Kombine aracı takmak için boruyu veya el aparatını kombine araca yerleştirin.

### Yumuşak fırçayı kullanma


Yumuşak fırça; abajurlar, panjurlar ve perdeler gibi nazık veya hassas yüzeyleri zarar vermeden temizler. XC7065, XC7067 ve XC7167 modellerine dahildir.



Yumuşak fırçayı takmak için boruyu veya el aparatını yumuşak fırçaya yerleştirin.

### Döşeme aracını kullanma

Döşeme aracı; kanepeler, minderler ve sandalyeler gibi yumuşak kumaş mobilyaları temizler. XC7065, XC7067 ve XC7167 modellerine dahildir.

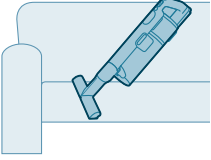

Döşeme aracını takmak için boruyu veya el aparatını döşeme aracına yerleştirin.

## Özelleştirmeler ve ek bilgiler



Cihaz, menüde özelleştirmek ve izlemek için çeşitli seçeneklere sahiptir.


- 1 Menü ayarlarına erişmek için menü düğmesine basın.
- 2 + ve - düğmelerini kullanarak seçenekler arasında geçiş yapın. Bu seçeneklere aydınlatmanın ayarlanması, Zemin Türü Tanıma özelliğinin etkinleştirilmesi veya devre dışı bırakılması, cihazınızla ilgili ek bilgilere erişme ve önceki ekrana dönme dâhildir.
- 3 İstediğiniz seçenek vurgulandığında menü düğmesine tekrar basarak seçiminizi onaylayın.



## Aydınlatma parlaklığını değiştirme

Menü düğmesine basarak aydınlatma özelliğine geçiş yapın. Menü düğmesine tekrar basarak onaylayın.


Aydınlatma parlaklığını değiştirmek için mevcut seviyeler arasında geçiş yapın ve onaylamak için menü düğmesine basın.

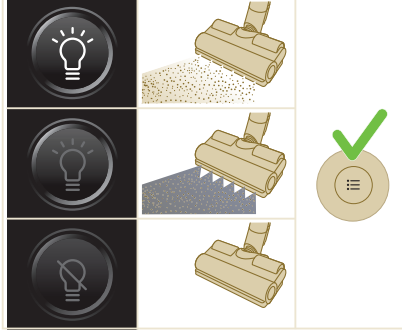

## Zemin Türü Tanıma

Menü düğmesine basarak Zemin Türü Tanıma özelliğine geçiş yapın. Menü düğmesine tekrar basarak onaylayın.

Zemin Türü Tanıma ekranında bu işlemleri geçiş yapın ve kararınızı onaylamak için menü düğmesine basın. Başarılı bir şekilde etkinleştirildiğinde, siz ana ekrana döndükten sonra ekranın sol üst köşesinde yeşil bir simge görünür.

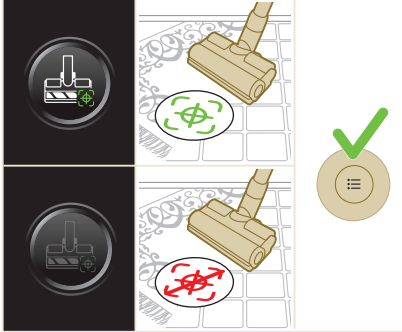

**i** Not: Zemin Türü Tanıma özelliği, yalnızca motorlu başlık el aparatına takıldığında etkinleştirilebilir veya devre dışı bırakılabilir. Sonuç olarak ana cihaza, ana fırçayla birlikte motorlu başlık takılmadığında menünüzde bir seçenek eksik olacaktır. Menünüzde bu Zemin Türü Tanıma öğesini görmek için motorlu başlığı takın.

**i** Not: Cihazınızı ilk teslim aldığınızda Zemin Türü Tanıma özelliği etkinleştirilmiş durumdadır.

**i** Not: Başlık hareket ederken farklı temizleme yüzeylerini tanımladığında Zemin Türü Tanıma işlevi etkin duruma gelir.


**i** Zemin Tipi Tanıma özelliği, Hassas Zemin Fırçası (XC7067 modeline dahildir) ile birlikte çalışmaz.



### Ek bilgiler


Menü düğmesine basarak "ek bilgiler" seçeneğine geçiş yapın. Menü düğmesine tekrar basarak onaylayın.

"Ek bilgiler" ekranında filtre durumu, pil durumu, toplam kullanım süresi, cihazınızın modeli ve ek çevrimiçi bilgiler için QR kodu erişimine göz atabilirsiniz.

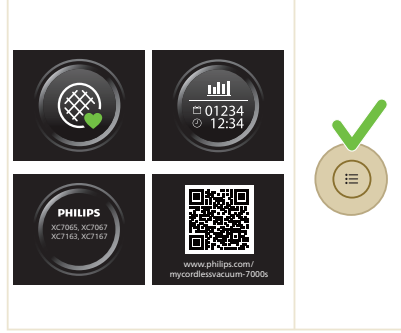

### Geri Dön

Menüden çıkmak ve önceki ekrana dönmek için "Geri Dön" seçeneğini belirleyin.

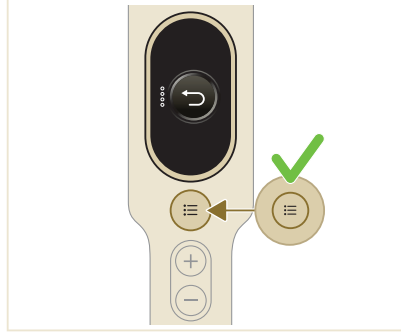



## Kullanım sonrası – Bakım

### Her temizlik döngüsünden sonra sık bakım

#### Toz yönetim sistemi bakımı

Toz kovasını her kullanımdan sonra veya toz MAX seviye göstergesine ulaştığında boşaltın.

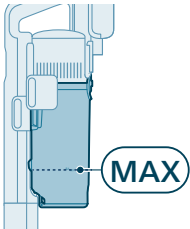

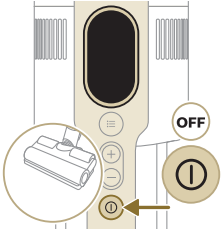

1 Cihazı kapatın.



2 Toz kovasını içeren el aparatını borudan çıkarın.





3 Toz kovasını çöp kutusunun üzerinde tutun ve Kolay Boşaltma Düğmesine (1) basarak kovayı boşaltın (2).

## Su haznesi bakımı


Her kullanım sonrasında su haznesini temizleyin.

1 Mikrofiber paspaslama bezini çıkarın.

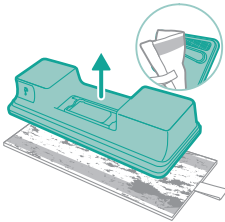


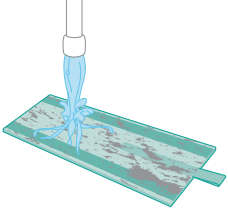


- 2 Paspaslama bezini musluğun altında durulayın ve elde veya çamaşır makinesinde yıkayın.

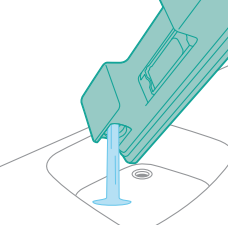


- 3 Su haznesinde kalan suyu boşaltın.

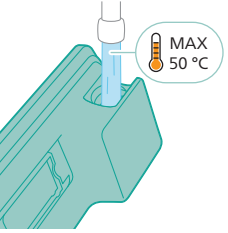


- 4 Su haznesini su ile doldurun.

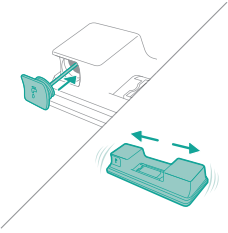

- 5 Su haznesini düzgün şekilde kapatın ve deterjan kalıntılarını gidermek için su haznesini sallayın.

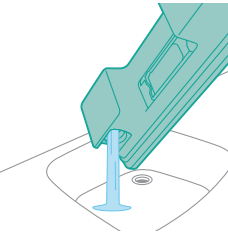

- 6 Su haznesini boşaltın ve kuruması için açık bırakın.

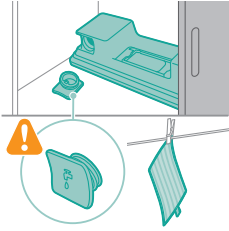


- 7 Saklama sırasında hazne kapağını kaybetmediğinizden emin olun. Kuruması için mikrofiber paspaslama bezini asın.


## Aralıklı düzenli bakım

### Filtreyi temizleme


Filtreyi en az ayda bir defa veya filtre temizliği bildirimini (i8) gördüğünüzde temizleyin.

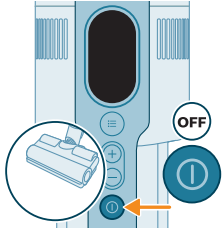


- 1 Cihazı kapatın.

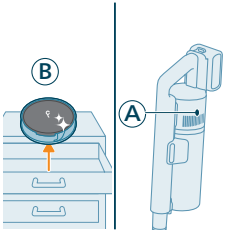


- 2 Kirliliği (A) hala cihazın içindeyken, yedek filtreyi (B) yan tarafta hazır bulundurduğunuzdan emin olun.

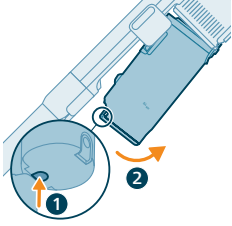


3 Kova çıkarma düğmesine basarak kovayı çıkarın.

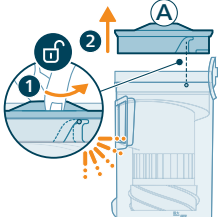


4 Filtreyi (A) saat yönünün tersinde döndürerek toz kovasından çıkarın.

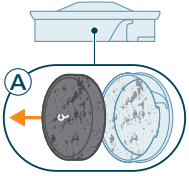


5 Köpük filtreyi (A) plastik filtre kutusundan çıkarın.

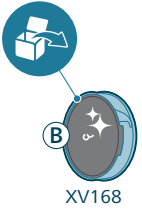


6 Yedek filtreyi (B) ambalajından çıkarın.

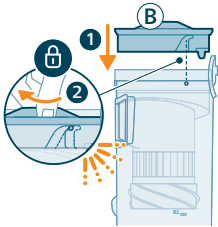


7 Temiz filtreyi (B) toz kovasına takın. Filtreyi yerine sabitlemek için saat yönünde çevirin.

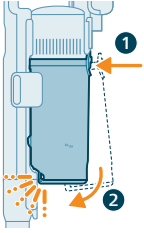


- 8 Toz kovasını el aparatına geri yerleştirin. Yerine takmadan önce kovanın filtre tarafını hizalayın.

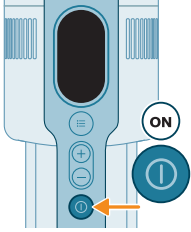


- 9 Cihazı açın.

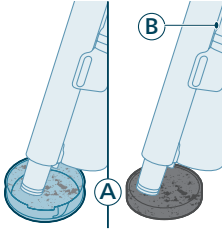

- 10 Kirlenmiş filtre kutusunu ve köpük filtreyi (A) süpürgeyle alın.

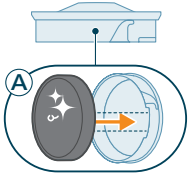


- 11 Temiz köpük filtreyi (A) temiz filtre kutusuna tekrar takın.

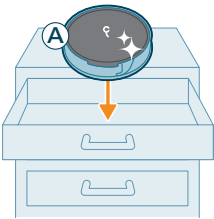


**i** Not: Artık iyice temizlenmiş olan filtre (A), mevcut filtreyi (B) temizlemek gerektiğinde ileride kullanılmak üzere saklanabilir.

## Kovayı ve siklonu temizleme


1 Cihazı kapatın.

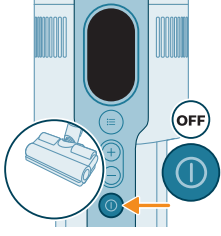

2 Kova çıkarma düğmesine basarak kovayı çıkarın.

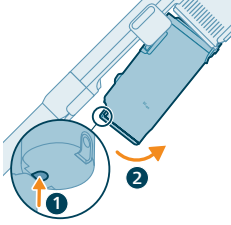


3 Siyah sapı tutun. Siklonu kovadan yukarı doğru kaldırarak toz kovasından çıkarın.




4 Siklonu çöp kutusuna vurarak kalan tozları ve kiri temizleyin.



5 Kapsamlı bakım için toz kovasını ve siklonu akan musluk suyunun altında veya ılık sabunlu suyla temizleyin.

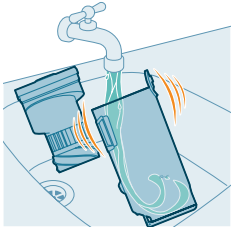

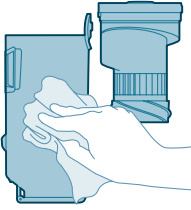


6 Temizlenen toz kovasını ve siklonu silerek kurulayın.

**Dikkat: Parçaları tekrar birleştirmeden önce hepsinin kuru olduğundan emin olun.**

Not: Parçaların hepsi bulaşık makinesinde yıkanamaz.



7 Siklonu toz kovasına geri takın.

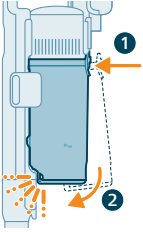


8 Birleştirilmiş kovayı yerine geri takın. Yerine takmadan önce ilk olarak kovanın filtre tarafını hizalayın.


Not: Bakım sonrasında, kullanmadan önce mutlaka filtrenin cihaza takılmış olduğundan emin olun.


## PrecisionPower Akıllı Başlık bakımı

1 Başlık fırça rulosunu temizlemeden önce mutlaka cihazı kapatın.

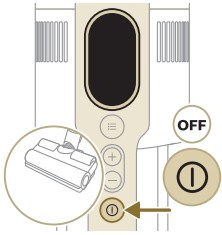


2 Fırça rulosuna erişmek için başlığın yanındaki düğmeyi bulun. Açmak için düğmeye basın ve döndürün.

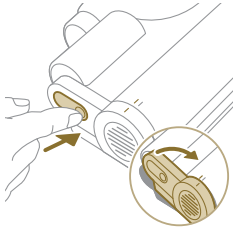


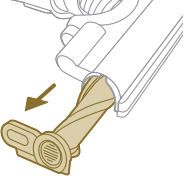


3 Fırça rulosunu ve başlığın yan kapağını yavaşça çıkarın.

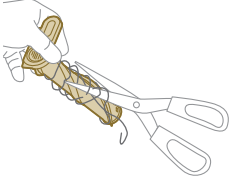

4 Dolanmış saçları fırça rulosundan dikkatlice çıkarın. Kirlerden kurtulmak için makas kullanın.

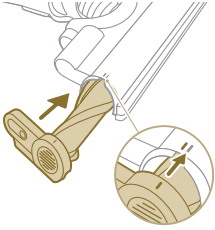


5 Yeniden takarken fırça rulosunun doğru şekilde hizalandığından emin olun.

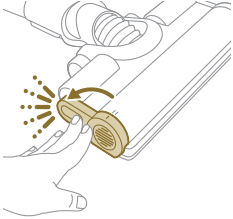


6 Başlık fırça rulosunu takmak için "KLİK" sesi duyana kadar bastırın.

### PetPro Başlığın bakımı


1 Temizleme alanına erişmek için fırçayı ters çevirin.

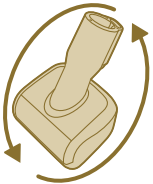


- 2 Fırçayı bulunduğu konumdan çıkarmak için yan düğmeyi kaydırın.

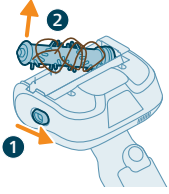

- 3 Fırçadaki kirlerden kurtulmak için ellerinizi veya makas kullanın.

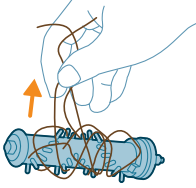


- 4 Fırçayı yeniden takarken ilk önce bir tarafı, ardından diğer tarafı takın. Fırça düzgün bir şekilde takıldığında bir "KLİK" sesi duyarsınız.

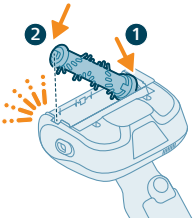


### Su haznesi bakımı


Kireç birikmesini önlemek için su haznesinde ayda bir kez kireç temizliği yapın.

- 1 Ölçü kabına biraz kireç çözücü sıvı ekleyin.

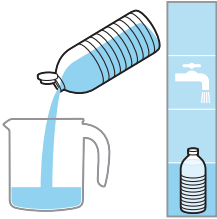


- 2 Ölçü kabına belirtilen miktarda su ekleyin.

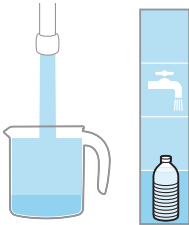


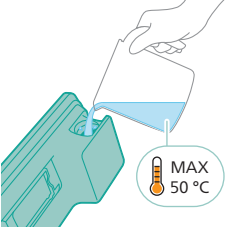


3 Sıvı karışımı su haznesine ekleyin.

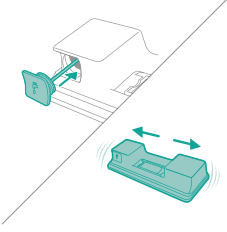

4 Su haznesini düzgün bir şekilde kapatın ve ardından kireç çözücü sıvının eşit şekilde yayılması için su haznesini sallayın.

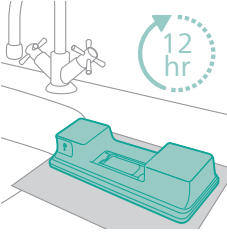


5 Su haznesini (paspaslama bezi olmadan) 12 saat boyunca dik konumda tutun. Su haznesinin tabanından yavaş yavaş su akması beklenir. Su haznesini lavabonun içine veya bir bezin üzerine koymanızı öneririz.

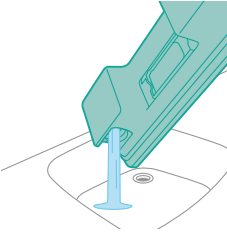


6 Su haznesinin içinde kalan tüm sıvıyı dökün ve hazneyi durulayın.


### Su şeridi bakımı

1 Derinlemesine temizlik için su haznesinin altındaki su şeridini çıkarın.

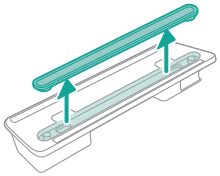

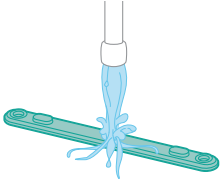

2 Su şeridini musluk altında durulayın.

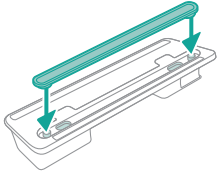


3 Temizledikten sonra su şeridini su haznesine tekrar takın.

## Değişim

Aksesuar veya yedek parça satın almak için [www.philips.com/parts-and-accessories](http://www.philips.com/parts-and-accessories) adresini ziyaret edin ya da Philips bayinize gidin. Ülkenizdeki Philips Müşteri Hizmet Merkezi ile de iletişime geçebilirsiniz.


Yedek parçalar ve model numaraları:

Yedek filtre XV1681/01

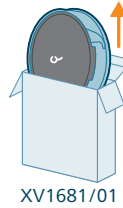


XV1681/01

Fırça rulosu CP0667/01

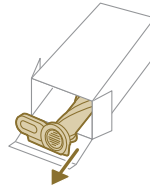


CP0667/01

Mikrofiber paspaslama bezi XV1670/02

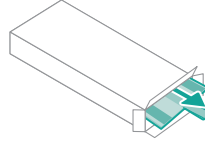

XV1670/02

Su şeridi CP0381/01



CP0381/01

**i** Not: En yüksek performansı sağlamak için filtreyi ve mikrofiber paspaslama bezini her 6 ayda bir değiştirin.

## Kullanıcı arayüzü sinyalleri ve anlamları

| Sinyal | Sinyalin anlamı                                                                                                                                                                                                                                                                                    |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E1     |  <p>Cihazın arızalanması.<br/>Pili çıkarı, 10 saniye bekleyin ve pili tekrar takın. Bu işe yaramazsa lütfen cihazı bir Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.</p> |
| E2     |  <p>Cihaz, çalışma sıcaklığının altında çalıştırılıyor.<br/>Cihazı daha sıcak bir odaya alın. Cihazı 5 °C'nin altındaki veya 40 °C'nin üzerindeki sıcaklıklarda saklamayın, şarj etmeyin veya kullanmayın.</p>  |
| E3     |  <p>Cihaz, çalışma sıcaklığının üzerinde çalıştırılıyor.<br/>Cihazı daha soğuk bir odaya alın. Cihazı 5 °C'nin altındaki veya 40 °C'nin üzerindeki sıcaklıklarda saklamayın, şarj etmeyin veya kullanmayın.</p> |
| E5     |  <p>Pil hasar görmüş.<br/>Cihazı bir Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.</p>                                                                                  |

## Sinyal

## Sinyalin anlamı

E9



Başlık, çalışma sıcaklığının üzerinde çalıştırılıyor.

Cihazı kapatın ve 15 dakika bekleyin. Başlığın üst muhafazasına dokunarak hâlâ sıcak olup olmadığına bakın. Başlık hâlâ sıcaksa bir süre daha başlığın soğumasını bekleyin. Başlık soğuduktan sonra cihazı tekrar çalıştırmayı deneyin.

i4



Başlık tıkanmıştır.

Cihazın kapalı olduğundan emin olun. Başlığı kullanım kılavuzuna göre temizleyin ve boruyu ana cihazdan çıkarak boruyu kontrol edin. Başlıkta veya boruda bulunan nesneyi çıkarın ve cihazı yeniden başlatın.

i5



Hava akımı kanalında yabancı bir madde sıkışmıştır.

Cihazın kapalı olduğundan emin olun. Başlığı kullanım kılavuzuna göre temizleyin ve boruyu ana cihazdan çıkarak boruyu kontrol edin. Başlıkta, boruda veya el süpürgesinde bulunan nesneyi çıkarın ve cihazı yeniden başlatın.

i6



Adaptör çıkarılmamıştır.

Cihazı çalıştırmadan önce adaptörü çıkarın.

i7



Yanlış adaptör kullanılmıştır.

Cihazı şarj etmek için sadece orijinal adaptörü kullanın.

i8



Filtre kirlenmiştir.

Filtreyi temizleyin. Ekrandaki veya kullanım kılavuzundaki talimatları izleyin. Yeni filtreleri [www.philips.com/support](http://www.philips.com/support) adresindeki çevrimiçi Philips mağazasından ya da Philips bayinizden satın alabilirsiniz.

Filtreyi temizledikten sonra i8 bilgilendirme kodu almaya devam ediyorsanız aşağıdaki sorun giderme tablosuna göz atın.

i10



Pil düzgün takılmamıştır.

Pili çıkarın ve daha sonra tekrar takın. Bu işe yaramazsa lütfen cihazı bir Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.



Pil seviyesi düşüktür ve şarj edilmesi gerekir. Cihazı veya pili önerilen şarj etme yöntemiyle şarj edin.

## Sorun giderme

Bu bölümde, cihazla ilgili en sık karşılaşılabileceğiniz sorunlar özetlenmektedir. Sorunu aşağıda verilen bilgileri kullanarak çözemiyorsanız sık sorulan sorular listesi için [www.philips.com/support](http://www.philips.com/support) adresini ziyaret edin veya ülkenizdeki Müşteri Destek Merkezi ile iletişim kurun.

### Kuru temizlik

| Sorun                                                     | Olası neden                                                                             | Çözüm                                                                                                                                                                                                                                   |
|-----------------------------------------------------------|-----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cihaz, açma/kapama düğmesine basıldığında yanıt vermiyor. | Ekranda pil boş simgesi görüntülenir.                                                   | Pili şarj etmek için cihazı şarj istasyonuna bağlayın veya elektrikli el süpürgesini doğrudan adaptörün elektrik fişine takın.                                                                                                          |
| Şarj istasyonu duvarda sabit durmuyor.                    | Şarj istasyonunu tutan vidalar gevşektir.                                               | Vidaları sıkın.                                                                                                                                                                                                                         |
|                                                           | Vidalar doğru boyutta değildir.                                                         | Şarj istasyonunu verilen vidalarla monte edin.                                                                                                                                                                                          |
|                                                           | Şarj istasyonu sabit bir duvara takılmamıştır.                                          | Şarj istasyonunun monte edildiği duvarın sabit olup olmadığını kontrol edin.                                                                                                                                                            |
| Cihaz aniden duruyor.                                     | Cihazın dâhilî bir arızası olduğunda düğmeler yanıt vermez ve ekran boş görünür.        | Cihazı şarj istasyonuna bağlayın veya elektrikli el süpürgesini doğrudan adaptöre takın. Ekranı kontrol edin. Bir hata kodu görüntülenirse kodun ne anlama geldiğini kullanım kılavuzunda bulabilirsiniz.                               |
|                                                           | (kod: E2, E3) Cihaz uygun sıcaklıkta çalışmıyor.                                        | Cihazın 5-40 °C sıcaklıkta kullanıldığından emin olun.                                                                                                                                                                                  |
|                                                           | (kod: i4, i5) Fırça rulosu sıkışmış veya hava akışı kanalına yabancı nesneler sıkışmış. | Cihazın kapalı olduğundan emin olun. Başlığı kullanım kılavuzuna göre temizleyin ve boruyu ana cihazdan çıkararak boruyu kontrol edin. Başlıkta veya boruda bulunan nesneyi çıkarın ve cihazı yeniden başlatın.                         |
|                                                           | (kod: E9) Motorlu başlık aşırı ısınmıştır.                                              | Cihazı kapatın ve 15 dakika bekleyin. Başlığın üst muhafazasına dokunarak hâlâ sıcak olup olmadığına bakın. Başlık hâlâ sıcaksa bir süre daha başlığın soğumasını bekleyin. Başlık soğuduktan sonra cihazı tekrar çalıştırmayı deneyin. |
| Cihazın emiş gücünde azalma var.                          | Filtre ve siklon bölmesi kirlidir.                                                      | Toz kovasını boşaltın. Filtreyi ve siklon bölgesini temizleyin. Cihaz düzenli olarak kullanılıyorsa filtrenin en az ayda bir defa yıkandığından emin olun. Siklon bölgesinde kalan tüy ve kirleri temizlediğinizden emin olun.          |
|                                                           | Toz haznesi cihaza düzgün şekilde takılmamıştır.                                        | Toz haznesinin düzgün şekilde takıldığından emin olun.                                                                                                                                                                                  |

| Sorun                                                   | Olası neden                                                                                      | Çözüm                                                                                                                                                                                                                                   |
|---------------------------------------------------------|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cihaz toz kaçırıyor.                                    | Filtre kirlidir.                                                                                 | Filtreyi temizleyin. Ayrıca kullanım kılavuzuna bakın.                                                                                                                                                                                  |
|                                                         | Cihazda filtre yok.                                                                              | Cihazda filtre olduğundan ve filtrenin doğru şekilde takıldığından emin olun.                                                                                                                                                           |
|                                                         | Siklon bir nesneyle engelleniyor.                                                                | Siklonun içinde sıkışan nesne olup olmadığını kontrol edin ve siklonu tıkanan nesneleri çıkarın. Ayrıca siklon bölümünde kalan tüy ve kirleri tamamen temizlediğinizden emin olun.                                                      |
|                                                         | Toz haznesi cihaza düzgün şekilde takılmamıştır.                                                 | Toz haznesini boşaltın ve doğru şekilde cihaza takın.                                                                                                                                                                                   |
|                                                         | Güç kapandığında cihaz dönmüş veya yere düşmüştür.                                               | Güç kapalıyken cihazı dik konumda tutun.                                                                                                                                                                                                |
| Cihaz halı temizlerken zeminde kolayca hareket etmiyor. | Zemin türü tanıma işlevi açık değildir.                                                          | Dijital menüde zemin türü tanıma işlevini açın.                                                                                                                                                                                         |
|                                                         | Seçili emiş gücü çok yüksektir.                                                                  | Emiş gücünü azaltın. Ayrıca kullanım kılavuzuna bakın.                                                                                                                                                                                  |
| Fırça artık dönmüyor.                                   | Fırça tüy veya toz nedeniyle tıkanmış.                                                           | Fırçayı elle veya bir makas yardımıyla temizleyin.                                                                                                                                                                                      |
|                                                         | (kod i4) Fırça, uzun tüylü halılarda çok yüksek dirençle karşılaştığında dönmemeye başlayabilir. | Cihazı kapatın, ardından tekrar açın.                                                                                                                                                                                                   |
|                                                         | Temizlikten sonra döner fırça, başlığın içine düzgün şekilde takılmamıştır.                      | Döner fırçayı başlığın içine düzgün biçimde kaydırmak için kullanım kılavuzunun temizlik bölümündeki talimatları izleyin. Kilitleme kolunu yerine oturttukten sonra döner fırçayı başlığın içinde sabitleyin.                           |
|                                                         | (kod: E9) Motorlu başlık aşırı ısınmıştır.                                                       | Cihazı kapatın ve 15 dakika bekleyin. Başlığın üst muhafazasına dokunarak hâlâ sıcak olup olmadığına bakın. Başlık hâlâ sıcaksa bir süre daha başlığın soğumasını bekleyin. Başlık soğuduktan sonra cihazı tekrar çalıştırmayı deneyin. |
| Başlıktaki LED'ler yanmıyor.                            | Başlık, boruya veya cihaza düzgün şekilde takılmamıştır.                                         | Başlığı cihaza veya el süpürmesine düzgün biçimde takın.                                                                                                                                                                                |
|                                                         | Aydınlatma özelliği devre dışı bırakılmıştır.                                                    | Bu özelliği menüde etkinleştirin. Menüde başlık LED'lerinin parlaklığını ayarlayın.                                                                                                                                                     |
| El süpürgesindeki LED'ler yanmıyor.                     | Aydınlatma özelliği devre dışı bırakılmıştır.                                                    | Bu özelliği menüde etkinleştirin. Menüde el süpürgesi LED'lerinin parlaklığını ayarlayın.                                                                                                                                               |

| <b>Sorun</b>                                                                 | <b>Olası neden</b>                                                                      | <b>Çözüm</b>                                                                                                                                                                            |
|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Aksesuardaki ışık yanmıyor.                                                  | Aksesuar boruya takılıdır.                                                              | Boruyu çıkarın ve aksesuarı doğrudan el süpürgesine takın.                                                                                                                              |
|                                                                              | Aksesuar cihaza düzgün şekilde takılmamıştır.                                           | Aksesuarı düzgün şekilde cihaza takın.                                                                                                                                                  |
| Başlık, el süpürgesi ve aksesuarlarımdaki aydınlatma yeterince parlak değil. | Parlaklık kısılmıştır.                                                                  | Menüde aydınlatmanın parlaklığını ayarlayın.                                                                                                                                            |
| Cihaz şarj etmiyor.                                                          | Elektrik fişi cihaza düzgün şekilde takılmamış veya adaptör prize düzgün takılmamıştır. | Elektrik fişinin cihaza doğru şekilde takıldığından ve adaptörün prize düzgün takıldığından emin olun.                                                                                  |
|                                                                              | Elektrik fişi, şarj istasyonuna doğru şekilde yerleştirilmemiştir.                      | Fişin, şarj istasyonuna doğru şekilde takıldığından emin olun. Elektrik fişinin açılı durup durmadığını ve şarj istasyonunun fişi sabit şekilde yerinde tutup tutmadığını kontrol edin. |
|                                                                              | (kod i7) Verilen adaptör dışında bir adaptör kullanıyor.                                | Birlikte verilen adaptörü kullandığınızdan emin olun.                                                                                                                                   |
|                                                                              | (kod i10) Pil doğru takılmamıştır.                                                      | Pilin yuvaya tam olarak yerleştirildiğinden ve düzgün şekilde takıldığından emin olun.                                                                                                  |
|                                                                              | (kod E5) Pil arızaları.                                                                 | Pil çalışmıyor. Pili değiştirin.                                                                                                                                                        |
|                                                                              |                                                                                         | Yukarıdaki kontrolleri yaptıysanız ve cihaz hala şarj olmuyorsa, cihazı Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.                           |
| Cihaz çok yavaş şarj oluyor.                                                 | Hariç bir adaptör ve başka cihazlara ait bir adaptör kullanıyor.                        | Cihazı verilen adaptör ile şarj edin.                                                                                                                                                   |
| Pil şarj edildi ve takıldı ama cihaz açılmıyor.                              | Cihaz hâlâ adaptöre bağlıdır.                                                           | Yeniden başlatmadan önce cihazı adaptörden çıkarın.                                                                                                                                     |
|                                                                              | (kod: E1) Cihazda bir sorun var.                                                        | Pili çıkarı, 10 saniye bekleyin ve pili tekrar takın. Bu işe yaramazsa lütfen cihazı bir Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.          |
| Ekranda filtre simgesi görüntülenir (kod: i8).                               | Filtre kirlidir.                                                                        | Filtreyi temizleyin. Ekrandaki veya kullanım kılavuzundaki talimatları izleyin.                                                                                                         |

| Sorun                                              | Olası neden                                                                                                                                                                                              | Çözüm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                    |                                                                                                                                                                                                          | <p>Filtreyi temizledikten sonra i8 bilgilendirme kodu almaya devam ediyorsanız aşağıdaki çözümleri deneyebilirsiniz:</p> <ul style="list-style-type: none"> <li>- Yedek temiz filtreniz varsa eski filtreyi yenisiyle değiştirebilirsiniz. Ardından eski köpük filtreyi ve filtre kutusunu dikkatlice temizlemek için el aparatını kullanın.</li> <li>- Alternatif olarak, başka bir elektrikli süpürgeye veya mini süpürgeye erişiminiz varsa ilgili süpürgeyi kullanarak hem köpük filtreyi hem de filtre kutusunu kolaylıkla temizleyebilirsiniz.</li> </ul> <p>Not: Cihazı çalıştırmadan önce mutlaka cihazda bir filtre olduğundan emin olun.</p> |
|                                                    | Filtre eskidir.                                                                                                                                                                                          | Yeni filtreleri <a href="http://www.philips.com/support">www.philips.com/support</a> adresindeki çevrimiçi Philips mağazasından ya da Philips bayinizden satın alabilirsiniz.                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                                    |                                                                                                                                                                                                          | Yukarıdaki kontrolleri yaptıysanız ve cihaz hâlâ hata gösteriyorsa cihazı Philips servis merkezine götürün veya Müşteri Hizmetleri Merkezi ile iletişime geçin.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Mini Turbo fırça düzgün çalışmıyor.                | Döner fırça tıkanmış.                                                                                                                                                                                    | Fırçadaki tüyleri bir makas yardımıyla temizleyin. Kullanım kılavuzundaki talimatları izleyin.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|                                                    | Döner fırça temizleme sırasında kumaş veya zemin nedeniyle tıkanmıştır.                                                                                                                                  | Mini Turbo fırçayı zeminle aynı hizada tutun ve Turbo fırçayı yumuşak zeminlerde bastırmayın.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                                                    | Döner fırça, mini Turbo fırçaya düzgün şekilde yerleştirilmemiş.                                                                                                                                         | Döner fırça ve mini Turbo fırçanın düzgün şekilde bağlandığından ve parçalar arasında boşluk olmadığından emin olun. Kullanım kılavuzundaki talimatları izleyin.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Emiş gücü sabit değil.                             | Herhangi bir sorun yok. Bu, devreye giren "Zemin Türü Tanıma" özelliğinden kaynaklanmaktadır. Cihazınız zemin türünü tespit eder ve ilgili zemin için optimize edilmiş bir performansla temizlik sağlar. | Herhangi bir şey yapmanıza gerek yoktur. Seçtiğiniz güçte sabit bir şekilde temizlik yapmayı tercih ederseniz cihazınızın menüsünde bu akıllı özelliği devre dışı bırakın.                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Zemin Türü Tanıma mantıklı şekilde tepki vermiyor. | Fırça tüy veya toz nedeniyle tıkanmış.                                                                                                                                                                   | Fırçayı bir makas yardımıyla veya elle temizleyin. Kullanım kılavuzundaki talimatlara bakın.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

| Sorun                                          | Olası neden                                                                                                          | Çözüm                                                                                                                                                                                  |
|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cihaz statik elektrik çarpmasına neden oluyor. | Cihazda statik elektrik birikebilir. Havadaki nem ne kadar düşük olursa biriken statik elektrik o kadar yüksek olur. | Boruyu sık sık odadaki diğer metal nesnelere değdirerek cihaz yükünü boşaltın (örneğin, masanın veya sandalyenin ayakları vb.). İsterseniz odadaki nem seviyesini de artırabilirsiniz. |
|                                                | Süpürülen toz ve kir statiktir.                                                                                      | Toz haznesini boşaltın ve filtreyi kullanım kılavuzundaki talimatlara göre temizleyin.                                                                                                 |

## Islak temizlik

| Sorun                                                           | Olası neden                                                                                 | Çözüm                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Su haznesinden su akışı azaldı.                                 | Islatma şeridi kir nedeniyle tıkanmış.                                                      | Islatma şeridini çıkarın ve temizleyin. Temiz ıslatma şeridini tekrar yerleştirin.                                                                                                                                                                                   |
|                                                                 | Mikrofiber temizleme bezi doğru şekilde yerleştirilmediği için ıslatma şeridini engelliyor. | Temizleme bezinin doğru yerleştirildiğinden emin olun. Doğru yerleştirme için kullanıcı kılavuzuna başvurun.                                                                                                                                                         |
|                                                                 | Su haznesi boş veya neredeyse boş.                                                          | Su haznesini yeniden doldurun.                                                                                                                                                                                                                                       |
|                                                                 | A microfiber mopping pad is used that is not supplied by Philips.                           | Yalnızca Philips tarafından üretilmiş orijinal mikrofiber temizleme bezi kullanın. Temizleme bezlerini <a href="http://www.philips.com/support">www.philips.com/support</a> adresindeki çevrimiçi Philips mağazasından ya da Philips bayinizden satın alabilirsiniz. |
|                                                                 | Islatma şeridinde kireç birikmiştir.                                                        | Yeni bir ıslatma şeridini <a href="http://www.philips.com/support">www.philips.com/support</a> adresindeki çevrimiçi Philips mağazasından ya da Philips bayinizden satın alabilirsiniz.                                                                              |
| Fazla hızlı gelen fazla miktarda su, su tankından dışarı taşar. | Düzeltilme tarağı doğru şekilde takılmamıştır.                                              | Kapağı kontrol edin ve tam ve düzgün bir şekilde kapatıldığından emin olun.                                                                                                                                                                                          |
|                                                                 | Şerit, su haznesinin altına düzgün bir şekilde yerleştirilmemiştir.                         | Şeridi kontrol edin ve su haznesinin alt kısmındaki plakaya düzgün bir şekilde takıldığından emin olun.                                                                                                                                                              |
| Zeminde kuruyunca şeritler çıkıyor.                             | Suya çok fazla sıvı temizleyici koyulmuştur.                                                | Sadece birkaç damla sıvı temizleyici kullanın veya daha az köpüren bir temizleyici kullanın.                                                                                                                                                                         |

| Sorun | Olası neden                                                      | Çözüm                                                                                                                                                                                                                                                                    |
|-------|------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|       | Mikrofiber temizleme bezi doğru bir şekilde yerleştirilmemiştir. | Temizleme bezinin doğru şekilde yerleştirildiğinden emin olun. Doğru yerleştirme için kullanıcı kılavuzuna başvurun.                                                                                                                                                     |
|       | Yanlış bir temizleme bezi kullanılıyor.                          | 7000 serisi için yalnızca Philips XV1670/02 mikrofiber temizleme bezi kullanın. Temizleme bezlerini <b><a href="http://www.philips.com/support">www.philips.com/support</a></b> adresindeki çevrimiçi Philips mağazasından ya da Philips bayinizden satın alabilirsiniz. |

2026 © Versuni Holding B.V.

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

(06/2026)



**100%**   
[www.home.id](http://www.home.id)