PHILIPS

Humidifier

HU1510



English 3
日本語 27

Important

Read this important information booklet carefully before you use the appliance, and save it for future reference.

For the best performance, we recommend keeping your appliance firmware up to date. Update can be completed via the Air+ app.

Danger

- Do not spray any flammable materials such as insecticides or fragrances around the appliance.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/or a fire hazard.
- The water in the water tank is not suitable for drinking. Do not drink this water and do not use it to feed animals or to water plants. When you empty the water tank, pour the water down the drain.

Warning

- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the supply cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.
- Standard WiFi interface based on 802.11b/g/n/ax at 2.4GHz with a maximum output power of 64mW EIRP.

- Bluetooth version 5.2 (LE) at frequency 2.4GHz with RF output less than 10mW EIRP.

Caution

- The appliance is only intended for household use under normal operating conditions.
- Always place and use the appliance on a dry, stable, flat and horizontal surface.
- Do not place anything on top of the appliance and do not sit or stand on the appliance.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen, or in a room with major temperature changes.
- Do not immerse the humidifier base, power cord, or plug in water.
- Empty the water tank and refill every third day. Before refilling, clean it with fresh tap water. Remove any scale, deposits, or film that has formed on the sides of the water tank or on interior surfaces and wipe all surfaces dry.



- Always unplug the appliance when you want to move, clean appliance, fill the water, or carry out maintenance.
- Do not put any substance other than water in the water tank. Do not add essential oils or chemical substances into the water.
- Use purified, distilled water or water with low mineral content to prevent the build-up of scale and the dispersal of minerals into the air. Do not use hot water.
- Do not pour water into any openings except for the water tank.
- Do not cover the nozzles while the humidifier is on. Mist should be directed away from walls, furniture, bedding, and appliances.
- Remove the water tank from the base before moving the humidifier.
- Never place the product in a washing machine or dishwasher. It would be destroyed as a result.
- During the working of the humidifier, do not remove the water tank from the base, and never touch the water conduits or any components inside the reservoir.
- The essential oils are not included with the product. Please purchase and use the essential oils if needed.
- Make sure the product is disconnected with power before dropping essential oils into the aroma box.
- Do not use substances other than essential oils to the aroma box.
- Read and follow the safety and use instruction of the essential oil carefully before using it.
- Check the ingredients information of the essential oil versus your known allergies and exclude it from use when necessary.

- Consult and follow doctor recommendation before using the essential oil for infants, pregnant women or women in the lactation period or if you have respiratory issues
- If you feel unwell, irritation or discomfort during the use of the essential oil, please stop using it.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Your humidifier

Product overview

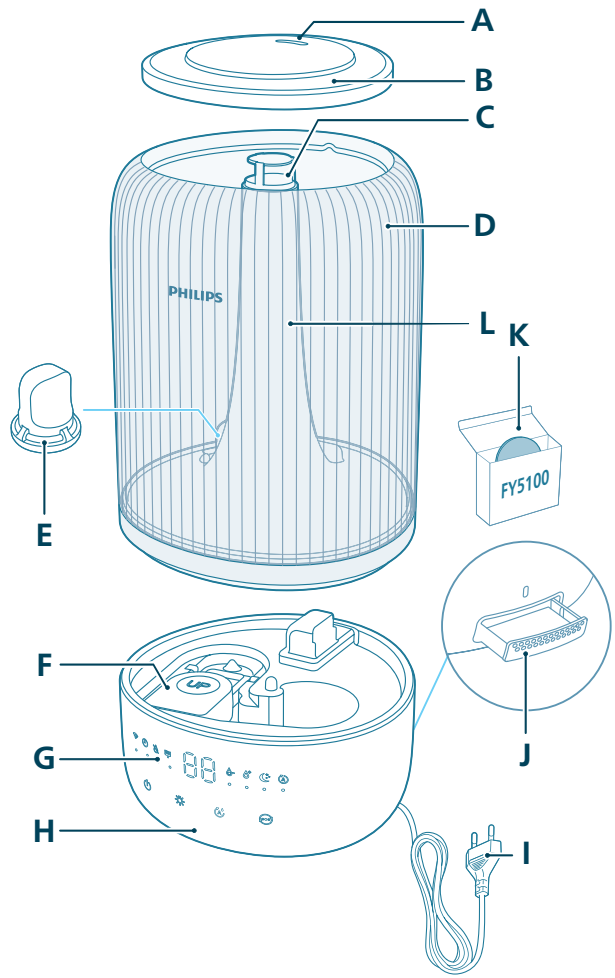

A	Nozzle	**G**	Control panel
B	Water tank cover	**H**	Base
C	Mist outlet	**I**	Power plug
D	Water tank	**J**	Aroma box

E	Water filter	**K**	Aroma pads (FY5100)
F	Float	**L**	Mist tube

Controls overview

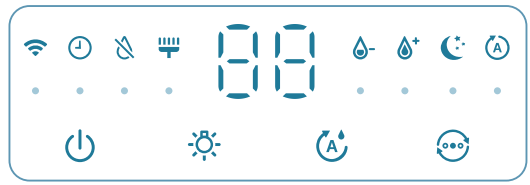

Control buttons:

	Power on/off button		Light function button
	Humidity setting button		Mode switch

Long press the button(s) for 3 seconds:

	Cleaning reset		Wi-Fi reset

Display panel:

	Auto mode		Sleep mode
	WiFi indicator		Medium mode
	High mode		Humidifier cleaning alert
	Water refill indicator		Timer indicator (available in the app)

Getting started

First time use

Note:

Remove all packing materials before first time use.

Take the water tank off of the base and remove all tapes.

Rinse all parts before first use.

Select a firm, flat, water-resistant surface for the humidifier, ensuring it is positioned at least 30cm away from walls.

Ensure that the mist is directed away from walls, furniture, and other appliance.

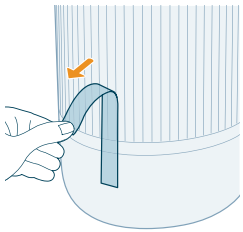

1 Remove the plastic sticker.

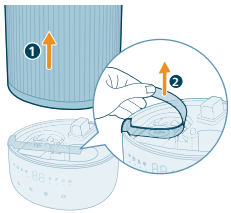

2 Remove the water tank from the base (1) and remove the protective sticker (2).

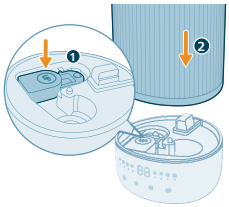

3 Make sure that the float is well in place (1), then put the water tank back to the base (2).

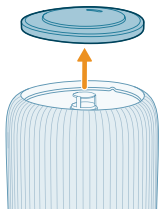

4 Remove the top cover from the water tank.

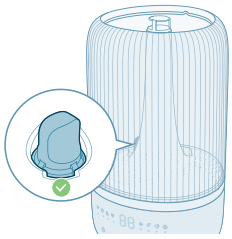

5 Make sure the water filter is attached properly.



6 Fill the water tank with water. Do not fill with hot water.

Note:

Use purified, distilled water or water with low mineral content to prevent the build-up of scale and the dispersal of minerals into the air.

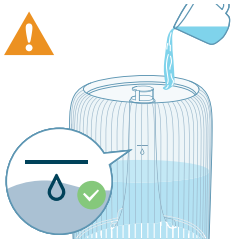

- Do not exceed the water level indication when filling water.



- Do not pour water through the ultrasonic mist outlet.



- Do not pour water directly into the base.

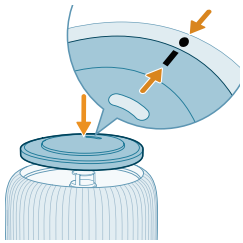

7 Reattach the top cover to the water tank.

Using the aroma function

Notes:

The essential oils are not included with the product. Please purchase and use the prescribed essential oils if needed.

Read the user manual of essential oils carefully before using the aroma function.

Make sure the product is disconnected with power before dropping essential oils into the aroma box.

Do not use substances other than essential oils.

Read and follow the safety and use instruction of the essential oil carefully before using it.

Check the ingredient information of the essential oil against your known allergies and exclude it from use when necessary.

Consult and follow your doctor's recommendation before using essential oils for infants, pregnant women, women in the lactation period, or if you have respiratory issues.

If you feel unwell, experience irritation or discomfort during the use of essential oils, please discontinue use.

Do not use the aroma function of essential oils for infants, pregnant women, or women in the lactation period.

Only add essential oils directly to the aroma pad. Don't add essential oils to other parts, otherwise the parts will be damaged by the oil.

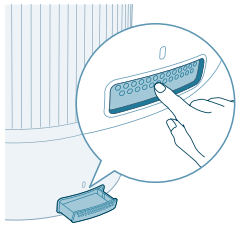

1 Push the aroma box to automatically eject it.

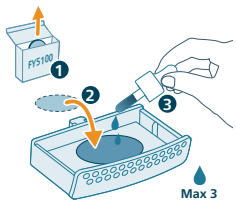

2 Drop in 2-3 drops of essential oils to the supplied aroma pad.

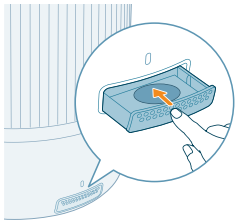

3 Push the aroma box to back into the appliance.

Understanding Wi-Fi indicator

Wi-Fi icon status	Wi-Fi connection status
Blink in orange	Connecting to the smart phone
Stable in orange	Connected to the smart phone
Blink in white	Connecting to the server
Stable in white	Connected to the server
Off	Wi-Fi function disabled or device lights are off

Wi-Fi connection

Setting up the Wi-Fi connection for the first time

1 Download and install the Philips “Air+” app from the App Store or Google Play.



2 Put the plug of the humidifier in the power socket and press the power button to turn on the humidifer.

- The Wi-Fi indicator blinks orange for the first time.

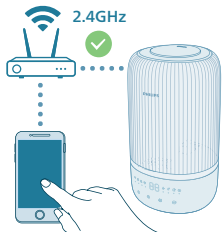

3 Make sure that your smart phone or tablet is successfully connected to your Wi-Fi network.

Note:

Enable Bluetooth feature on your smart phone to ensure the smooth pairing.

Please ensure your smartphone is connected to a 2.4GHz (home) Wi-Fi netwok instead of a 5GHz Wi-Fi network or public Wi-Fi. For a successful pairing, we suggest turning off your mobile data before initiating the pairing process.



4 Launch the Philips **" Air+"** app and click on **"Add a device"** or press the "+" button on the screen. Follow the on-screen instructions to connect the air purifier to your network.

- After a successful connection, the Wi-Fi indicator remains steady in white.

Note:

This instruction is only valid when the humidifier is being set up for the first time. If the network has changed or the setup needs to be performed again.

If you want to connect more than one humidifier to your smart phone or tablet, you can add the humidifier in the app on additional smart phones without doing the Wi-Fi connection reset on the device.

Make sure that the distance between your smart phone or tablet and the humidifier is less than 10 m without any obstructions.

Reset the Wi-Fi connection

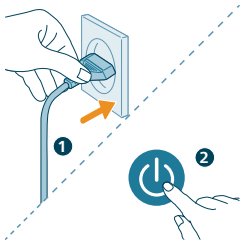

1 Put the plug of the humidifier in the power socket and press ⏻ to turn on the air humidifier.

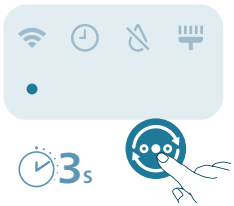

2 Long press button at the same time for 3 seconds until you hear a beep.
- The humidifier goes to pairing mode.
- The Wi-Fi indicator blinks orange.

3 Follow the steps 3-4 in “Setting up the Wi-Fi connection for the first time”section.

Using the humidifier

Understanding the humidity light

Relative humidity represents the amount of water vapor in the atmosphere. The humidification indicator has four status levels:

The humidification light has three colors:

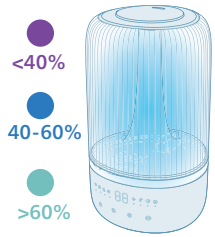

Humidification light color	Current humidity	What does it mean?
Purple	<40%	Dry
Blue	40-60%	Comfortable humidity
Green	>60%	Too humidity

Note: The default target humidity is 50%RH, you can set the desired target humidity by pressing the humidity setting button.

Water level

When there is not enough water in the water tank, the water refill indicator is on, the humidifier stops working, The humidifier will resume work when you refill water into the water tank.

Refilling water

Note:

Empty the water tank and refill every third day.

When filling water, do not exceed the maximum water level.

Do not shake the water tank when moving it, or water might leak.

Follow the steps in "First time use" for refilling water.

Turning on and off

Note:

For optimum humidification performance, close doors and windows.

Keep curtains away from the air inlet or air outlet.

The humidifier is applicable for ambient temperature range：5-40 ℃.

1 Put the plug of the humidifier into the power socket.

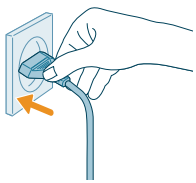

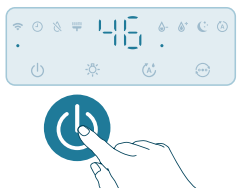

2 Press the power button to switch on the humidifier.
- The humidifier beeps.
- The humidity light chooses the appropriate color to match the surrounding humidity level.
- The humidifier operates in the Medium mode with current humidity level displayed on the screen.

3 Press the power button again to switch off the humidifier.

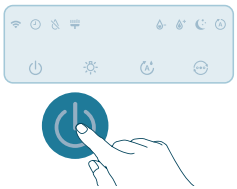

Note: If the humidifier stays connected to the electrical outlet after turning OFF, it will operate under the previous settings when turned ON again.

Adjusting mist direction

Rotate the nozzle to preferred mist direction.

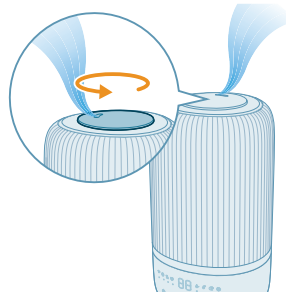

Changing the mode setting

You can choose the **Auto mode**, the **Sleep mode**, the **Medium mode**, or the **High mode** by pressing the mode switch button.

Auto mode ( ): The humidifier automatically adjusts the mist level in accordance with the ambient air humidity.

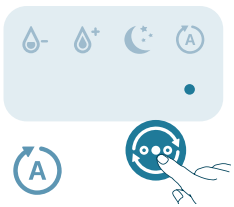

Sleep mode ( ): The humidifier operates quietly at a low mist level. After 3 seconds, the screen lights turn off.

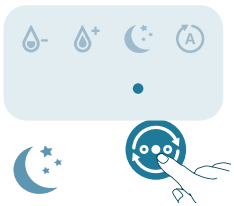

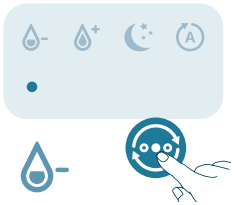

Medium mode ( ): The humidifier operates on the medium mist level.

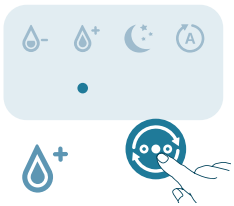

High mode ( ): The humidifier operates on the highest mist level.

Setting humidity level

Note:

The default humidity level is 50%RH.

The humidity level can only be adjusted in the Auto mode.

The humidifier will change to Auto mode automatically when you set target humidity level in other modes.

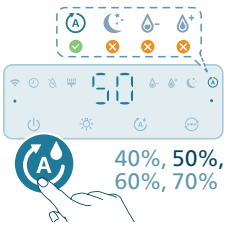

You can adjust the humidity level by pressing the humidity setting button to choose from 40%, 50%, 60%, or 70%.

Using the light function

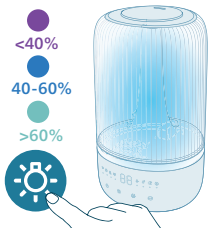

You can press the button to turn on humidity light , ambient light or turn off all lights and the control panel.

- The humidifier will turn on the humidity light by default.

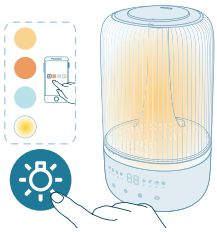

- You can press the light function button to switch to ambient light mode. Tailor the brightness and the color in the Air+ app.

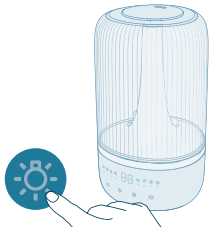

You can press the light function button to turn off all lights and the control panel. Press any button to wake up the panel first, and press the light button again to set the light mode you want in 3 seconds.

Cleaning and maintenance

Note:

Always unplug the appliance before you clean it.

Never immerse the appliance in water or any other liquid.

Avoid pouring water through the air inlets and outlets.

Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.

Cleaning the humidifier

Clean the humidifier when the cleaning alert is on or every three days.

Regularly clean the inside and outside of the humidifier to prevent dust from collecting.

1 Wipe away dust with a soft dry cloth from the body of the humidifier.

2 Switch off the appliance and unplug from the power socket.

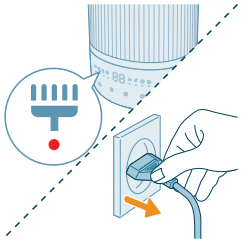

3 Remove the top cover from the water tank.

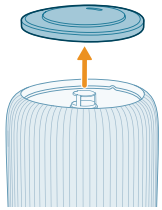

4 Remove the water tank from the base.

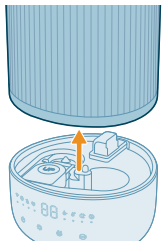

5 Pour water out from the tank and the base.

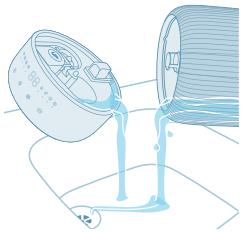

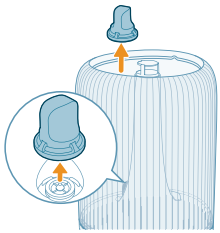

6 Remove the water filter from the water tank.

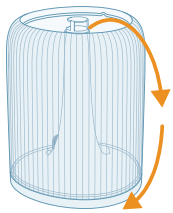

7 Turn the water tank upside down.

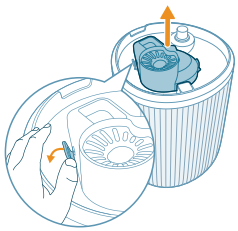

8 Remove the deafener from the bottom of the water tank.

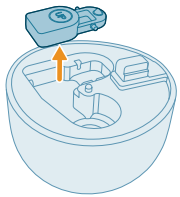

9 Remove the float from the base chamber.

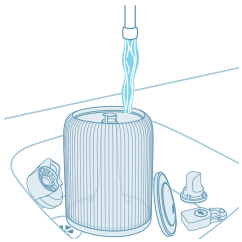

10 Rinse the water tank, top cover, float, deafener and water filter with water.

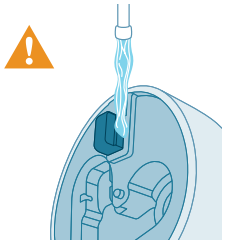

Note: Do not rinse the base sidewards as the illustration.

11 Wipe the base clean and dry.

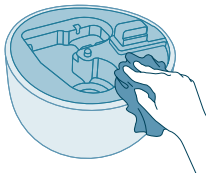

12 Put the float back to the base chamber.

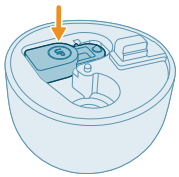

13 Fill the water tank with water.



14 Put the water filter back to the water tank.

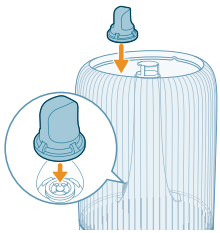

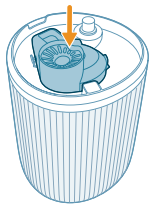

15 Put the deafener back to the bottom of the base.

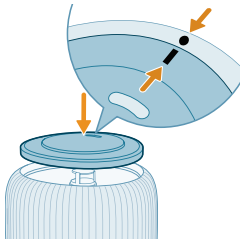

16 Reattach the top cover.

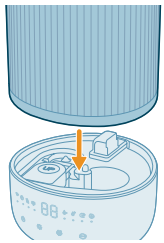

17 Re-installe the water tank onto the base.

18 Put the power plug into the power socket.

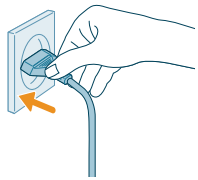

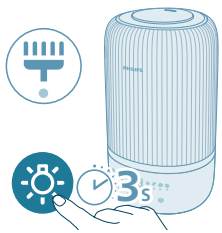

19 Press and hold light button for 3 seconds to reset the cleaning time.

Cleaning the aroma pad and box

For effective aromatherapy, the aroma pad should always be cleaned before using a new essential oil blend. Do not mix essential oil blends.

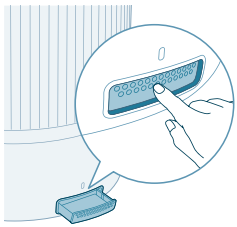

1 Remove the aroma box by pressing it in, then pulling it out.

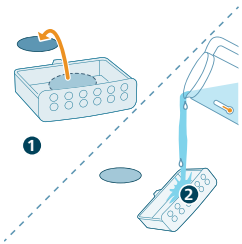

2 Remove the aroma pad and rinse the pad and the box under warm, running water.

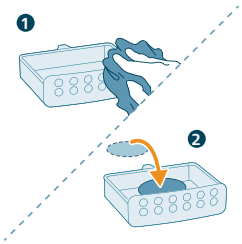

3 Dry with a clean cloth and place the pad back into the aroma box.

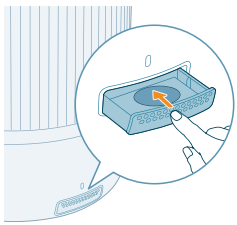

4 Place the aroma box back inside the air humidifier

Note: Do not pour liquid cleaners or detergents into the aroma pad or box.

Replacing the Aroma Pad

If the aroma pad becomes deformed or damaged after repeated washing, it may need to be replaced. To maintain the performance of your air humidifier, only use official Philips aroma pads.

Storage

1 Turn off the humidifier and unplug from the power socket.
2 Clean the humidifier (see Chapter "**Cleaning and Maintenance**").
3 Let all parts air dry thoroughly before storing.
4 Store the humidifier in a cool, dry location.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
The humidifier does not work.	Make sure that there is power supply to the humidifier.
	Make sure that the water tank is filled with water and the water tank is placed properly on the base.
Error code "EC" displays on the screen, and all touch buttons are unresponsive.	Unplug the appliance to check for a water shortage. If there is no water shortage, verify that the float is properly installed. Once confirmed, plug the appliance back in and turn it on. If the error code "EC" persists, contact the Consumer Care Center in your country.
Little or no mist comes out of the mist outlet.	Put the plug of the humidifier into the power socket and switch on the humidifier.
	It may has achieved to your target humidity rate.
	Make sure that the water tank is filled with water and placed properly.
	There may be too much water in the base (above the MAX reminder on the base). Empty the base chamber. Refill the water tank (not the base chamber) and place the water tank properly onto the base.
	Make sure the bottom of the base is not blocked. The humidifier should not be set on carpet or other surfaces that may block the base.
	Make sure the nozzle is not blocked.
	Make sure the mist tube is not blocked or clogged.
	Make sure the humidifier is on a level surface.
	The water temperature may be too low. Turn the mist level to the highest setting and let the humidifier run for a while, then adjust to the desired setting.
I do not see the humidity level change.	Your room might have too much ventilation. Please close doors and windows.

	Your room size is too big. This humidifier is suitable for room size ≤34m^2.
	Turn the mist level to a higher setting.
	When used in a dry environment, the moisture will be absorbed surrounding objects such as walls and furniture, which can prolong the humidification time.
	Cleaning the humidifier (see the chapter 'Cleaning and maintenance').
The humidifier stops even when i feel quite dry.	The water tank is empty, please refill with water.
	The humidity level around product has been achieved to target setting in auto mode, it will restart automatically once the humidity level lower than target setting.
	Our device will stop working when the humidity level around product is too high because it may lead to diversity fungi mold growth.
The appliance continues to humidify even after reaching the target humidity level.	The displayed humidity level represents the humidity around the appliance itself. It takes some time for the mist to spread evenly throughout the entire room. To enhance the efficiency of humidification, the appliance will continue to humidify the room for serveral minutes. This means that the displayed humidity level may be higher than the target level you set.
There are some white dust around humidifier.	The white deposits are called scale and they consist of minerals from the water.
	Use purified, distilled water or water with low mineral content to prevent the build-up of scale and the dispersal of minerals into the air.
	We recommend using the Anti-calc cartridge (FY5133) to protect your humidifier from calc and prevent white residue on nearby surfaces. You need to replace it when necessary.
It is too wet around humidifier.	Humidity may be too high. Turn the mist level to a lower setting.
There is unpleasant smell coming out from the humidifier.	The first few times you use your air humidifier, it may produce a plastic smell. This is normal and will fully disappear within a few days.
	Clean the humidifier (see the chapter 'Cleaning and maintenance').
My aroma function doesn't work well(too weak or strong).	Use proper 2-3 drops essential oil.
	Different essential oil may has different perceived intensity.
	It need take sometime to evaporate the smell to whole room.

The water tank leaks.	Make sure that the humidifier is not overfilled with water.
	Make sure that the humidifier is well assembled/connected every time after you clean it or after you remove the water tank for refilling.
	Make sure that the water tank is properly placed. If the problem persists, contact the Consumer Care Center in your country.
If the humidifier is not used for a long time, How to store and reuse it?	When the humidifier is not used for a long time, bacteria and mold may grow. Please follow below steps for storage and reuse.
	Clean the water tank and base thoroughly before storage.
Mould grows inside the humidifier.	Clean the water tank and base regularly.
The Wi-Fi setup is not successful.	Please ensure your smart phone is connected to a 2.4GHz (home) Wi-Fi netwok instead of a 5GHz Wi-Fi network or public Wi-Fi. For a successful pairing, we suggest turning off your mobile data before initiating the pairing process.
	Ensure to enable the following permissions: "Location", "Storage", "Bluetooth", and "Local Network" on your smart phone. After a successful Wi-Fi setup, you can change permission settings as desired.
	Please verify that you have entered the correct Wi-Fi password. The password is case-sensitive, has a limit of 63 characters. Special symbols are not accepted.
	Ensure the network name of your home Wi-Fi is correct. The network name is case-sensitive.
	If you are using a VPN on your smart phone, please turn it off before starting the pairing process.
	If your router has a whitelist set up to block pairing, please disable the whitelist to ensure successful connection.
	Please ensure that both your device and smart phone are within 10 meters of the router.
	Ensure the app has been updated to the latest version.
	To ensure a strong Wi-Fi connection, avoid placing your device near other electronic devices, bright light sources, or signal stations that may cause interference. If you experience connectivity issues, move the device away from these sources and attempt to reconnect it to the Wi-Fi network.
	Consult the help section in the app for extensive and up-to-date troubleshooting tips.

Warranty and support

Versuni Netherlands B.V., registered at Claude Debussylaan 88, Amsterdam, NL, offers a two-year warranty on this product after the date of purchase (or the date of delivery, if later). This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information, for spare parts, or for invoking the warranty, please visit our website **home.id/warranty**.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit **www.home.id/support**.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country.

重要

本製品を使用する前にこの重要な情報ブックレットをよくお読みください。また、いつでも参照できるように大切に保管してください。

最良の性能を確保するために、本製品のファームウェアを最新バージョンにアップグレードすることをお勧めします。このアップグレードは、Air+アプリから実行できます。

危険

- 本製品の周囲で殺虫剤や芳香剤などの可燃性物質を噴霧しないでください。
- 感電や火災の危険を避けるため、水、その他の液体、または（可燃性の）洗剤で本製品を洗浄しないでください。
- 水タンク内の水は飲用には適していません。この水を飲んだり、動物に与えたり、植物に水やりしたりするために使用しないでください。水タンクを空にする際、水は排水口に流してください。

警告

- 湿度が高い環境は、微生物が繁殖しやすくなりますのでご注意ください。
- 加湿器の周囲を湿った状態や水浸しにしないでください。湿り気が発生した場合は、加湿器の出力を下げてください。出力を下げられない場合は、連続使用せず、使用間隔を空けてください。カーペットやカーテン、テーブルクロスなどの布製品を湿らせないでください。
- 本製品を使用しないときは、水タンクを空にしてください。
- 加湿器は、保管前に空にして清掃してください。次回使用前にも清掃してください。
- 本製品をコンセントに接続する前に、製品の表示電圧が使用場所の主電源の電圧と一致していることを確認してください。
- 電源コードが損傷している場合は、フィリップス、フィリップス認定サービスセンター、または同等の資格を持つ技術者に交換を依頼してください。
- プラグ、電源コード、または製品自体が損傷している場合は、製品を使用しないでください。
- 本製品は、8 歳以上のお子様や、身体的、知覚的、または知的障害のある方、または十分な経験や知識を持たない方にもご使用いただけますが、その場合は、本製品の安全な使用を考慮し、かつその危険性を理解している担当者が監督や指示をしてください。 お子様が本製品で遊ばないようにしてください。清掃とお手入れは、監督する人がいないときにお子様だけで行わないでください。
- 微生物は、水や本製品を使用・保管する環境に存在し、水タンク内で繁殖して、空気中に放出されることがあります。水を 3 日以上入れ換えず、タンクを適切に清掃していない場合、深刻な健康リスクを引き起こす可能性があります。
- 2.4 GHz での 802.11b/g/n/ax に基づく標準 Wi-Fi インターフェイスで、最大出力電力は 64 mW EIRP。
- Bluetooth バージョン 5.2（LE）、周波数 2.4 GHz、RF 出力 10 mW EIRP 未満。

注意



- 本製品は、通常の使用条件で、家庭で使用することのみを目的としています。
- 本製品は、必ず乾燥していて安定した水平な面に置いて使用してください。
- 本製品の上に物を置いたり、座ったり、立ったりしないでください。
- ガス器具、加熱装置、または暖炉の近くで本製品を使用しないでください。
- 製品に結露が滴下しないようにするため、エアコンの直下に本製品を置かないでください。
- 室内燻煙式の防虫剤を使用した場合や、油性残留物、お香、または化学物質の蒸気がある場所では、本製品を使用しないでください。
- 本製品は、バスルーム、トイレ、キッチンなど、濡れている場所や、周囲温度が高い場所、または温度変化が大きい部屋では使用しないでください。
- 加湿器のベース部分、電源コード、プラグを水に浸けないでください。
- 水タンクの水は 3 日ごとに入れ換えてください。水タンクは、補充する前に新鮮な水道水で洗浄してください。水タンクの側面や内部に水垢や汚れ、膜が付着した場合は取り除き、全表面を乾いた布で拭いてください。
- 本製品を移動・清掃する場合や水を入れ換える場合、その他のお手入れを行う場合は、必ず本製品の電源プラグを抜いてください。
- 水タンクには水以外の物を入れないでください。水にエッセンシャルオイルや化学物質を加えないでください。
- 水垢の付着やミネラル成分の空気中への拡散を防ぐため、精製水、蒸留水、またはミネラル分の少ない水を使用してください。熱湯は使用しないでください。
- 水は必ず水タンクに注いでください。他の開口部に注がないでください。
- 加湿器の運転中はノズルを覆わないでください。噴霧は壁、家具、寝具、家電製品に直接当たらないようにしてください。
- 加湿器を移動する際は、必ず水タンクをベースから取り外してください。
- 本製品を洗濯機や食洗機に入れないでください。故障の原因となります。
- 加湿器の運転中は水タンクをベースから取り外したり、給水経路や水タンク内部の部品に触れたりしないでください。
- 本製品にエッセンシャルオイルは付属していません。必要な場合は別途購入のうえ使用してください。
- エッセンシャルオイルをアロマボックスに入れる際は、必ず本製品の電源を切ってください。
- アロマボックスにはエッセンシャルオイル以外の物を入れないでください。
- エッセンシャルオイルの安全・使用方法をよく読み、指示に従ってください。
- エッセンシャルオイルの成分情報を確認し、既知のアレルギーがある場合は使用しないでください。
- 乳幼児、妊娠中・授乳中の方、呼吸器系に問題がある方は、使用前に医師に相談してください。
- 使用中に体調不良や刺激、違和感を覚えた場合は、すぐに使用を中止してください。

電磁場（EMF）

本機器は、電磁場への暴露に関して適用される規格および規制に準拠しています。

リサイクル

使用済みの製品は、一般の家庭ごみと一緒に捨てないで、正規の回収拠点に持ち込んでリサイクルしてください。これは、環境保全につながります。

電気製品と電子製品の分別回収については、各国の規則に従ってください。製品の適切な廃棄は、環境と人体に及ぼす影響の低減につながります。

加湿器

製品概要

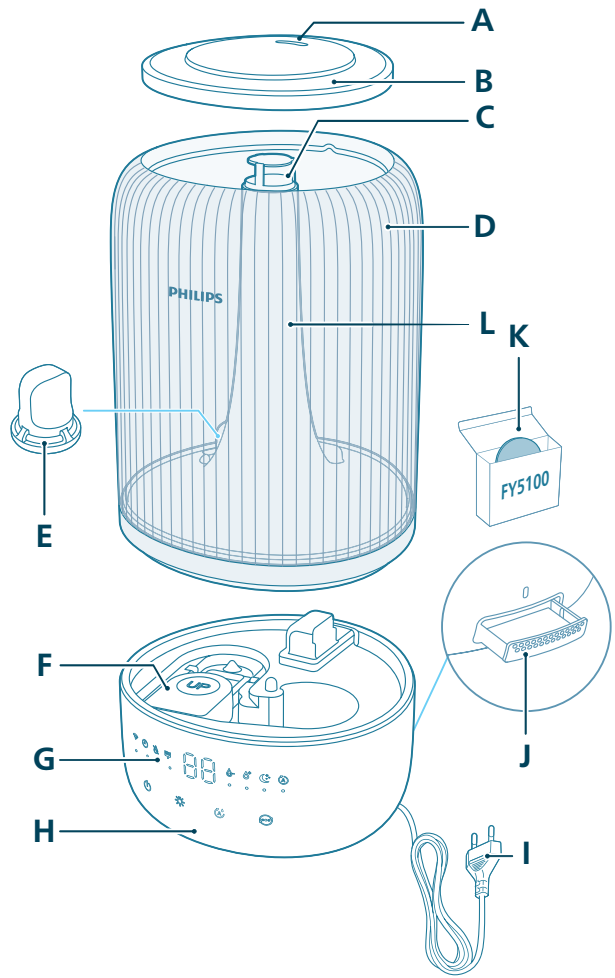

A	ノズル	**G**	コントロールパネル
B	水タンクカバー	**H**	ベース
C	ミスト吹出口	**I**	電源プラグ
D	水タンク	**J**	アロマボックス
E	水フィルター	**K**	アロマパッド（FY5100）
F	フロート	**L**	ミストチューブ

操作の概要

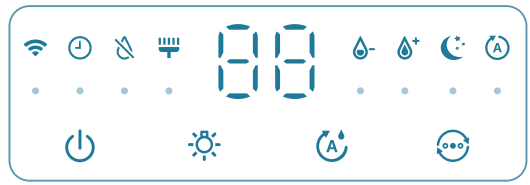

コントロールボタン：

	電源オン／オフボタン		ライト機能ボタン
	湿度設定ボタン		モードスイッチ

ボタンを 3 秒間長押し：

	クリーニングのリセット		Wi-Fi のリセット

表示パネル：

	自動モード		スリープモード
	Wi-Fi インジケータ		ミディアムモード
	ハイモード		加湿器のクリーニング警告
	水補充インジケータ		タイマーインジケータ（アプリで使用可能）

はじめに

初めて使用する前に

注：

初めてご使用になる前に、梱包材をすべて取り除いてください。

水タンクをベースから取り外し、すべてのテープを取り除いてください。

使用前にすべての部品を水ですすいでください。

加湿器は、平らでしっかりした耐水性のある場所に設置し、壁から少なくとも30 cm 離してください。

ミストが壁、家具、その他の電化製品に向かないように調整してください。

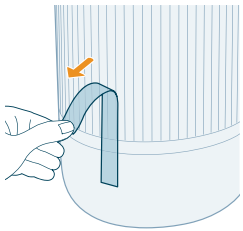

1 プラスチックシールを取り除きます。

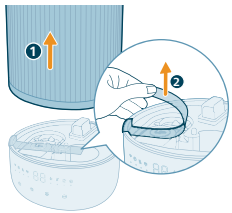

2 水タンクをベースから取り外し（1）、保護シールを取り除きます（2）。

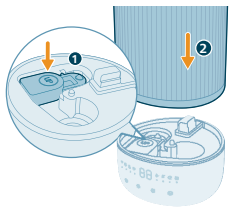

3 フロートが所定の位置にあることを確認してから（1）、水タンクをベースに戻します（2）。

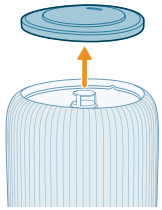

4 トップカバーを水タンクから取り外します。

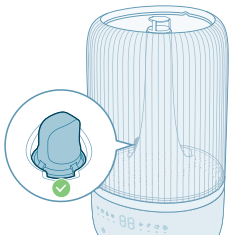

5 水フィルターが正しく取り付けられていることを確認します。



6 水タンクに水を入れます。熱湯を入れないでください。

注：

水垢の付着やミネラル成分の空気中への拡散を防ぐため、精製水、蒸留水、またはミネラル分の少ない水を使用してください。



- 水を入れるときは、水位表示を超えないようにしてください。



- 超音波ミスト吹出口から水を注がないでください。



- ベースに直接水を注がないでください。

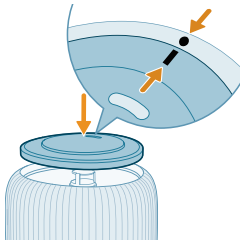

7 トップカバーを水タンクに再度取り付けます。

アロマ機能の使用

注：

本製品にエッセンシャルオイルは付属していません。必要な場合は、指定のエッセンシャルオイルを別途購入のうえ使用してください。

アロマ機能を使用する前に、エッセンシャルオイルの取扱説明書をよくお読みください。

エッセンシャルオイルをアロマボックスに入れる際は、必ず本製品の電源を切ってください。

エッセンシャルオイル以外の物を使用しないでください。

エッセンシャルオイルの安全・使用方法をよく読み、指示に従ってください。

エッセンシャルオイルの成分情報を確認し、既知のアレルギーがある場合は使用しないでください。

乳幼児、妊娠中・授乳中の方、呼吸器系に問題がある方は、使用前に医師に相談してください。

使用中に体調不良や刺激、違和感を覚えた場合は、すぐに使用を中止してください。

乳幼児、妊娠中・授乳中の方は、エッセンシャルオイルを使用したアロマ機能を使用しないでください。

エッセンシャルオイルは、必ずアロマパッドにのみ直接滴下してください。アロマパッド以外の部分にエッセンシャルオイルを滴下しないでください。部品が損傷する原因となります。

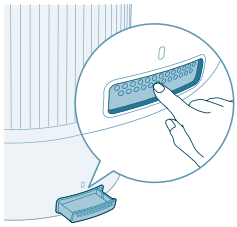

1 アロマボックスを押して取り出します。

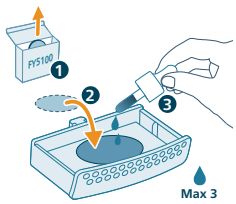

2 付属のアロマパッドに、エッセンシャルオイルを 2〜3 滴垂らします。

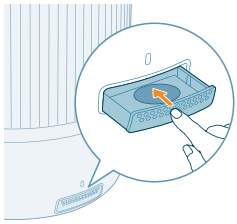

3 アロマボックスを押して元の位置に戻します。

Wi-Fi インジケータを理解する

Wi-Fi アイコンのステータス	Wi-Fi の接続ステータス
オレンジ色で点滅	スマートフォンに接続しています
オレンジ色で点灯	スマートフォンに接続されています
白色で点滅	サーバーに接続しています
白色で点灯	サーバーに接続されています
消灯	Wi-Fi 機能が無効になっているか、デバイスライトが消えています

Wi-Fi 接続

Wi-Fi 接続の初回セットアップ

1 フィリップスの「Air+」アプリを App Store または Google Play からダウンロードしてインストールします。



2 加湿器のプラグをコンセントに差し込み、電源ボタンを押して加湿器をオンにします。

- Wi-Fi インジケータ ᯤ は最初にオレンジ色で点滅します。

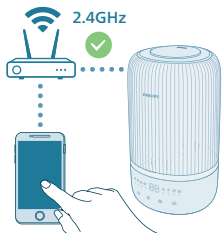

3 スマートフォンまたはタブレットが Wi-Fi ネットワークに正常に接続されたことを確認します。

注：

スムーズにペアリングするために、スマートフォンの Bluetooth 機能を有効にしてください。

スマートフォンが 5 GHz Wi-Fi ネットワークや公衆 Wi-Fi ではなく、2.4 GHz（ホーム）Wi-Fi ネットワークに接続されていることを確認してください。ペアリングを成功させるには、ペアリングを開始する前にモバイルデータ通信をオフにすることをお勧めします。



4 フィリップスの「**Air+**」アプリを起動し、「**Add a device（デバイスを追加）**」をクリックするか、画面上の「+」ボタンを押します。画面上の指示に従って、加湿器をネットワークに接続します。

- 正常に接続すると、Wi-Fi インジケータが白色で点灯します。

注：

この手順は、加湿器を初めてセットアップする場合にのみ有効です。ネットワークが変更された場合、またはセットアップを再度実行する必要がある場合にも、参照してください。

複数の加湿器をスマートフォンまたはタブレットに接続したい場合は、デバイス側で Wi-Fi 接続リセットを行うことなく、追加のスマートフォン上のアプリから加湿器を追加できます。

スマートフォンまたはタブレットと加湿器の距離が 10 m 未満で、障害物がないことを確認してください。

Wi-Fi 接続のリセット

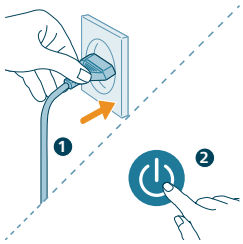

1 加湿器のプラグをコンセントに差し込み、⏻ を押して加湿器をオンにします。

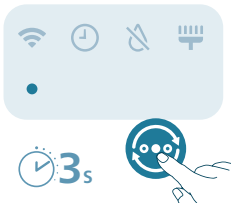

2 ビープ音が鳴るまで、Wi-Fi ボタンを同時に 3 秒間長押します。
- 加湿器がペアリングモードになります。
- Wi-Fi インジケータ がオレンジ色で点滅します。

3 「Wi-Fi 接続の初回セットアップ」セクションの手順 3～4 に従います。

加湿器の使用

湿度ライトを理解する

相対湿度は、大気中に含まれる水蒸気量を示します。加湿インジケータには 4 つのステータスレベルがあります。

加湿ライトには 3 つの色があります。

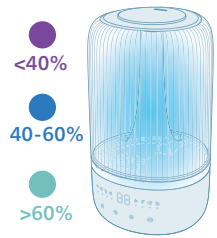

加湿ライトの色	現在の湿度	意味
紫	< 40%	乾燥している
青	40～60%	快適な湿度
緑	> 60%	湿度が高すぎる

注：初期設定の目標湿度は 50%RH です。目標湿度は、湿度設定ボタンを押してお好みの湿度を設定できます。

水位表示

水タンクに十分な水がない場合、水補充インジケータが点灯して加湿器が停止します。水タンクに水を補充すると加湿器の作動が再開されます。

水の補充

注：

水タンクの水は 3 日ごとに入れ換えてください。

水を入れるときは、最大水位表示を超えないようにしてください。

移動の際に水タンクを振らないでください。水漏れの原因になります。

水を入れるときは、「初めて使用する前に」の手順に従ってください。

電源のオン／オフ

注：

最適な加湿性能を得るため、ドアや窓は閉めてください。

カーテンは吸気口や吹出口から離してください。

本加湿器の適用周囲温度は 5～40℃ です。

1 加湿器のプラグをコンセントに差し込みます。

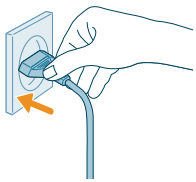



2 電源ボタンを押して加湿器の電源を入れます。
- 加湿器のビープ音が鳴ります。
- 湿度ライトが周囲の湿度に応じた適切な色を選択します。
- 加湿器はミディアムモードで運転を開始し、現在の湿度が画面に表示されます。

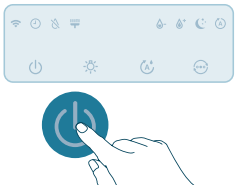

3 電源ボタンをもう一度押すと、加湿器の電源がオフになります。

注：加湿器の電源を切った後もコンセントに接続したままにしておくと、再度電源を入れたときに電源を切る前の設定で運転を再開します。

ミストの向きの調整

ノズルを回して、お好みのミストの向きにします。

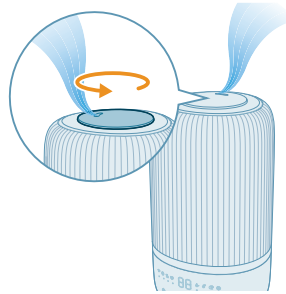

モード設定の変更

モード切り替えボタンを押すと、**自動モード**、**スリープモード**、**ミディアムモード**、または**ハイモード**を選択できます。

自動モード（Ⓐ）：加湿器が、周囲の湿度に応じてミスト量を自動調整します。



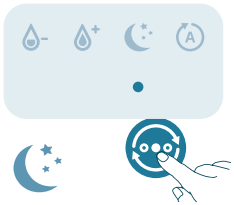

スリープモード（）：加湿器は少ないミスト量で静かに運転します。3 秒後、画面が消灯します。

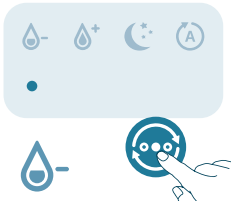

ミディアムモード（）：加湿器は中程度のミスト量で運転します。

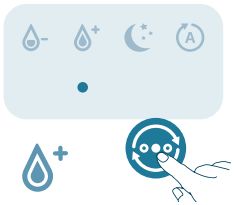

ハイモード（）：加湿器は最も多いミスト量で運転します。

湿度レベルの設定

注：

初期設定の湿度は 50%RH です。

湿度レベルは自動モードでのみ調整できます。

他のモードで目標湿度を設定すると、加湿器は自動的に自動モードに切り替わります。

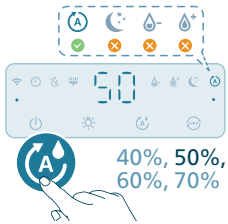

湿度設定ボタンを押して、40%、50%、60%、または 70%から選択できます。

ライト機能の使用

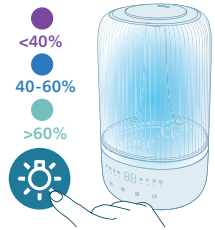

ボタンを押すと、湿度ライト、周囲光をオンにしたり、すべてのライトとコントロールパネルをオフにすることができます。

- 湿度ライトは初期設定で点灯します。

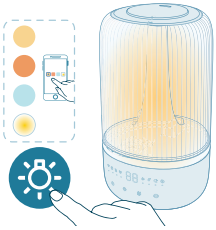

- ライト機能ボタンを押すと、周囲光モードに切り替えることができます。明るさと色は Air+ アプリで調整できます。

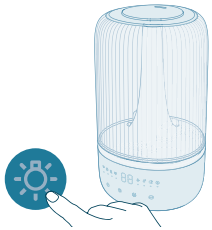

ライト機能ボタンを押すと、すべてのライトとコントロールパネルをオフにすることができます。いずれかのボタンを押してパネルを起動し、その後 3 秒以内にライトボタンを再度押すと、お好みのライトモードを設定できます。

清掃とメンテナンス

注：

清掃する前に、必ず電源プラグを抜いてください。

本製品を水やその他のいかなる液体にも浸さないでください。

吸気口や吹出口に水を注がないでください。

研磨剤や腐食性のある可燃性の洗浄剤（漂白剤やアルコールなど）は、いかなる部品にも使用しないでください。

加湿器の清掃

クリーニング警告が点灯したとき、または 3 日に一度、加湿器を清掃してください。

加湿器の内側と外側を定期的に清掃し、ほこりが溜まらないようにしてください。

1 加湿器本体のほこりを、柔らかい乾いた布で拭き取ります。

2 本製品の電源を切り、コンセントからプラグを抜きます。

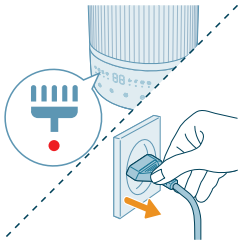

3 トップカバーを水タンクから取り外します。

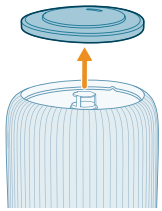

4 ベースから水タンクを取り外します。

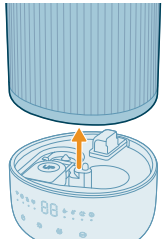

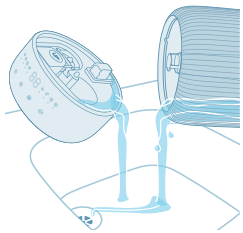

5 水タンクとベース内の水を捨てます。

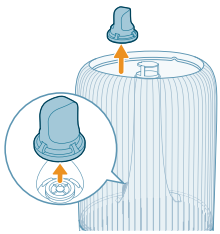

6 水タンクから水フィルターを取り外します。

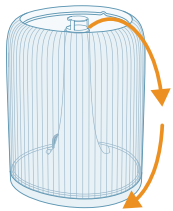

7 水タンクを逆さまにします。

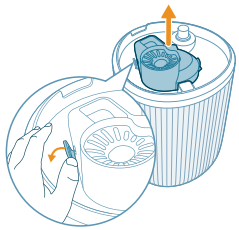

8 水タンク底部から防音部品（デフナー）を取り外します。

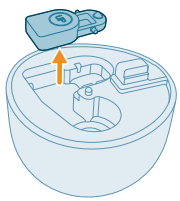

9 ベースチャンバーからフロートを取り外します。



10 水タンク、トップカバー、フロート、デフナー、水フィルターを水ですすぎます。

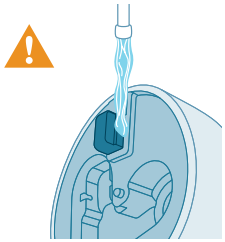

注：図に示すように、ベースを横向きにして水ですすがないでください。

11 ベースをきれいに拭き、乾かします。

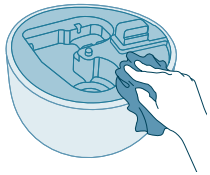

12 フロートをベースチャンバーに戻します。

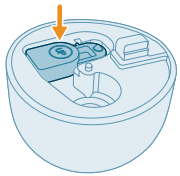

13 水タンクに水を入れます。



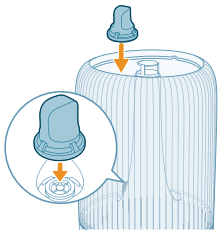

14 水フィルターを水タンクに戻します。

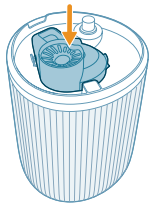

15 デフナーをベース底部に戻します。

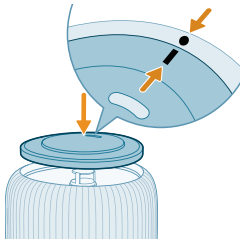

16 トップカバーを再度取り付けます。

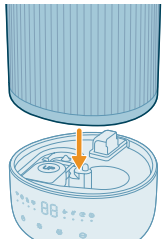

17 水タンクをベースに再度取り付けます。

18 電源プラグをコンセントに差し込みます。

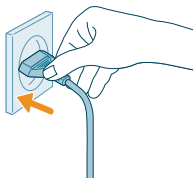

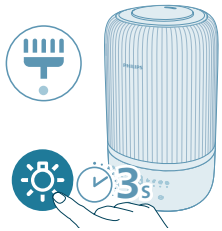

19 ライトボタンを 3 秒間押し続けて、クリーニング時間をリセットします。

アロマパッドとボックスの清掃

効果的なアロマセラピーのため、新しいエッセンシャルオイルブレンドを使用する前に、アロマパッドを必ず洗浄してください。エッセンシャルオイルブレンドを混ぜないでください。

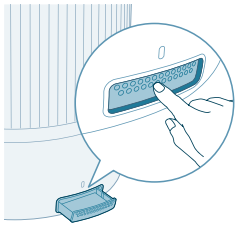

1 アロマボックスを押し込んでから引き出して取り外します。

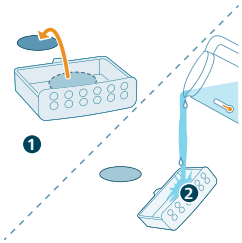

2 アロマパッドを取り外し、パッドとボックスをぬるま湯の流水ですすぎます。

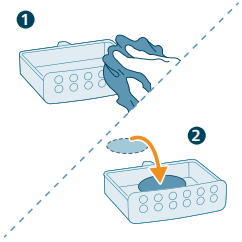

3 清潔な布で拭いて乾かし、パッドをアロマボックスに戻します。

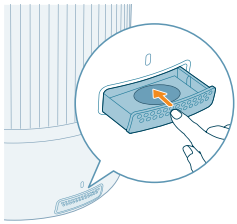

4 アロマボックスを加湿器に戻します。

注：アロマパッドやアロマボックスに液体クリーナーや洗剤を注がないでください。

アロマパッドの交換

アロマパッドが洗浄の繰り返しによって変形したり損傷した場合は、交換が必要になることがあります。加湿器の性能を維持するため、フィリップス純正のアロマパッドのみを使用してください。

保管

1 加湿器の電源を切り、コンセントからプラグを抜きます。
2 加湿器を清掃します（「**清掃とメンテナンス**」の章を参照）。
3 保管する前に、すべての部品を完全に乾かしてください。
4 加湿器は乾燥した涼しい場所に保管してください。

トラブルシューティング

ここでは、本製品で発生する可能性のある一般的な問題について説明します。これらの情報を参照しても問題を解決できない場合は、お住まいの国のフィリップスお客様サポートにお問い合わせください。

問題	解決策
加湿器が作動しません。	加湿器が電源に接続されていることを確認してください。
	水タンクに水が入っており、水タンクがベースに正しく設置されていることを確認してください。
画面にエラーコード「EC」が表示され、すべてのタッチボタンが反応しません。	製品の電源プラグを抜いて、水が不足していないか確認してください。水が不足していない場合は、フロートが正しく取り付けられているか確認してください。確認後、電源プラグを差し込み、加湿器を再びオンにしてください。それでもエラーコード「EC」が表示される場合は、お住まいの国のフィリップスお客様サポートにお問い合わせください。
ミストが吹出口からほとんど、またはまったく出ません。	加湿器のプラグをコンセントに差し込み、加湿器の電源を入れます。
	設定した目標湿度に到達している可能性があります。
	水タンクに十分な水が入っていること、また正しく設置されていることを確認してください。

	ベース内の水が多すぎる（ベースの MAX 表示を超えている）可能性があります。ベースチャンバーの水を捨ててください。水タンク（ベースチャンバーではありません）に水を補充し、タンクを正しくベースに設置してください。
	ベースの底部が塞がれていないことを確認してください。加湿器は、カーペットなどベースを塞ぐ可能性のある場所に置かないでください。
	ノズルが詰まっていないことを確認してください。
	ミストチューブが詰まっていないか、または塞がっていないことを確認してください。
	加湿器が平らな面に設置されていることを確認してください。
	水温が低すぎる可能性があります。ミスト量を最高に設定し、しばらく運転した後、希望の設定に調整してください。
湿度が変化しません。	部屋の通気が良すぎる可能性があります。ドアや窓を閉めてください。
	部屋が広すぎます。この加湿器の適用床面積は 34 m^2 以下です。
	ミスト量をより高い設定にしてください。
	乾燥した環境では、壁や家具など周囲の物が湿気を吸収するため、加湿に時間がかかる場合があります。
	加湿器を清掃してください（「清掃とメンテナンス」の章を参照）。
部屋が乾燥しているのに加湿器が停止します。	水タンクが空です。水を補充してください。
	自動モードでは、製品周辺の湿度が目標湿度に達すると運転を停止し、湿度が目標値を下回ると、自動的に再開します。
	加湿器周辺の湿度が高すぎる場合、カビなどの真菌が発生する可能性があるため、加湿器は運転を停止します。
設定した目標湿度に達しているのに加湿が続きます。	表示される湿度レベルは、製品周辺の湿度を示しています。ミストが部屋全体に均一に行き渡るまでには時間がかかります。加湿効率を高めるため、製品は数分間加湿を継続します。そのため、表示される湿度レベルが、設定した目標湿度より高くなる場合があります。
加湿器の周囲に白い付着物が見られます。	白い付着物は「スケール」（水垢）と呼ばれ、水に含まれるミネラル成分によって発生します。
	水垢の付着やミネラル成分の空気中への拡散を防ぐため、精製水、蒸留水、またはミネラル分の少ない水を使用してください。
	加湿器を水垢から保護し、周囲に白い残留物が付着するのを防ぐために、アンチカルキカートリッジ（FY5133）の使用をお勧めします。必要に応じて交換する必要があります。

加湿器の周囲が濡れすぎます。	湿度が高すぎる可能性があります。ミスト量をより低い設定にしてください。
加湿器から異臭がします。	初回使用時から数回は、使用時にプラスチックの匂いがすることがあります。 これは正常な現象で、異臭は数日以内に完全に消えます。
	加湿器を清掃してください（「清掃とメンテナンス」の章を参照）。
アロマ機能がうまく動作しません（香りが弱すぎる、または強すぎる）。	エッセンシャルオイルは適量（2〜3 滴）を使用してください。
	エッセンシャルオイルの種類によって、感じられる香りの強さは異なる場合があります。
	香りが部屋全体に広がるまでには少し時間がかかります。
水タンクが水漏れしています。	加湿器に水を入れすぎていないことを確認してください。
	清掃後や水の補充のために水タンクを取り外した後は、毎回、加湿器が正しく組み立て／接続されていることを確認してください。
	水タンクが正しく設置されていることを確認してください。それでも問題が発生する場合は、お住まいの国のフィリップスお客様サポートにお問い合わせください。
加湿器を長期間使用しない場合の保管および再使用方法を教えてください。	加湿器を長期間使用しないと、細菌やカビが繁殖する可能性があります。保管および再使用する場合は、次の手順に従ってください。
	保管する前に、水タンクとベースを十分に清掃します。
加湿器内部でカビが生えます。	水タンクとベースは定期的に清掃してください。
Wi-Fi セットアップが成功しません。	スマートフォンが 5 GHz Wi-Fi ネットワークや公衆 Wi-Fi ではなく、2.4 GHz（ホーム）Wi-Fi ネットワークに接続されていることを確認してください。ペアリングを成功させるには、ペアリングを開始する前にモバイルデータ通信をオフにすることをお勧めします。
	次の権限が有効になっていることを確認してください：スマートフォンの「位置情報」、「ストレージ」、「Bluetooth」、「ローカルネットワーク」。Wi-Fi セットアップの完了後は、必要に応じて権限設定を変更できます。
	正しい Wi-Fi パスワードを入力していることを確認してください。パスワードは大文字と小文字が区別され、最大 63 文字入力できます。特殊記号は使用できません。
	ホーム Wi-Fi のネットワーク名が正しいことを確認してください。ネットワーク名では大文字と小文字が区別されます。
	スマートフォンで VPN を使用している場合は、ペアリング開始前に VPN をオフにしてください。

	ルーターにペアリングをブロックするホワイトリストが設定されている場合は、接続が成功するように、ホワイトリストを無効にしてください。
	ルーターから、加湿器およびスマートフォンの距離が 10 m 以内であることを確認してください。
	アプリが最新バージョンに更新されていることを確認してください。
	強い Wi-Fi 接続を維持するため、加湿器を他の電子機器、強い光源、信号ステーションなど、干渉の可能性があるものの近くに置かないでください。接続に問題がある場合は、加湿器をこれらから離して Wi-Fi ネットワークに再接続してみてください。
	最新のさまざまなトラブルシューティングのヒントについては、アプリのヘルプセクションを参照してください。

保証とサポート

Claude Debussylaan 88, Amsterdam, NL に登録されている Versuni Netherlands B.V. は、本製品に対して購入日（または配達日が遅い場合は配達日）から 2 年間の保証を提供します。本保証は、不適切な使用または不十分な保守・メンテナンスに起因する欠陥については適用されません。当社の保証は、法律に基づく消費者としてのお客様の権利に影響を与えるものではありません。詳細情報、予備の部品、保証の申請については、当社 Web サイト **home.id/warranty**をご覧ください。

部品またはアクセサリの注文

部品を交換する必要がある場合、または部品を追加で購入する場合は、当社代理店にお問い合わせいただくか、**www.philips.com/support** をご覧ください。

部品の入手に問題がある場合は、お住まいの国のフィリップスお客様サポートにお問い合わせください。

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2026 © Versuni Holding B.V.

www.home.id